


# THE DOORMAN TWO WAY TALKING DOORBELL INSTRUCTION MANUAL

## BATTERY OPERATION

OPERATED BY TWO PIECES 'AA' 1.5V BATTERY.

## TO CHANGE THE BATTERY

1. OPEN THE BATTERY DOOR.
2. INSERT TWO PIECES 'AA' 1.5V FRESH BATTERY WITH CORRECT POLARITY INTO THE BATTERY COMPARTMENT (SEE FIG.1).
3. CLOSE THE BATTERY DOOR.

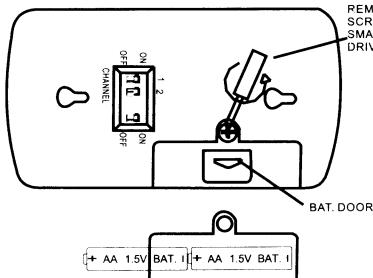


## ATTENTION

1. DO NOT MIX OLD AND NEW BATTERIES.
2. DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES

## DOOR BELL OPERATION

1. OUTSIDE YOUR ROOM, MOUNT THE DOOR BELL ON THE WALL WITH DOUBLE SIDE ADHESIVE TAPE OR USING THE HANGING HOLE ON THE BACK.
2. PRESS THE BELL KEY, THE INSIDE CHIME WILL SOUND "DING DONG" THREE TIME, THEN YOU PRESS THE TALKING KEY TO TALK. AND ASK THE GUEST TO PRESS THE TALKING KEY TO ANSWER YOU.
3. INSIDE YOUR ROOM AND MOUNT DOOR BELL RINGER WITH DOUBLE SIDE ADHESIVE TAPE OR USING THE HANGING HOLE ON THE BACK.

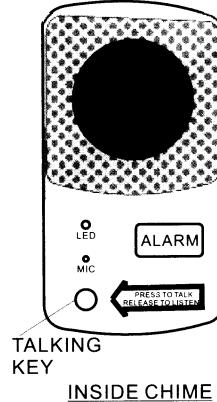


INSIDE CHIME

## IMPORTANT HINTS

### TO USE TALKING BUTTON

1. MOVE YOUR MOUTH AROUND 2 INCHES AWAY FROM THE 'MIC'.
2. PRESS AND HOLD THE 'TALKING' BUTTON TO TALK.
3. RELEASE THE 'TALKING' BUTTON TO TALK BUTTON TO LET YOU TO HEAR YOUR VISITOR TALKING
4. THE DOOR BELL HAS FOUR CHANNEL CAN BE USE. IF YOUR NEIGHBOR HAS DISTURB YOUR DOOR BELL, YOU CAN CHANGE THE CHANNEL TO OBTAIN BETTER EFFECT.

SWITCH 1	ON	ON	OFF	OFF
SWITCH 2	ON	OFF	ON	OFF
CHANNEL	1	2	3	4

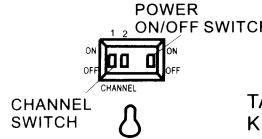

OUTSIDE CHIME

- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
- THE SUPPLY TERMINALS ARE TO BE SHORT-CIRCUITED.
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE USE

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

**NATIONAL EXPRESS  
PRODUCT MADE IN CHINA**