


TRANSMITTER

TRANSMITTER REMARK

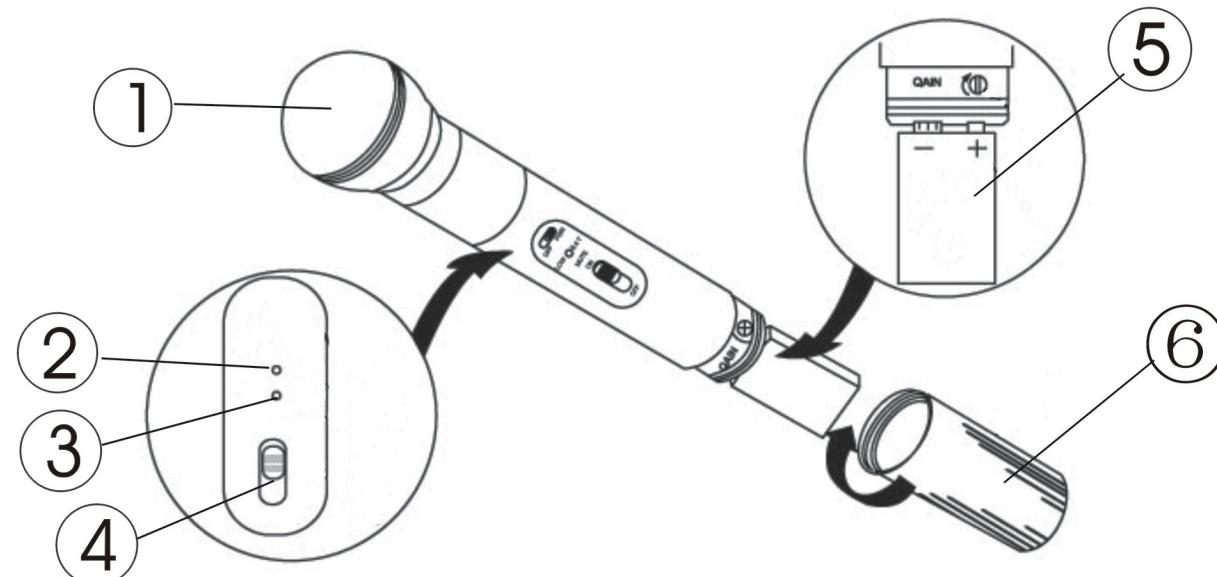

1. Microphone Head

When using you must be face to microphone head.

2. Power On Indicator

Glows when power is on.

3. Low Voltage Indicator

Glows when one hour or less of operating time remains. Replace battery when illuminated.

4. Power Switch

Recessed to prevent accidental turn-off.

5. 9V Alkaline Battery(shown installed)

Provides power to the microphone-transmitter.

6. Battery Cover

Unscrews for access to the 9V alkaline battery and gain control.

USING THE HANDHELD TRANSMITTER

- ①Open the handheld microphone battery covers put in two AA batteries in right polarity then close battery cover.
- ②Turn on the power switch of microphone and the power indicator will be light soon ,that the transmitter send the signal to the receiver ,and the RF indicator is light now.
- ③When the transmitter is not used turn the power off.
- ④When the low voltage indicator lighted.As the power of the battery is not enough.If it has affected using effect(The distance between the receiver and transmitter is not far enough or the voice is distortion) you had better replace a new battery.
- ⑤If the unit does not use for a long time.You must take out the battery.

PARAMETER

TRANSMITTER:

Frequency Stability:	Hand-held ±0.005%
R F Output Power:	≤30mW
Spurious Rejection:	> 40dB
Modulation Mode:	FM
Maximum Deviation Range:	±25KHz
Microphone Mode:	Dynamic
Pre-Emphasis:	50 μ S
Power Supply:	9V Battery
Current Consumption:	≤100mA
Dimensions:	Φ 45×220mm
Weight:	≈160g