

Circuit Description

Fuse: When input is shorted, it performs input shorted protect function.

T1、C1、C2: Work together with to performs EMI function.

D1、D2、D3、D4: Performs rectification function.

Q1、Q2、U1: Performs Oscillating function, let low frequency switch high frequency.

T3、T4、C7: When switching power, the T4 and C7 take place series resonance startup the lamp, then T3 restricting current.