

# **TWS Earbuds (ANC+ENC) 4 Mic**

## **User Manual**

### **Warning**

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.

To reduce the risk of injury :

Keep batteries out of reach of children.

Do not heat, open, or dispose of battery pack in fire.

Do not allow metal objects to touch the battery on the device.

Do not expose battery pack to excessive heat.

### **Product Specification**

- Product :TWS earphones
- solutions:JL7006
- version:V5.3+BR+EDR+BLE
- decoding: SBC, AAC
- working frequency:2.402GHz-2.480GHz
- Frequency response:20Hz-20kHz
- Speaker size: 10mm
- Effective distance: 15m
- Earphones battery capacity: 30mAh
- Charging case battery capacity:250mAh
- Playing time:about 5hours (one time charging)
- Talk time:5hours (one time charging)
- Earphone charging time: about 1.5 hours
- Charging times for the headset: about 3-4 times

The TWS Earphones With 4 MIC ANC(Experience listen music noise cancellation) + ENC(Ambient Noise Reduction & Conversation Boost)

### **Paring**

#### **1: Auto Pairing**

Opening the charging case and take earphones out, and then the earphones will automatically turn on and pair. Open up earbuds setting on your smart device and scan for earbuds model name .

# Operation

## 1: Power on/off .

1. Open the charging case and take out earphones, automatically turn on;  
Place earphones into charging case and close the case, automatically turn off.

## 2: Play/Pause music.

When listening to music. tap the left/right earphones twice to play or pause the music.

## 3: Volume -/+

When listening to music.

Tap left earphones once to decrease the volume

Tap right earphones once to increase the volume

## 4: Previous /Next Song

Tap left earphones three times to previous song.

Tap right earphones three times to next song.

## 5: Answer/Hang up

When there is an incoming call.

Tap left or right earphones once to answer the call.

Tap left or right earphones again to end the call.

## 5: Reject

When there is an incoming call.

Long press left or right earphones for 3 seconds to reject the call.

## 6:Voice assistant

Long press left earphones for 2 seconds to activate voice assistant.

## 6: Noise reduction mode

Long press right earphones for 2 seconds to Transparent mode, ANC ON, ANC OFF.

# Charging Function

Fully charge the case and earphones before using for the first time.

## 1: Charging the charging case

There is a Type-C cable included in the packaging. Connect it to the Type-C charging port and the other end into a USB powered source to charge your case.

## 2:Earphone charging

When battery is low, each 5s flash once for left and right side red light at the same time,you will listen to a warning sign or tone. It will turn off when the earphones completely out of battery.

(a) Place the earphones into the charging case.

(b) red light on the earphones turn on when charging has begun. The light will turn off when charging is complete.

## **FCC ID: WKA-191A**

### **FCC Warning statement:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

### **FCC Warning content:**

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the device and receiver.

--Connect the device into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment