

MECOOL

KS3 UHD OTT Soundbar



INSTRUCTION MANUAL

MODEL: KS3

Thank you for purchasing your new Element Soundbar.

We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main Unit




Instruction Manual



Mains Adapter



 HDMI 2.0 lead 1.5m



Remote Control

Product Overview

Main Unit

Front view



- 1. Tweeter
- 2. Mid-low

LED indicator show the current status list:

Power Button:	(Working and standby state:) White indicator stays on. (Power off:) Red indicator stays on.
HDMI(eARC) Button:	(Working status:) White indicator stays on.
SPDIF Button:	(Working status:) White indicator stays on.
Bluetooth Button:	(Working status:) White indicator stays on.
VOL+/- Button:	(Working status:) White indicator flashes briefly.

Vertical View



1. ⏻ Button

Switch the unit between On and Standby mode.

2. HDMI(eARC) Button

Select HDMI In/Out.

3. SPDIF Button

Input digital audio signal

4. Bluetooth Button


Select Bluetooth input

5. VOL - Button


Adjust the volume.

6. VOL + Button

Adjust the volume.

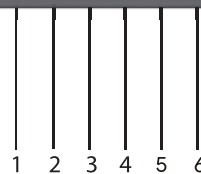

Rear View

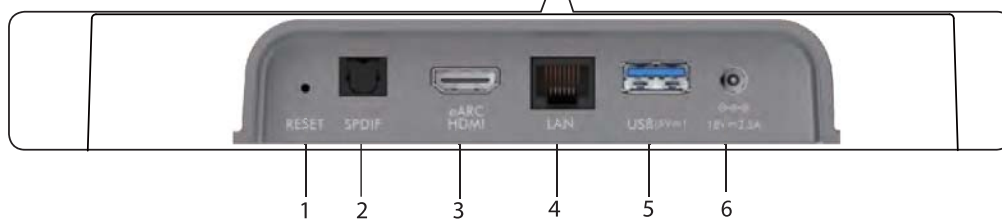

1. RESET input socket

2. SPDIF input socket


3. HDMI(eARC) input/output socket

4. LAN input socket

5. USB input socket



6. DC IN input socket

Remote Control

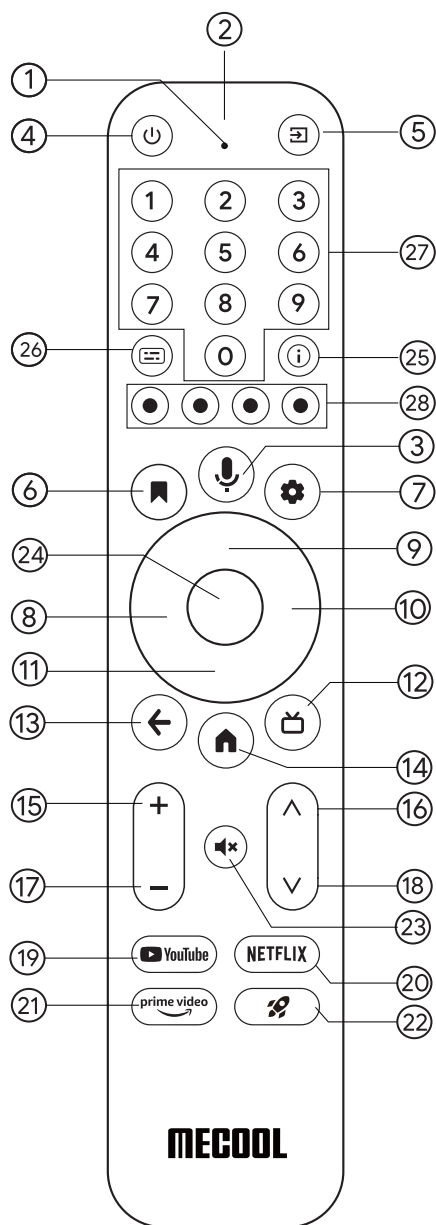

- ① Microphone
- ② Indicator Light
- ③ Voice Control
- ④ Power On / Off
- ⑤ TV Input Switch
- ⑥ Bookmark
- ⑦ Settings
- ⑧ Navigate to Left
- ⑨ Navigate to Up
- ⑩ Navigate to Right
- ⑪ Navigate to Down
- ⑫ Live TV
- ⑬ Return
- ⑭ Shortcut Key to Home Page
- ⑮ Volume Up
- ⑯ PAGE+
- ⑰ Volume Down
- ⑱ PAGE -
- ⑲ Quick one-click access to YouTube
- ⑳ Quick one-click access to NETFLIX
- ㉑ Quick one-click access to Prime Video
- ㉒ The default is audio source switching.
If the user uses the "APP Key Definition" app,
supporting users' custom app shortcuts
- ㉓ Mute
- ㉔ Press to Confirm
- ㉕ Info Bar
- ㉖ Subtitles
- ㉗ Press to input Arabic number
- ㉘ Composite function keys


Remote Control

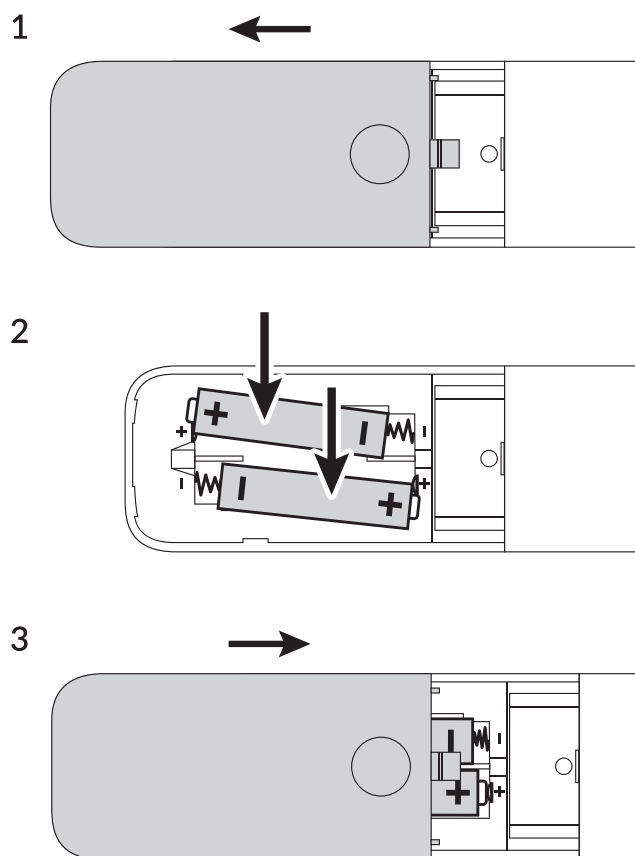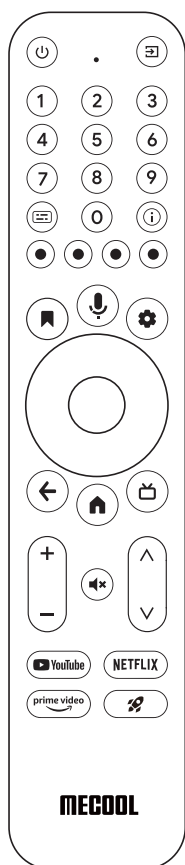

NOTE:

Before the begin, locate and insert the 2 AAA batteries into the MECOOL soundbar remote control. (This product is not equipped with AAA batteries, users should prepare by themselves).

Soundbar placement

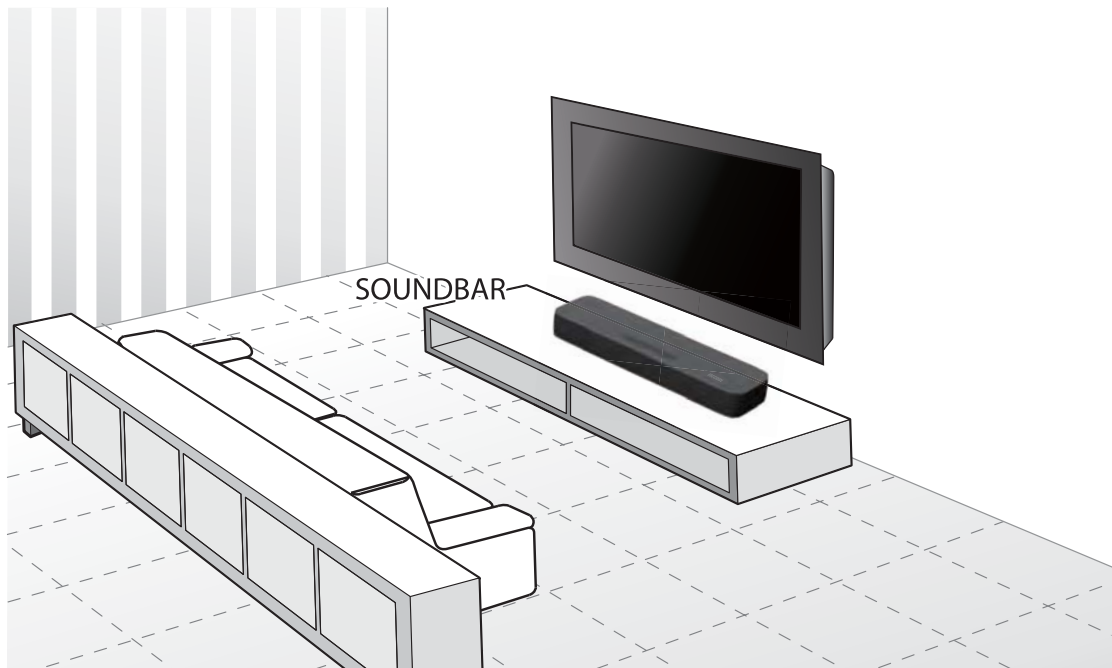

Connections

 


The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


General Operation




Keep router neat to soundbar.
Make sure Internet is available.




Press and hold  +  buttons for 5 seconds to pair the remote control.
Keep remote control near to soundbar.
The indicator light on the remote control will start flashing and enter pairing mode.

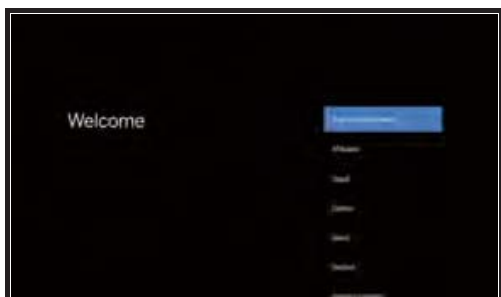

1.Select language.

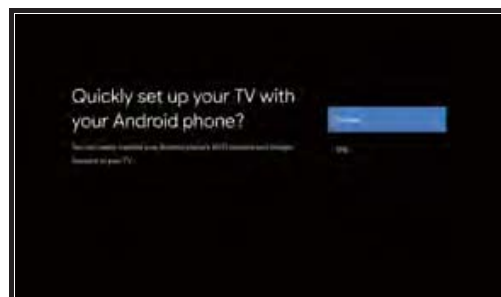

2.Quickly set up your TV with your Android™ phone.
Or skip the phone settings and set it up via the remote control.

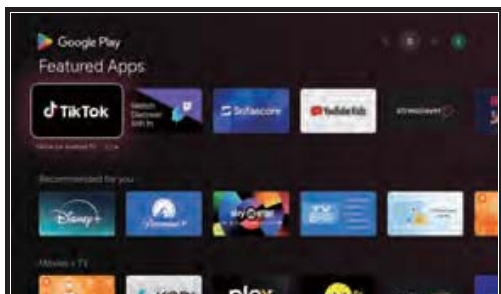

3.Get all the top apps and games on Google Play.



4.In Bluetooth mode,press the Google Assistant button on your remote to talk to Google.

Specifications

Model	KS3
Input voltage	18V 2.5A
Speaker Output Power	40W
THD	≤1% @1W
Core	Amlogic S905X4 Quad A55
Wi-Fi	802.11ac 2×2 + BT5
Weight	2060g
Weight	L490*W128*H60mm
Extension	1 Subwoofer & 2 Surround Speakers (The extension part is optional)

Features and specifications are subject to change without prior notice.



FAQs