

SAFETY INSTRUCTION SHEET**BATTERY SAFETY INFORMATION****CAUTION**

In Exceptional Circumstances Batteries May Leak Fluids That Can Cause A Chemical Burn, Injury, Or Ruin Your Product. To Avoid Battery Leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged [if designed to be removable].
- Rechargeable batteries are only to be charged under adult supervision [if designed to be removed].
- Do not mix alkaline, standard [carbon-zinc], or rechargeable [nickel-cadmium] batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.

**WARNING:**

WARNING : Do not dispose of this product in a fire. Batteries inside may explode or leak.

**WARNING:**

CHOKING HAZARD : Small parts. Not for children under 3 yrs.

MAGNET WARNING**WARNING:**

WARNING : This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields.

SMALL BALL PARTS WARNING**WARNING**

CHOKING HAZARD : Toy contains a small ball. Not for children under 3 yrs.

PROJECTILE WARNING**WARNING**

CHOKING HAZARD : Only use projectiles supplied with this toy. DO NOT fire at people or animals or at point blank range.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- [1] This device may not cause harmful interference, and
- [2] This device must accept any interference received, including interference that may cause undesired operation.



**ROBOT BIRTHDAY PARTIES****GALAXY FIELD TRIPS****ONLINE GAMES & MORE**

WWW.ROBOTGALAXY.COM

US Patent No. 561211-216, 561783, 561795-797

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

THE ROBOT FACTORY, LLC, 41 UNION SQUARE WEST, #808, NY, NY 10003

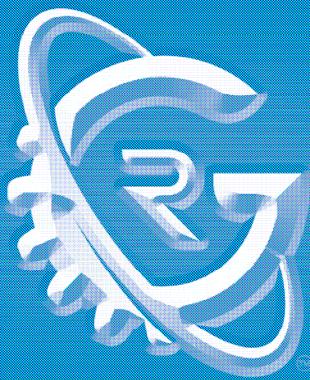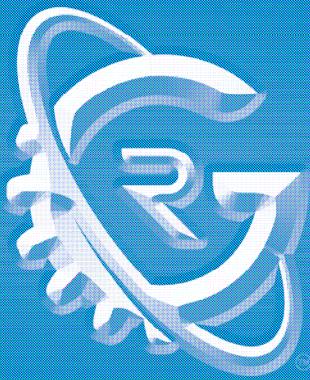

MISSION BRIEFING


TOP SECRET
INSTRUCTIONS

FOR AGES 5 YRS +

FUEL CELL

HOW TO USE YOUR FUEL CELL

A SWITCH B

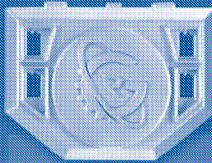

FUEL CELL

A SWITCH B

ACTIVATE LEFT FLEXOR AND EXTENDER	✓
ACTIVATE RIGHT FLEXOR AND EXTENDER	✓
ACTIVATE LEFT SIDE CONTINUOUSLY	✓*
ACTIVATE RIGHT SIDE CONTINUOUSLY	✓*
TOGGLE FOR CHARACTER MODE	✓

A B C



INCLUDES 3 "AAA" (R03) BATTERIES.
DISPOSE OF BATTERIES SAFELY.

ULTRA FUEL CELL

A B C

ACTIVATE NICKNAME	✓	✓	✓
ADJUST VOLUME DOWN (-)	✓	✓	✓
ADJUST VOLUME UP (+)	✓	✓	
ACTIVATE POWER SEQUENCE	✓	*	
ACTIVATE ROBOT VOICE		✓	
ACTIVATE LEFT FLEXOR AND EXTENDER	✓		
ACTIVATE RIGHT FLEXOR AND EXTENDER		✓	
TOGGLE FOR CHARACTER MODE	✓	✓	
ACTIVATE LEFT SIDE CONTINUOUSLY	✓	*	
ACTIVATE RIGHT SIDE CONTINUOUSLY		✓*	


* HOLD BUTTON FOR 2 SECONDS OR MORE

DEFINITION, DESCRIPTION INFORMATION AND INSTRUCTIONS ARE PROVIDED FOR SAFE
USE AND ASSEMBLY

SUPersonic FUEL CELL

HOW TO PLAY WITH YOUR ROBOT

A B C

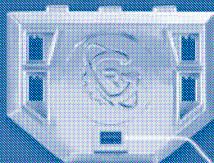

USB INTO COMPUTER

CONNECT TO ONLINE GALAXY

STEP #1 PLUG IN USB CABLE TO COMPUTER

STEP #2 GO TO ROBOTGALAXY.COM

STEP #3 CLICK "PLAY" AND ENTER THE ONLINE GALAXY

STEP #4 FOLLOW ON-SCREEN INSTRUCTIONS

FUEL CELL BUTTONS

A B C

ACTIVATE NICKNAME	✓	✓	✓
ADJUST VOLUME DOWN (-)	✓	✓	✓
ADJUST VOLUME UP (+)	✓	✓	
ACTIVATE POWER SEQUENCE		✓*	
ACTIVATE ROBOT VOICE		✓	
ACTIVATE LEFT FLEXOR AND EXTENDER	✓		
ACTIVATE RIGHT FLEXOR AND EXTENDER		✓	
TOGGLE FOR CHARACTER MODE	✓	✓	
ACTIVATE LEFT SIDE CONTINUOUSLY	✓	*	
ACTIVATE RIGHT SIDE CONTINUOUSLY		✓*	

* HOLD BUTTON FOR 2 SECONDS OR MORE

BATTERY SAFETY INFORMATION

CAUTION

In Exceptional Circumstances Batteries May Leak Fluids That Can Cause A Chemical Burn, Injury, Or Ruin Your Product. To Avoid Battery Leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged [if designed to be removable].
- Rechargeable batteries are only to be charged under adult supervision [if designed to be removed].
- Do not mix alkaline, standard [carbon-zinc], or rechargeable [nickel-cadmium] batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.

CAUTION

- Do not mix with old and new batteries
- Do not mix alkaline, standard [carbon-zinc], or rechargeable [Ni-Cd] batteries

WARNING

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Shielded cables must be used with this unit to ensure compliance with the Class FCC limits.

MAGNET WARNING

WARNING

WARNING : Do not dispose of this product in a fire. Batteries inside may explode or leak.

WARNING

WARNING : This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields.

SMALL BALL PARTS WARNING

WARNING

CHOKING HAZARD : Toy contains a small ball. Not for children under 3 yrs.

PROJECTILE WARNING

WARNING

CHOKING HAZARD : Only use projectiles supplied with this toy. DO NOT fire at people or animals or at point blank range.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- [1] This device may not cause harmful interference, and
- [2] This device must accept any interference received, including interference that may cause undesired operation.