

User Manual

Model No.: TCF500-12

Transmitter Model No.: TCF500-12 is wireless remoter control transmit device, it has twelve key with control signal, use the following:

- 1, Turn on transmitter shell behind the battery lid, put in a 12 voltage battery, attention to the positive and negative polarity, and to ensure good contact.
- 2, Pulled out all antennas will be used.
- 3, Select and press a transmit key, then the select control signal is transmitting, and the LED indicator is shined, the transmitter cease transmission after the key is released.
- 4, Please check the battery and replacement a new battery when the transmission distance too short and can not meet requirement.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.