

Book Port DT Quick Start

Quick Start explains – Book Port DT –

This document describes the main functions which are used in the "advanced mode".

Change to the advanced mode as follows. Turn off the player at first. Then turn on the player with the number 5 key being pressed until the player announces "advanced mode".

(To change to the simple mode, do the same until the player announces "simple mode".)

1. Connecting Book Port DT to mains outlet

Insert the small round plug on the end of AC adaptor into back of the unit (1). Ensure the supplied power cable is connected to the AC adaptor firmly before plugging mains plug into a mains outlet.

2. Power On/Off, setting sleep timer

Press and hold the Power On/Off button (2).

Press the sleep timer key (3) until you reach the desired setting.

3. Inserting playback media

Disc; Insert the cardige into the NLS cardige slot (4) at front of the unit until the disc will be automatically taken into the unit.

SD card; Insert the SD card into the SD card slot (5) on the left side of the unit.

USB memory; Insert the the NLS cardige slot (4) at front of the unit.

4. Removing playback media

NLS cardige; Pull out the NLS cardige from NLS cardige slot (4) at front of the unit.

USB memory; Same use NLS cardige slot (4).

SD card; Push the SD card inwards, then the card should pop out.

5. Playback and stop

To start playback, press the Play/stop key (8).


To stop playback, press the Play/stop key (8) again.

6. Adjusting volume, speed and tone

Volume; Press the Volume up key (9) to increase, press the Volume down key (10) to decrease.

Speed; Press the Speed up key (11) to increase, press the Speed down key (12) to decrease.

Tone; Press the Tone up key (13) to increase, press the Tone down key (14) to decrease.

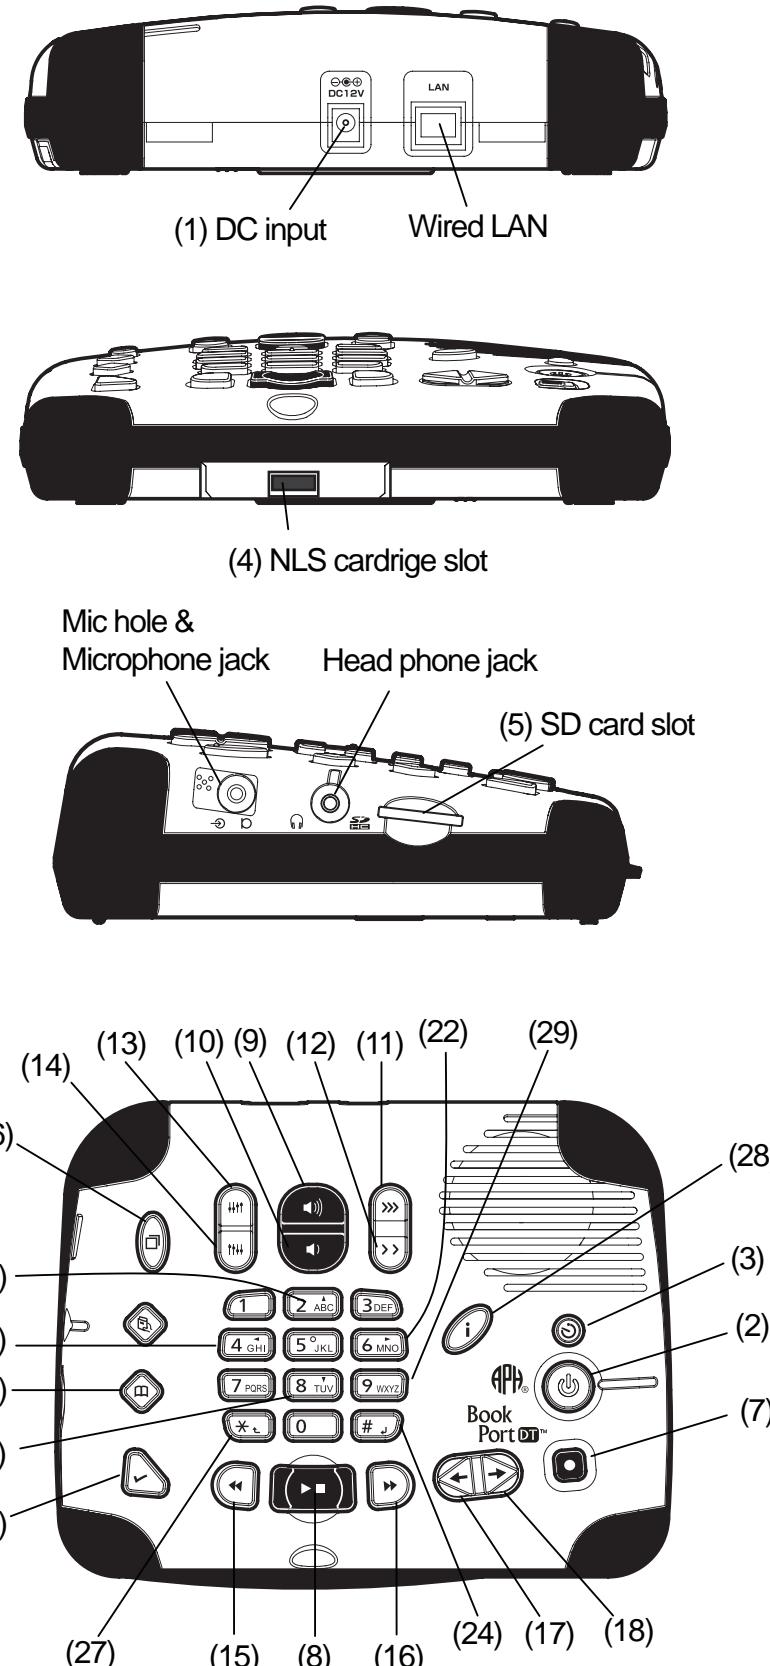

7. Rewinding / Fast forward

Press and hold the Rewind key (15) to fast rewind.

Press and hold the Fast Forward key (16) to fast forward.

8. Selecting media and title

Press and hold the Previous title key (17) or Next title key (18) repeatedly, or press the Previous title key (17) and Nexttitle key (18) at the same time repeatedly until you reach the desired media. Then press the Previous title key (17) or Next title key (18) to select the title.

9. Moving by Level

Press the Number 2 key (19) or 8 key (20) to select the navigation level, then press the Number 4 key (21) to move backward or the Number 6 key (22) to move forward within the required level.

10. Direct jump to page/heading

Page; Press the GoTo key (23) once and input the page number with the number key, then press the Enter key (24) to go to page. Heading; Press the GoTo key (23) twice and input the heading number with the number key, then press the Enter key (24) to go to heading.

11. Direct jump to bookmark / Adding bookmark

Press the Bookmark key (25) once and input the bookmark number with the number key, then press the Enter key (24) to go to bookmark.

Press the Bookmark key (25) twice at the desired position and input the bookmark number with the number key, then press the Enter key (24) to add bookmark.

12. Selecting menu

Press the Menu key (26), and press the Number 4 key (21) or 6 key (22) to select the menu, then press the Enter key (24) to confirm or the Cancel key (27) to cancel.

13. Getting book information

Press the Information key (28) or press and hold the Play/stop key (8) to get the book information.

14. Backing up title

Select the title you want to back up at first. Press the Number 9 key (29) to access the back up feature, and press the Number 4 key (21) or 6 key (22) to select the target media, then press the Enter key (24) to confirm. Plextalk will ask you that you wish to proceed or not. Press the Enter key (24) again to proceed or the Cancel key (27) to abort.

FCC Notice to User

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help