



Model Number MMM DSY08

Customer Service Number

(866)902-2798

FM Microphone

TO GET MOST USE AND ENJOYMENT FROM YOUR FM MICROPHONE PLEASE READ AND UNDERSTAND THE INSTRUCTIONS BEFORE USING.KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

BATTERY INSTALLATION

- 1.To remove the battery cover using Phillips head screwdriver,rotate the cover to open position and pull down.
- 2.Install two new batteries (AAA size) in accordance with diagram in the battery compartment;replace the battery cover.
- 3.Power ON is indicated by red light .The microphone can be tested for operation by pushing the ON/OFF button to the "LOW"or "HI"position.

TO OPERATE

- 1.Adults should assist the child each time that the Microphone is tuned to FM radio.
- 2.The Microphone can be tuned with manual analog tuner. The Microphone cannot be tuned with digital scan tuner.
- 3.Turn the radio ON and face the radio towards you.Adjust the radio volume to a LOW LEVEL.
- 4.Position the Microphone within 2 feet(.5 meters) and turn Microphone ON ,Create a signal from the Microphone,while at the same time tuning FM radio between 95MHz ~ 105MHz on the tuning dial.
- 5.You can create a signal from the Microphone in two ways. Either speak in a normal voice with the Microphone cover 2 inches (5cm) from your mouth,or press the applause and drumroll buttons.
- 6.After the FM radio is tuned to the Microphone,move about 5 feet (1.5 meters) from the radio.Face the radio and speak into the Microphone while an adult carefully adjusts the radio to the best reception. The best reception for the Microphone is within 10 feet (3 meters) of the FM radio.
- 7.If the radio does not display digital frequency indicators ,please slowly tune the FM radio between 95Mhz-105Mhz till the Microphone signal is clearly received.
- 8.If the sound is not clear,press the applause or drumroll button in order to stop the sound from the station . Speak into the microphone to hear your voice coming through the radio.

IMPORTANT NOTES:

- .1. This Microphone is for use with FM radio only and will not work on the AM band.
- .2. The tuning range of your FM Microphone is between 95-105 on the FM dial.
- .3. When using Microphone,hold the Microphone 2 inches (5cm) from your mouth and speak in a normal voice.
- .4. The reception of the Microphone may be affected by the environment Interference is caused by metal structures or the movement of people between the Microphone and the radio.The reception is also affected by the condition of the Microphone and /or radio batteries.
- .5. If the Microphone is not to be used for an extended period,remove the batteries from the set.
- .6. For best results,the manufacturer recommends the use of alkaline batteries.
- .7. To prevent damage,do not expose the set to rain or moisture.
- .8. Modifications not authorized by the manufacturer should not be made.
- .9. If there is a local station which broadcasts within the same frequency range,you may experience some interference when selecting the frequency, and possibly hear some radio broadcasting or music intermittently.The Microphone's the best frequency is between 99MHz to 101MHz.


THIS MICROPHONE HAS BEEN FACTORY TESTED.PLEASE READ AND FOLLOW THE INSTRUCTIONS FOR BEST PERFORMANCE AND ENJOYMENT.
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:(1)THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE,AND(2)THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
WARNING:CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTED:THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE,PURSUANT TO PART 15 OF THE FCC RULES.
THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION.THIS EQUIPMENT GENERATES,USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND,IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO TV TECHNICIAN FOR HELP.

BATTERY REPLACEMENT

OPEN BATTERY COMPARTMENT COVER.
THIS UNIT REQUIRES 2 "AAA" BATTERIES.
ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME.
REPLACE BATTERY COMPARTMENT COVER.
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT MIX ALKALINE,STANDARD(CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMUM)BATTERIES.
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
DO NOT DISPOSE OF BATTERIES IN FIRE,BATTERIES MAY EXPLODE OR LEAK.

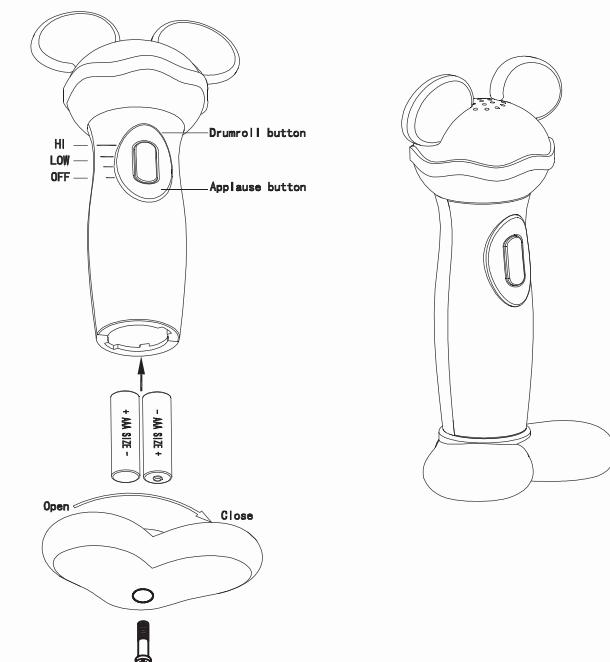

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

成品大小：107*70MM