

ELECA

WIRELESS GUITAR

FOR • POUR • PARA
PS2®

COMPATIBLE WITH PS2, GUITAR HERO™ AND GUITAR HERO™ 2



- State of the Art 2.4 GHz Technology.
- Powered by 4 x AA Alkaline Battery Cells.
- Guitar Belt Included.
- Includes Fret Buttons, Strum Bar and Whammy Bar to Simulate the Feel of a Real Electric Guitar.

TROUBLESHOOTING

If you turn the Guitar controller OFF and ON, or unplug the receiver, you may lose the connection between the Guitar controller and the receiver. If you have lost the connection, unplug the receiver and turn OFF the Guitar controller. Plug the receiver back into the PS2 console. Turn the Guitar controller ON.

GUITAR NOT WORKING	<ul style="list-style-type: none">• Make sure the power switch on the Guitar controller is ON.• Make sure the receiver is plugged in properly.• Move the Guitar controller closer to the console• Replace the depleted 4 x AA battery cells.• Check that the signal from the Guitar controller to the receiver is unobstructed.• Press the start button to make sure that the Guitar controller is not in sleep mode.• Keep the console and Guitar controller at least two feet away from large metal objects• Make sure the front of the console is positioned in the direction of the Guitar controller• Cordless phones, wireless LANs, microwave ovens and some cell phones can cause interference. Turn these products OFF or unplug and try reconnection the Guitar controller.
-------------------------------	---

**GUITAR
NOT WORKING**

- Make sure the power switch on the Guitar controller is ON.
- Make sure the receiver is plugged in properly.
- Move the Guitar controller closer to the console
- Replace the depleted 4 x AA battery cells.
- Check that the signal from the Guitar controller to the receiver is unobstructed.
- Press the start button to make sure that the Guitar controller is not in sleep mode.
- Keep the console and Guitar controller at least two feet away from large metal objects
- Make sure the front of the console is positioned in the direction of the Guitar controller
- Cordless phones, wireless LANs, microwave ovens and some cell phones can cause interference. Turn these products OFF or unplug and try reconnection the Guitar controller.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

FCC WARNING STATEMENT

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received,
including interference that may cause undesired operation.

LIFETIME WARRANTY

ELECA is dedicated to making high quality products for every consumer. We are so confident in the quality of our merchandise that we offer a lifetime warranty with this product. That means should you find any defects with the item you purchased, we will repair it or replace it. Please check our website for address.

www.eleca.com



WARNINGS

- **IF YOU HAVE ANY PHYSICAL CONDITIONS, CONSULT WITH A PHYSICIAN BEFORE USING THE GUITAR CONTROLLER.**
- Read, understand and follow all instructions, cautions and warnings listed in this manual and in the Sony PS2 Operations Manual. Failure to follow instructions could result in personal injury or damage to the PS2 console.
- The Guitar controller must be used with care to avoid injury. Intec will not be liable from injuries resulting from improper use of the controller.
- DO NOT exceed manufacturer's recommended specifications.
- DO NOT use additional attachments other than those recommended or provided by the manufacturer unless otherwise specified.
- DO NOT submerge in water or expose the Guitar controller to heavy moisture.
- DO NOT operate the Guitar controller in or near water. DO NOT operate the Guitar controller using wet hands.
- DO NOT use the Guitar controller in any other way than its intended use.
- DO NOT use the Guitar controller if damaged in any way.
- DO NOT disassemble any part of the Guitar controller.
- Keep away from areas where dirt or liquid can get into the Guitar controller.
- Keep away from direct sunlight and extreme temperatures.
- Store in areas away from dust and humidity.
- Excessive or improper use of the strum bar can cause it to break.
- Use a dry cloth to clean the Guitar controller, never use chemicals.
- DO NOT touch the controller receiver terminals or the controller port or allow metal parts to touch them. Doing so may damage the controller or the PS2 console.
- **THIS IS NOT A TOY. DO NOT allow small children to play with the Guitar controller unsupervised.**

Battery Safety

Incorrect use of batteries may result in battery leakage, overheating or explosion. When using batteries, be sure to follow these instructions:

- Make sure the positive (+) and negative (-) ends of the batteries are inserted in the correct directions.
- Keep batteries out of reach of children
- Do not mix old and new or different types of batteries. Use only AA type batteries.
- Remove the batteries when the product will not be used for an extended period of time.
- If the battery has leaked, be sure to carefully remove all fluid and dry residues with a paper towel before inserting new batteries. Take care to keep all leaked fluid from touching your skin or clothes. If fluid comes into contact with the skin, flush with water immediately.
- Dispose of batteries in accordance with local and national disposal regulations.

To Insert the Batteries into the Guitar controller:

1. Remove screw from the locking tab on the battery compartment cover.
2. Remove the battery compartment cover by pressing in the locking tab and lifting the cover up and off the unit.
3. Insert 4 x AA battery cells. Make sure that the batteries are inserted as indicated by the schematic inside the battery compartment to avoid potential damage.
4. Replace the battery compartment cover back into place on the Guitar controller and replace the screw back into the locking tab.

Connect the Wireless guitar

1. Make sure the PS2 system is OFF.
2. Insert the receiver into controller port #1 on the PS2 console. **Note: Always connect to controller port #1 for single player games.**
3. Turn ON the PS2 console. The receiver has a green and red LED located at the end of it. The red LED will illuminate indicating a proper connection has been made. The green LED will be illuminate and begin to flash indicating the receiver is searching for the Guitar controller.
4. Turn the power ON/OFF switch located on the bottom of the Guitar controller to the ON position. The LED indicator on the Guitar controller will flash red while it is searching for the receiver. Once the Guitar controller and receiver have successfully synchronized, the LED on the controller will turn OFF and the LED on the receiver will turn solid green.
5. The LED indicator on the Controller will start to flash when the battery level is low. Replace the batteries. Refer to "To Insert the Batteries into the Guitar Controller" for further instructions.

To Connect the Strap to the Guitar controller:

1. Attach each end of the Guitar belt to the 2 belt knobs located on the Guitar controller. Make sure the belt knobs pass through the slits at the ends of the belt.
2. Adjust the length of the strap accordingly.

