

TWN4 Secustos family

TWN4 Secustos SG30

USER MANUAL

ONLINE USER GUIDE



TABLE OF CONTENTS

1	INTRODUCTION.....	3
1.1	ABOUT THIS MANUAL.....	3
1.2	ELATEC SUPPORT.....	3
2	SAFETY INFORMATION.....	4
3	PRODUCT DESCRIPTION	7
3.1	INTENDED USE.....	7
3.2	PRODUCT FAMILY	7
3.3	CREDENTIAL-RELEVANT SPECIFICATIONS.....	8
3.4	FIRMWARE.....	8
3.5	LABELING.....	8
3.6	SCOPE OF DELIVERY	9
3.6.1	COMPONENTS.....	9
3.6.2	ACCESSORIES.....	9
4	INSTALLATION.....	10
4.1	GETTING STARTED	10
4.2	INSTALLATION SITE REQUIREMENTS	11
4.3	INSTALLATION OVERVIEW.....	11
4.4	ELECTRICAL CONNECTION.....	12
4.4.1	CONNECTOR ASSIGNMENT.....	12
4.4.2	CABLE INFORMATION.....	12
4.4.3	WIRING DIAGRAM	13
4.5	MOUNTING OPTIONS.....	14
4.5.1	INSTALLATION DIRECTLY ON THE WALL.....	14
4.5.2	INSTALLATION WITH FLUSH-MOUNTED BOX.....	16
5	SETTINGS	17
5.1	GENERAL SETTINGS.....	17
5.2	CONFIGURATION WITH SECUSTOS SECO APP	18
5.3	CONFIGURATION WITH USB CABLE	18
5.4	CONNECTION TO AN ACCESS CONTROLLER	18
5.4.1	LINE TOPOLOGY.....	19
5.4.2	STAR TOPOLOGY	19
6	COMPLIANCE STATEMENTS.....	21
6.1	GENERAL STATEMENTS.....	21

6.1.1	FCC.....	21
6.1.2	UNITED KINGDOM	21
6.2	TWN4 SECUSTOS SG30	21
6.2.1	EU.....	21
6.2.2	FCC.....	21
6.2.3	ISED / ISDE CANADA.....	22
6.2.4	UL 294.....	22
APPENDIX	23
A – RELEVANT DOCUMENTATION	23
B – TERMS AND ABBREVIATIONS	23
C – REVISION HISTORY	23

1 INTRODUCTION

1.1 ABOUT THIS MANUAL

This manual is intended for users and installers. It enables the safe and appropriate handling with, and installation of TWN4 Secustos readers and it gives a general overview, as well as important technical data and safety information about the product. Before installing the product, the users and installers should read and understand the content of this manual.

For the sake of better understanding and readability, this manual might contain exemplary pictures, drawings and other illustrations. Depending on your product configuration, these pictures might differ from the actual design of your product.

The original version of this manual has been written in English. Wherever the manual is available in another language, it is considered as a translation of the original document for information purposes only. In case of discrepancy, the original version in English will prevail.

1.2 ELATEC SUPPORT

In case of any technical questions or product malfunction, refer to the ELATEC website (www.elatec.com) or contact ELATEC technical support at support-rfid@elatec.com.

In case of questions regarding your product order, contact your Sales representative or ELATEC customer service at info-rfid@elatec.com.

2 SAFETY INFORMATION

Transport and storage

- Carefully observe the transport and storage conditions described on the product packaging or other relevant product documents (e.g. data sheet).

Unpacking and installation

- Before unpacking and installing the product, this manual and all relevant installation instructions must be read carefully and understood.

- The product might show sharp edges or corners and requires a particular attention during the unpacking and installation.

Unpack the product carefully and do not touch any sharp edges or corners, or any sensitive components on the product. If necessary, wear safety gloves.

- After unpacking the product, check that all components have been delivered according to your order and delivery note.

Contact ELATEC if your order is not complete.

- The following measures must be checked prior to any product installation:

- Make sure that the mounting location and tools used for the installation are appropriate and safe. In addition, make sure that the cables intended to be used for the installation are appropriate. Refer to Chapter "Installation" for more information.

- In case the product is installed outside, check if any further installation steps are required (e.g. sealing of cables or housing). Refer to Chapter "Installation" for more information.

- The product is an electrical device made of sensitive materials (e.g. glass housing). Check all product components and accessories for any damage.

A damaged product or component may not be used for the installation.

- **Life-threatening hazard in the event of fire**

A faulty or improper installation of the product might cause a fire and lead to death or severe injuries. Check that the mounting location is equipped with appropriate safety installations and devices, like a smoke alarm or fire extinguisher.

- **Life-threatening hazard due to electrical shock**

Make sure that there is no voltage on the wires before starting with the electrical wiring of the product and check that power is turned off by testing the power supply of each wire.

The product may be supplied with power only after the installation has been completed.

- Make sure that the product is installed in accordance with local electrical standards and regulations and observe general safety measures.

- Risk of property damage due to transient overvoltage (surges)

Transient overvoltage implies short-duration voltage peaks that might result in system breakdown or significant damage of electrical installations and devices.

ELATEC recommends the installation of appropriate Surge Protection Devices (SPD) by qualified and authorized personnel.

- ELATEC also recommends the installers to follow general ESD protective measures during the installation of the product.

Please also refer to the safety information in Chapter "Installation".

- The product must be installed in conformity with applicable local regulations.
Check if a minimum installation height is mandatory and observe all regulations applicable in the region in which the product is installed.
- The product is equipped with an IP65-protected housing suitable for both indoor and outdoor installation. When installing the product outside, the mounting frame must always be used to comply with the IP65 protection class.
In case the reader is installed outside, always use the Secustos mounting frame.
- To comply with the applicable RF exposure requirements, the product should be installed and operated with a minimum distance of 20 cm to any user's/nearby person's body at all times. The product is exempt from SAR at touch position. Refer to Chapter "Compliance statements" for further information about RF exposure compliance.
- In case the product is equipped with a cable, do not twist or pull the cable excessively.
- The product is an electronic device whose installation requires specific skills and expertise.
The installation of the product should be done by trained and qualified personnel only.

Handling



Warning

Powering the product with more than one power source at the same time or using the product as a power supply for other devices may lead to injuries or property damage.

- Do not power the product via more than one power source at the same time.
- Do not use the product as a power supply for other devices.

- Depending on your product configuration, the product might be equipped with one or more light-emitting diodes (LED).
Avoid direct eye contact with the blinking or steady light of the light-emitting diodes.
- The product has been designed for use under specific conditions, e.g. in a specific temperature range (refer to the product data sheet).
Any use of the product under different conditions might damage the product or alter its reading performance.
- The use of other RFID devices in direct vicinity to the product, or in combination with the product might damage the product or alter its reading performance. In case of doubts, contact ELATEC for more information.
- The user is liable for the use of spare parts or accessories other than the ones sold or recommended by ELATEC.
ELATEC excludes any liability for damages or injuries resulting from the use of spare parts or accessories other than the ones sold or recommended by ELATEC.
- In case the product is equipped with a cable, the cable may not be replaced or extended.
ELATEC excludes any liability for damages or injuries resulting from a use of the product with a cable extension or a replaced cable.
- Like most electronic devices, RFID systems generate electromagnetic waves that can vary in amplitude and frequency. It is generally known and accepted that some RFID devices might potentially interfere with personal medical devices, like pacemakers or hearing aids.

The access control readers of the TWN4 Secustos family fulfill general radio and EMC requirements. However, users with a pacemaker or any other medical device should use TWN4 Secustos readers carefully and refer to the information given by the manufacturer of their medical devices before using the readers.

Maintenance and cleaning

- Any repair or maintenance work should be done by trained and qualified personnel only. **Do not allow any repair or maintenance work on the product by an unqualified or unauthorized third party.**
- **Life-threatening hazard due to electrical shock**
Before any repair or maintenance work, the power must be turned off.
- Check the installation and electrical connection of the product in regular intervals for any signs of damage or wear. Should any damage or wear be noticed, contact ELATEC or a trained and qualified personnel for repair or maintenance work.
- The product does not need any special cleaning. However, the housing may be carefully cleaned up with a soft, dry cloth and a non-aggressive or non-halogenated cleaning agent on the outer surface only.
Make sure that the used cloth and cleaning agent do not damage the product or its components (e.g. label(s)).

Disposal

- The product must be disposed of in accordance with applicable local regulations.

Product modifications

- The product has been designed, manufactured and certified as defined by ELATEC. **Any product modification without prior written approval from ELATEC is prohibited and considered improper use of the product. Unauthorized product modifications may also result in the loss of product certifications.**

If you are unsure about any part of the safety information above, contact ELATEC support.

Any failure to comply with the safety information given in this document is considered improper use. ELATEC excludes any liability in case of improper use or faulty product installation.

3 PRODUCT DESCRIPTION

3.1 INTENDED USE

TWN4 Secustos is a product family of access control readers based on RFID technology that allows users to read RFID media in the 125 kHz (LF) and 13.56 MHz (HF) frequency bands. The readers also support the BLE (2.4 GHz) technology and they have been designed for physical access control applications. The readers are for both indoor and outdoor use in environmental conditions according to the respective product data sheets and installation instructions related to the products. The readers are for professional use only.

Any use other than the intended use described in this section, as well as any failure to comply with the safety information given in this document, is considered improper use. ELATEC excludes any liability in case of improper use or faulty product installation.

3.2 PRODUCT FAMILY

The TWN4 Secustos family contains the following reader models:



Fig. 1 - TWN4 Secustos SG30

Frequencies	125 kHz (LF) / 13.56 MHz (HF) / 2.4 GHz (BLE)
Antennas	Integrated RFID LF antenna Outer diameter: max. 17 mm / 0.67 inch Number of turns: typ. 135, max. 140 Integrated RFID HF antenna Outer dimensions: 65 x 41 mm / 2.56 x 1.61 inch Number of turns: 3 Bluetooth Low Energy Integrated BLE module
Housing	Metal frame and glass front, potted housing Available in 2 colors (silver or gray)
Dimensions (L x W x H)	Reader frame only (mounted): approx. 123.00 x 86.00 x 8.25 mm / 4.84 x 3.38 x 0.32 inch Rear connector height: approx. 8.00 mm / 0.31 inch Reader with rear connector: approx. 123.00 x 86.00 x 15.90 mm / 4.84 x 3.38 x 0.62 inch Optional mounting frame: approx. 123.00 x 86.00 x 9.75 mm / 4.84 x 3.38 x 0.38 inch

Power	Connector X1: 6.0 V – 28 V ¹ ES1/PS2 classified power source according to IEC 62368-1, short-circuit current < 3.5 A
Current consumption	Max. 300 mA @ 6.0 V
Temperature range	Operating: -20 °C up to +60 °C / -4 °F up to +140 °F Storage: -20 °C up to +70 °C / -4 °F up to +158 °F
Weight	Reader, potted, with connectors and mounting plate: approx. 150 g / 5.29 oz
Relative Humidity	Mounted front: IP65 protected housing Transport/Storage: 5% to 95% non-condensing
Reader performance levels ²	Destructive attack: Level I Line security: Level I Endurance: Level IV Standby power: Level I

3.3 CREDENTIAL-RELEVANT SPECIFICATIONS

Electronic credential transmission technology	RFID / BLE 125 kHz: TWN4 LF module UL V1.0.0.0, (ASK, PSK, FSK) 13.56 MHz and BLE (common chip): HF frontend UL V1.0.0.0, ISO 14443A, ISO 14443B, BLE 4.2
Wireless electronic device OS revision	TWN4 Firmware UL V1.0.0.2
Wireless electronic credential device application software	TWN4 OSDP App UL V1.0.0.0
User verification	Access for administration and maintenance is only possible directly via the host software
Credential identification	The information from cards is sent to the access control system according to end user need. The reader has the ability to identify credentials and pass the information to the access control system if required.

3.4 FIRMWARE

Your product is delivered ex-works with a specific firmware version. Refer to the label attached to the product to find the firmware version installed ex-works.

3.5 LABELING

Your product is delivered ex-works with a label that contains important product information (e.g. firmware, serial no.). This label may not be removed or damaged. In case of a label wear-out, contact ELATEC.

¹ For installation in a UL-certified environment, please observe the input voltage of 10 V – 28 V.

² As per UL 294 8th Ed.

3.6 SCOPE OF DELIVERY

3.6.1 COMPONENTS

The TWN4 Secustos readers are delivered as a kit with the following components:

Reader	All TWN4 Secustos readers are equipped ex-works with one 4-pin (X1) and one 6-pin (X2) connector. Depending on the product configuration, the readers are available with or without keypad, in a silver or gray housing.
Mounting plate	The mounting plate delivered with the kit enables to fix the TWN4 Secustos reader on a wall. It must be fixed directly to the wall or on a flush-mounted box with 2 to 4 screws ³ .
Fixing screw	Countersunk screw with cross recess, M3x6 The fixing screw delivered with the kit is intended to fix the TWN4 Secustos reader on the mounting plate. Due to its small size and inconspicuousness, particular attention should be given to the screw when unpacking the kit, as the screw might easily fall down and get lost.
Instructions for use	The instructions for use delivered with the product contain important instructions and safety information related to the product and must be read carefully before installing and using the product.

3.6.2 ACCESSORIES

Depending on your product configuration, the product can be delivered with the following accessories:

Mounting frame⁴	Additional frame required for on-wall installation. The mounting frame is delivered with 4 fixing screws (ISO 7046-1 stainless steel A2 M3x6) and 2 rubber seals on each side of the frame. When installing the reader outside, the mounting frame must always be used to comply with the IP65 protection class.
USB cable	Product-specific USB cable intended for maintenance and configuration purposes only. Particular attention should be given when plugging the USB cable in and out of a TWN4 Secustos reader.

³ Not part of the delivery (screws are generally available on site)

⁴ To comply with the UL certification requirements, the mounting frame **must** always be used when installing the reader outside. Any failure to meet this requirement will void the UL certification of the product.

4 INSTALLATION

4.1 GETTING STARTED

Before starting with the installation of a TWN4 Secustos reader, the following measures must be checked:

- Make sure you have read and understood all safety information given in Chapter "Safety information".
- Make sure that there is no voltage on the wires and check that power is turned off by testing the power supply of each wire.
- Make sure that all tools and components required for the installation are available and appropriate.
- Make sure that the installation site is appropriate for the installation of the reader. In particular, check that the temperature of the installation site is within the operating temperature range given in the TWN4 Secustos technical documentation and make sure that the wall used for the installation is appropriate. In some cases, the wall material might not be suitable for a safe and durable installation, or it might require specific mounting screws (e.g. drywall). Furthermore, some materials might interfere with the RFID antennas of the reader and reduce its reading performance (e.g. metallic surfaces). Contact ELATEC for more information.
- The reader should be installed at an appropriate and service-friendly installation height. ELATEC recommends an installation height of 110 cm from the ground for a standard installation. However, in some cases (e.g. wheelchair access, local regulations, etc.), the actual installation height on site might differ from the recommended height. Please also note the maximum wall mounting height of 200 cm from the ground.
- In case other RFID devices are already installed on site, or if several TWN4 Secustos readers must be installed on the same site, observe a minimum distance of 30 cm between all readers and devices in order to achieve the best reading performance for each reader. Should two readers be installed in the same location (e.g. on each side of a wall, next to a door), the wall thickness should also be at least 30 cm to prevent a loss of performance of both readers.

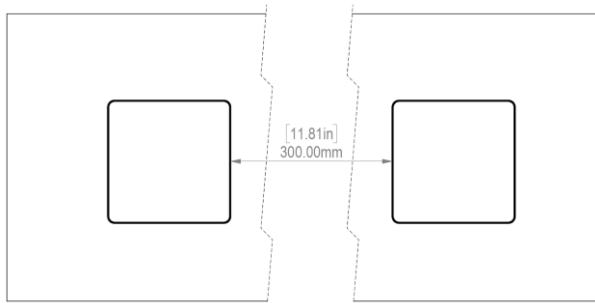


Fig. 2 - Example 1:
installation of 2 readers next to each other


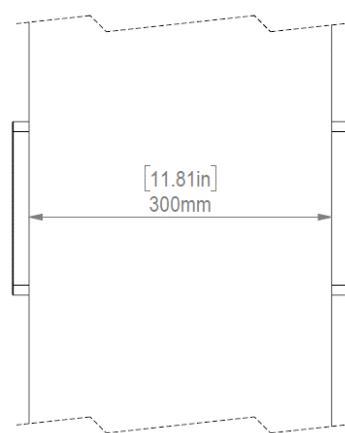


Fig. 3 - Example 2:
installation of 2 readers on each side of a wall

- The protective film on the housing front should only be removed after complete installation of the reader.

- When installing the reader, do not cover the top left corner of the RFID module (i.e. top right corner when the reader is fixed on the wall), as it would disable both proximity and ambient light sensors.

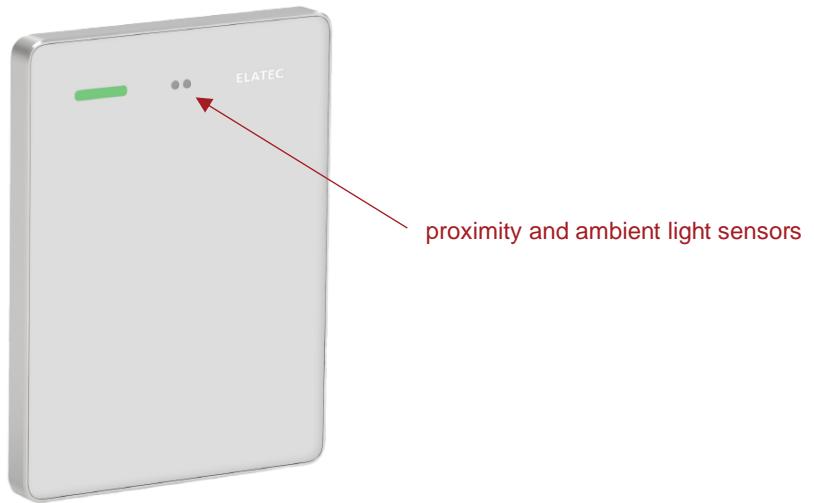

4.2 INSTALLATION SITE REQUIREMENTS

TWN4 Secustos readers can be installed in any locations that meet the requirements listed in this manual and in the respective data sheets. For instance, the installation site must comply with the requirements below:

- Relative humidity: 5% to 95%, non-condensing
- Ambient temperature within the operating temperature range of the reader:
-20 °C up to +60 °C / -4 °F up to +140 °F
- Installation height (from the ground) < 200 cm (110 cm recommended)

Any location that does not meet these requirements is not appropriate for the installation of a TWN4 Secustos reader.

4.3 INSTALLATION OVERVIEW

The illustration below gives an overview of an exemplary installation of a TWN4 Secustos reader:

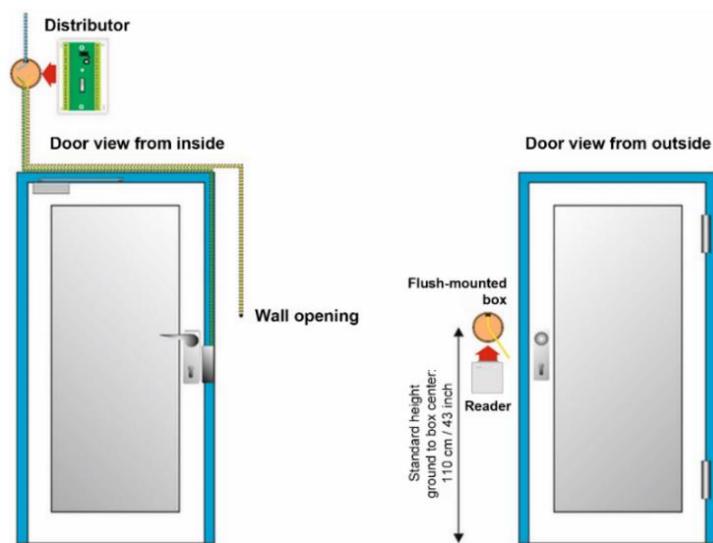


Fig. 4

4.4 ELECTRICAL CONNECTION

4.4.1 CONNECTOR ASSIGNMENT

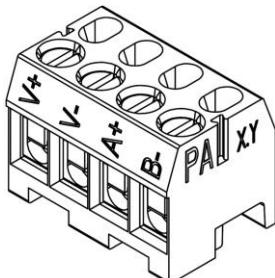


Fig. 5 - 4-pin connector (X1)

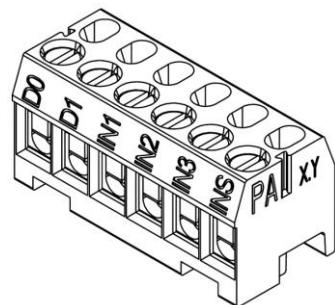


Fig. 6 - 6-pin connector (X2)

Power supply

V+ Input voltage 6 – 28 V⁵

V- Ground

Data transfer⁶

A+ RS-485, cable length: max. 1000 m

B- RS-485, cable length: max. 1000 m

D0 Wiegand D0, cable length: max 200 m

D1 Wiegand D1, cable length: max 200 m

IN1 Digital input 1, cable length: max 200 m

IN2 Digital input 2, cable length: max 200 m

IN3 Digital input 3, cable length: max 200 m

INS Digital input S (for external Sabotage switch), optional if sabotage button is not available on the reader, cable length: max 200 m

Cable routing requirements: twisted pair cabling (D0/GND, D1/GND).

Maintenance / Configuration

USB 4-pin USB connector, 1.25 mm pitch (for maintenance and configuration purposes only)

4.4.2 CABLE INFORMATION

Typical installation cables are JY(ST)Y 4x2x0.6 or JY(ST)Y 4x2x0.8.

Alternatively, any other appropriate cables that meet the prerequisites of RS-485 installations and wirings can be used. In addition, the installation cable used to connect the controller must contain a cable shield and/or a drain wire with PE connection. The cable shield/drain wire may not be connected to the reader, but only to the controller.

⁵ For installation in a UL-certified environment, please observe the input voltage of 10 – 28 V.

⁶ For installation in a UL-certified environment, please observe the max. cable length of 30 m. In addition, the minimum permissible wire size to be used shall not be less than 23 AWG (0.28 mm²).

4.4.3 WIRING DIAGRAM

The diagrams below illustrate a typical wiring installation of the reader(s) in different configurations:

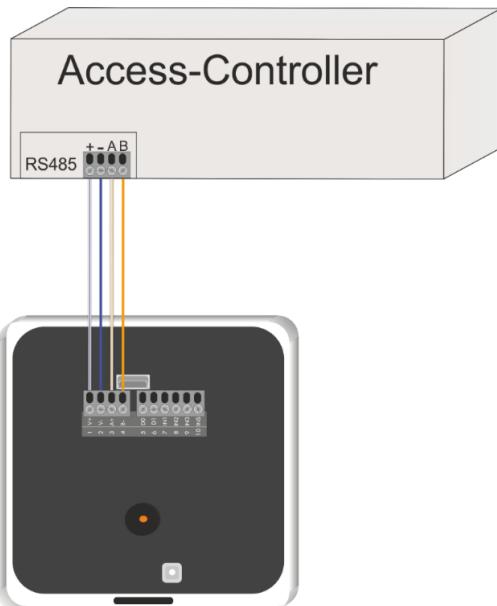


Fig. 7

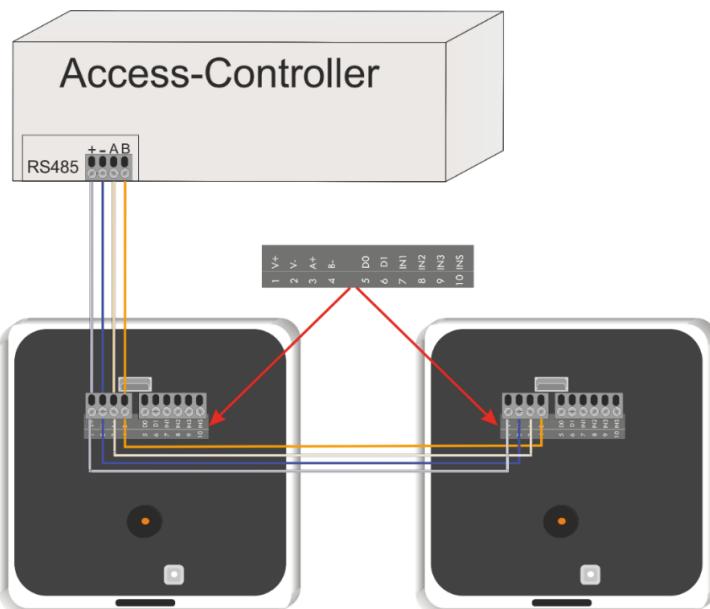


Fig. 8



The following configuration is technically feasible. However, it has not been tested in accordance with UL 294. Thus, it is not part of the UL certification granted to the readers.

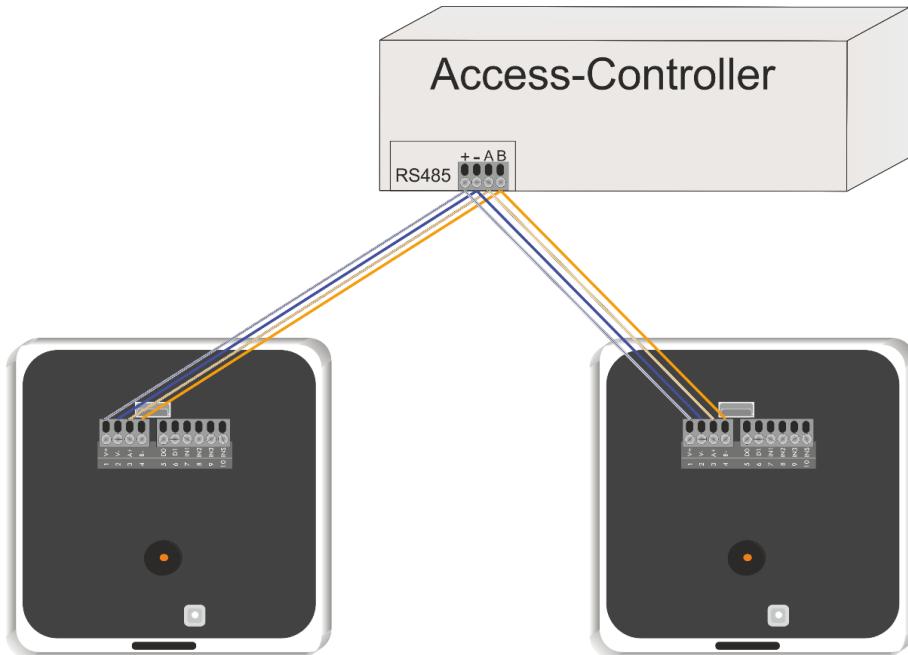


Fig. 9

4.5 MOUNTING OPTIONS




For installation in a UL-certified environment:


To comply with the UL certification requirements, the mounting frame **must** always be used when installing the reader outside. Any failure to meet this requirement will void the UL certification of the product.

4.5.1 INSTALLATION DIRECTLY ON THE WALL


1. Fix the mounting frame to the wall as described below:

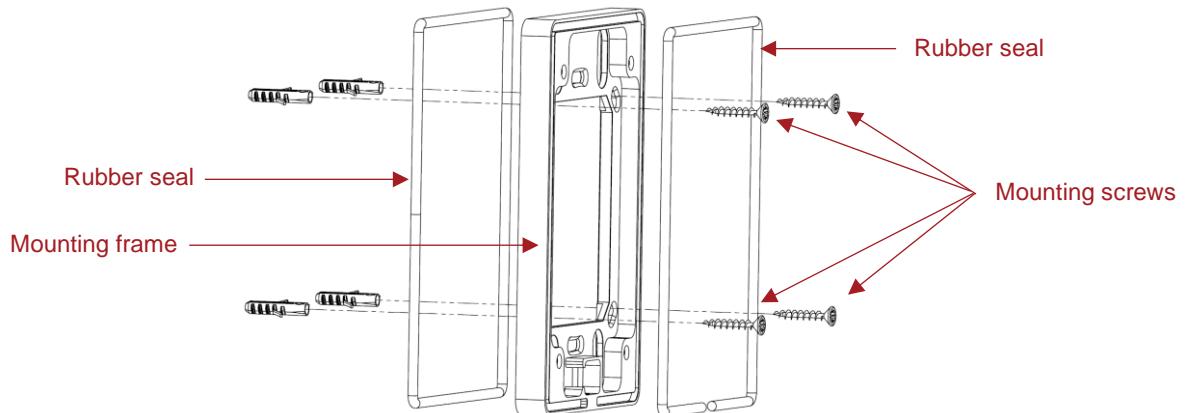

2. The mounting frame is equipped with a cable inlet on its bottom side, which also serves as a cable strain relief. Optionally, the cable inlet can be sealed with silicone.

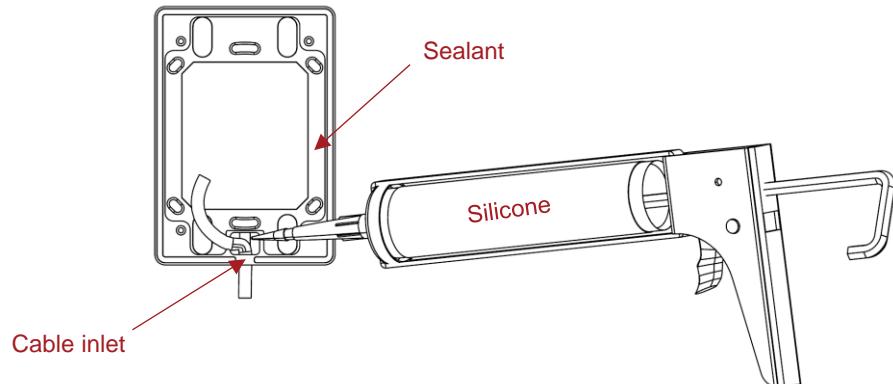


3. Finally, attach the mounting plate to the mounting frame, and the reader to the mounting plate as described below:

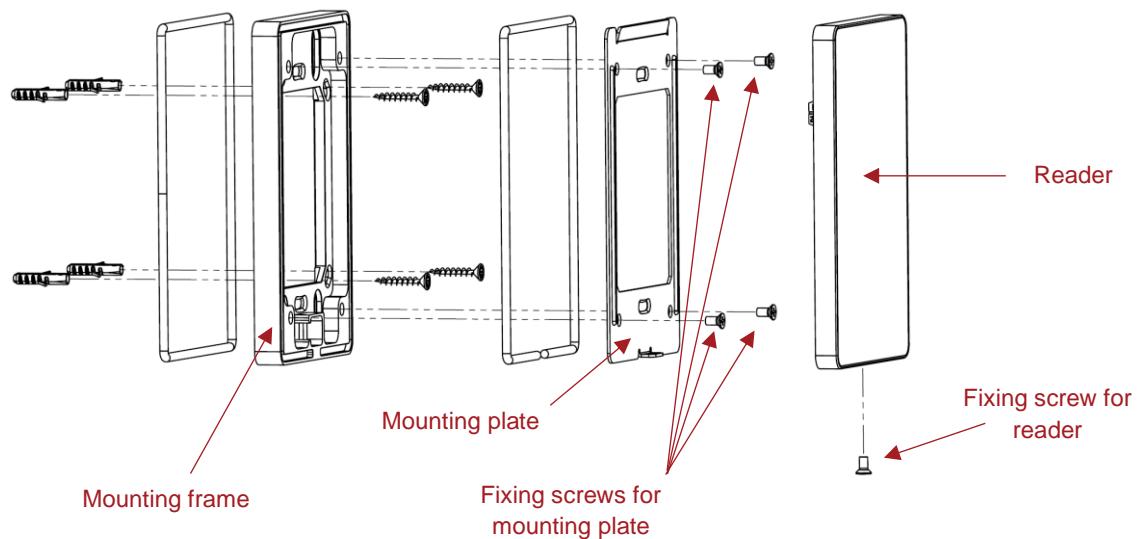

4.5.2 INSTALLATION WITH FLUSH-MOUNTED BOX

Attach the mounting plate to the flush-mounted box, and the reader to the mounting plate as described below:

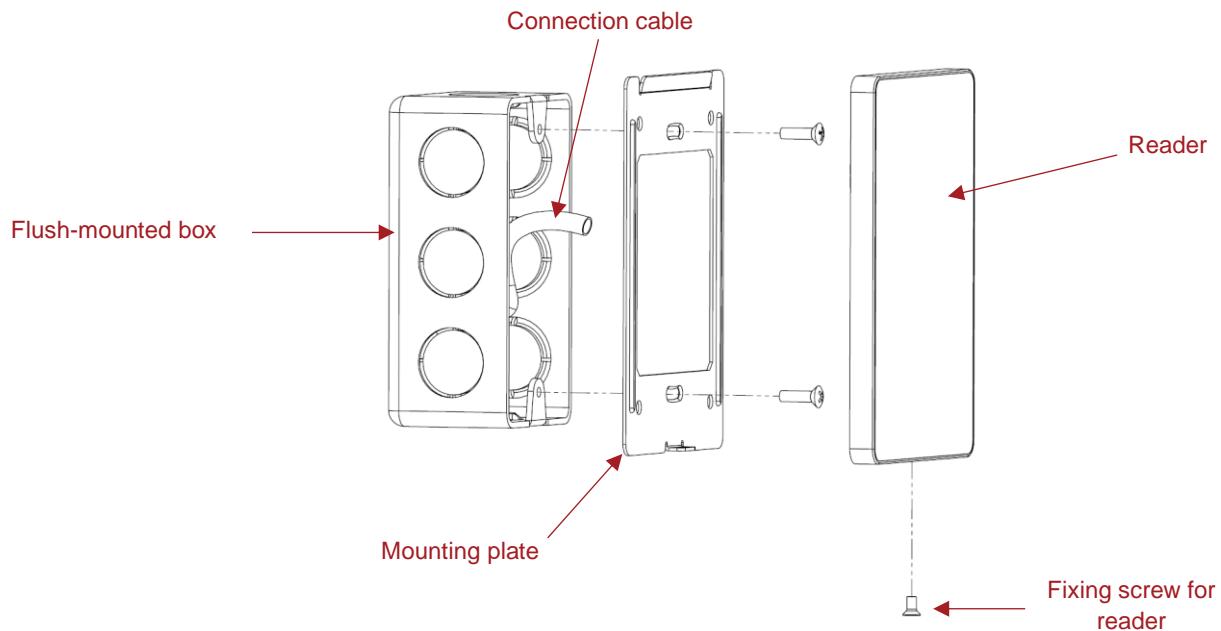

5 SETTINGS

5.1 GENERAL SETTINGS

TWN4 Secustos readers are highly flexible and versatile products that support many types of transponder technologies⁷. This includes operating frequency, various types of chip technologies, data access and output formatting. Depending on the actual project and used transponders, the reader must be configured accordingly. This can be done using the AppBlaster tool. Refer to the TWN4 AppBlaster User Guide for a detailed description of the transponder configuration process.

By default, the reader is delivered ex-works with the following settings:

- OSDP: 9600 baud
- Address: 0
- Terminating resistors: off
- LED settings: the top left LED is signaling the state of the device, as described below:

LED behavior	Status	Explanation
Blinking light, amber	Power up	According to the OSDP standard, no connection can be established to the reader in this first phase after powering up.
Blinking light, blue	Ready to Connect	10 seconds after powering up, the LED starts blinking blue. It is now possible to establish an OSDP connection to the reader.
Steady light, blue	Idle	Once the device is connected to the controller, the LED lights up with a steady blue light. This is the normal operating condition.
Steady light, green	Credential read	As soon as a credential has been read, the LED lights up green for two seconds, before turning back to blue again.
Blinking light, magenta	Smart Config	During the configuration of the device with a smartphone, the LED starts blinking magenta. This functionality can be activated as an option.

Further settings, like the optional keypad function, or a customer-specific configuration are also possible and can be defined with the AppBlaster tool. Refer to the TWN4 AppBlaster User Guide for a detailed description of the configuration options.

⁷ Only MIFARE Classic 1k and EM4102 have been tested as part of the UL 294 certification.

5.2 CONFIGURATION WITH SECUSTOS SECO APP

The reader configuration with the Secustos Seco app⁸ requires an NFC-enabled mobile device (e.g. smartphone or tablet) with Android operating system (from Android 4.0). The Seco app must be downloaded from the Google Play Store and installed on the mobile device.



Seco App



<https://play.google.com/store/apps/details?id=com.elatec.seco>

Once the app has been installed, it is possible to set parameters on the mobile device and transmit them subsequently on the reader via NFC.

5.3 CONFIGURATION WITH USB CABLE

The reader can also be configured using the specific USB cable (refer to Chapter “Accessories”) and the AppBlaster tool.

To do so, proceed as follows:

1. Connect the reader to a PC with the USB cable.
Particular attention should be given when plugging the USB cable in and out of the reader, as the 4-pin USB connector is a very sensitive component.
Do not twist or pull excessively on the reader and press the connector lock when plugging the cable out.
2. Open the AppBlaster tool on the PC and set the reader as requested.
Refer to the TWN4 AppBlaster User Guide for more information about the reader settings.
3. Save your settings before closing the AppBlaster tool and disconnect the reader from the PC by plugging out the USB cable carefully.

5.4 CONNECTION TO AN ACCESS CONTROLLER

A typical installation contains one or more TWN4 Secustos readers connected to a controller via RS-485, each device operating as follows:

- Reader
 1. reads data from a credential⁹;
 2. format the data; and
 3. sends it to the controller via RS-485.

⁸ Please note that the reader configuration with the Secustos Seco app has not been tested as part of the UL 294 certification.

⁹ TWN4 Secustos readers support many credential bit lengths and output formats. As an example, it is possible to send the UID (32 bits) of a MIFARE Classic 1k as raw data or formatted in decimal or hexadecimal. Refer to the TWN4 AppBlaster User Guide for a list of all available output formats.

- Controller
 1. receives data from the reader;
 2. matches the data against an access list; and
 3. grants or deny access.

The chapters below describe an exemplary installation of TWN4 Secustos SG30 with the sesamsec Secpass controller¹⁰ in two different configurations.

5.4.1 LINE TOPOLOGY

In this configuration, the reader bus consists of one reader connected to an RS-485 controller bus. An address must be assigned to the reader and the terminating resistors of the RS-485 bus on the reader and on the controller must also be set.



Reader

Address: 0

Terminating resistor: on



Controller

Terminating resistor: on

5.4.2 STAR TOPOLOGY




The following configuration is technically feasible. However, it has not been tested in accordance with UL 294. Thus, it is not part of the UL certification granted to the readers.

In this configuration, the reader bus consists of max. two readers, which are both connected to the same RS-485 controller bus. An address must be assigned to each reader before initial operation (e.g. Reader 1 = Address 0, Reader 2 = Address 1) as two readers with the same address would cause a conflict.

The terminating resistors of the RS-485 bus on both readers must be on, whereas the terminating resistor of the RS-485 bus on the controller must be off.

The terminating resistors of the RS-485 bus on the readers and on the controller must also be set.

¹⁰ The UL 294 certification granted to the TWN4 Secustos readers is not conditioned by the exclusive use of the readers with the Secpass controller described above, as the TWN4 Secustos readers have been evaluated using other controllers as part of the UL 294 certification.

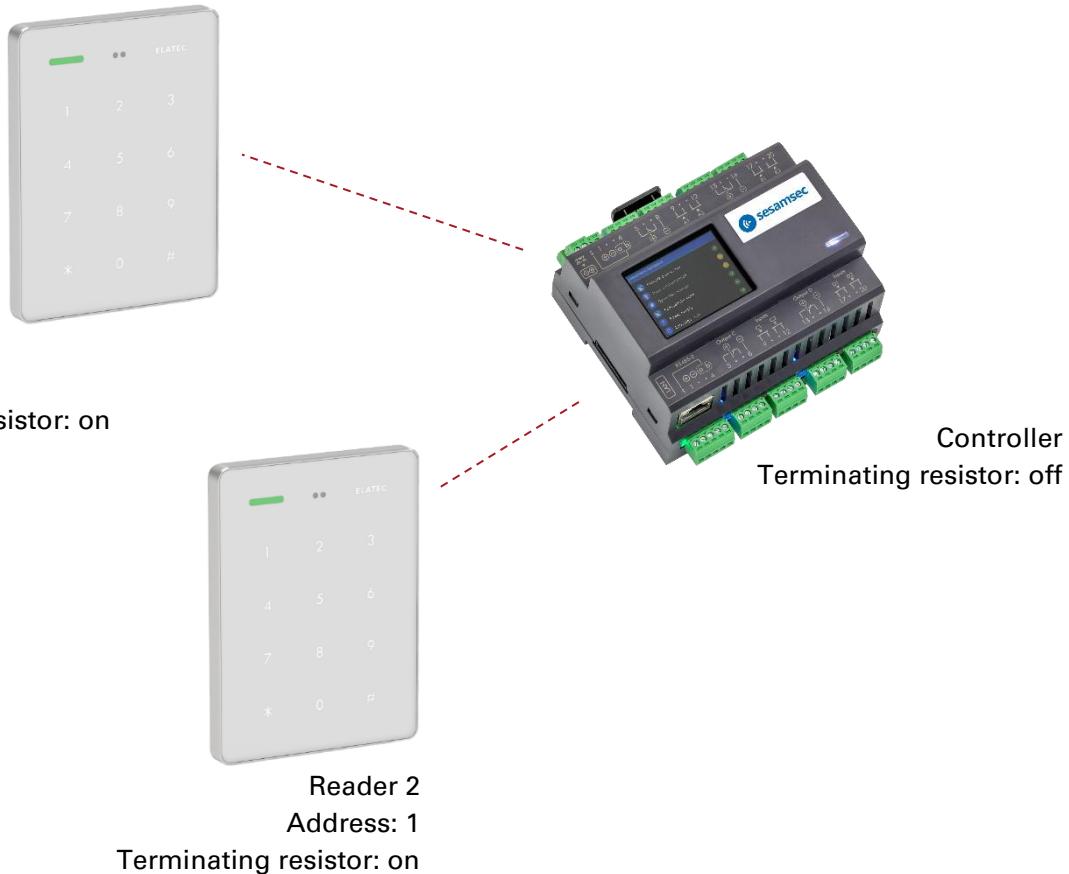

Please note:

- A star topology is only possible with max. two readers.
- In general, the terminating resistors of the devices opening and closing the RS-485 bus must be on. The terminating resistors of all other devices within the RS-485 bus are off.
- An RS-485 bus should contain max. two readers. Operating more than two readers would lead to a performance loss.
- The correct configuration of the controller is necessary to ensure a proper function of the readers.
- TWN4 Secustos readers are also equipped with a tamper switch, which is intended to prevent any sabotage. However, tampering the reader (i.e. activating the tamper switch of the reader) does not immediately lead to an alarm. In this case, the status of the tamper switch is sent to the controller, which activates by itself appropriate actions.

6 COMPLIANCE STATEMENTS

6.1 GENERAL STATEMENTS

6.1.1 FCC

The readers of the TWN4 Secustos family comply with the RF exposure requirements for mobile devices (47 CFR 2.1091). However, the devices shall be used in such a manner that the potential for human contact during normal operation is minimized.

6.1.2 UNITED KINGDOM

The readers of the TWN4 Secustos family comply with the requirements of the UK legislations and other regulations as listed in the respective UK declaration of conformity. The importer is responsible for applying to the packaging the importer company's details, including the company's name and a contact address in the United Kingdom.

6.2 TWN4 SECUSTOS SG30

6.2.1 EU

Hereby, ELATEC GmbH declares that TWN4 Secustos SG30 complies with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: elatec.me/approvals

6.2.2 FCC

FCC ID: WP5TWN4F31

The device above complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. (except receivers associated with operation of a licensed radio service and stand-alone devices).

Caution

The Federal Communications Commission (FCC) warns the users that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC §15.105 (b)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

6.2.3 ISED / ISDE CANADA

IC: 7948A-TWN4F31

The device above contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

6.2.4 UL 294



TWN4 Secustos SG30 has been UL listed as part of the UL 294 certification. However, the reader must be installed and used in accordance with the UL-specific requirements and technical specifications listed in this manual.

APPENDIX

A – RELEVANT DOCUMENTATION

ELATEC documentation

- TWN4 Secustos family, user manual/instructions for use
- TWN4 Secustos SG30 data sheet
- Secustos product brochure
- TWN4 AppBlaster User Guide

external documentation


- Technical documentation related to the installation site
- Optionally: Technical documentation related to connected devices (e.g. access control unit)

B – TERMS AND ABBREVIATIONS

TERM	EXPLANATION
BLE	Bluetooth Low Energy
EMC	electromagnetic compatibility
ESD	electrostatic discharge
GND	ground
HF	high frequency
LF	low frequency
NFC	near-field communication
OS	operating system
PE	protective earth
RF	radio frequency
RFID	radio frequency identification
SAR	specific absorption rate
SPD	surge protection device

C – REVISION HISTORY

VERSION	CHANGE DESCRIPTION	EDITION
01	First edition	05/2025

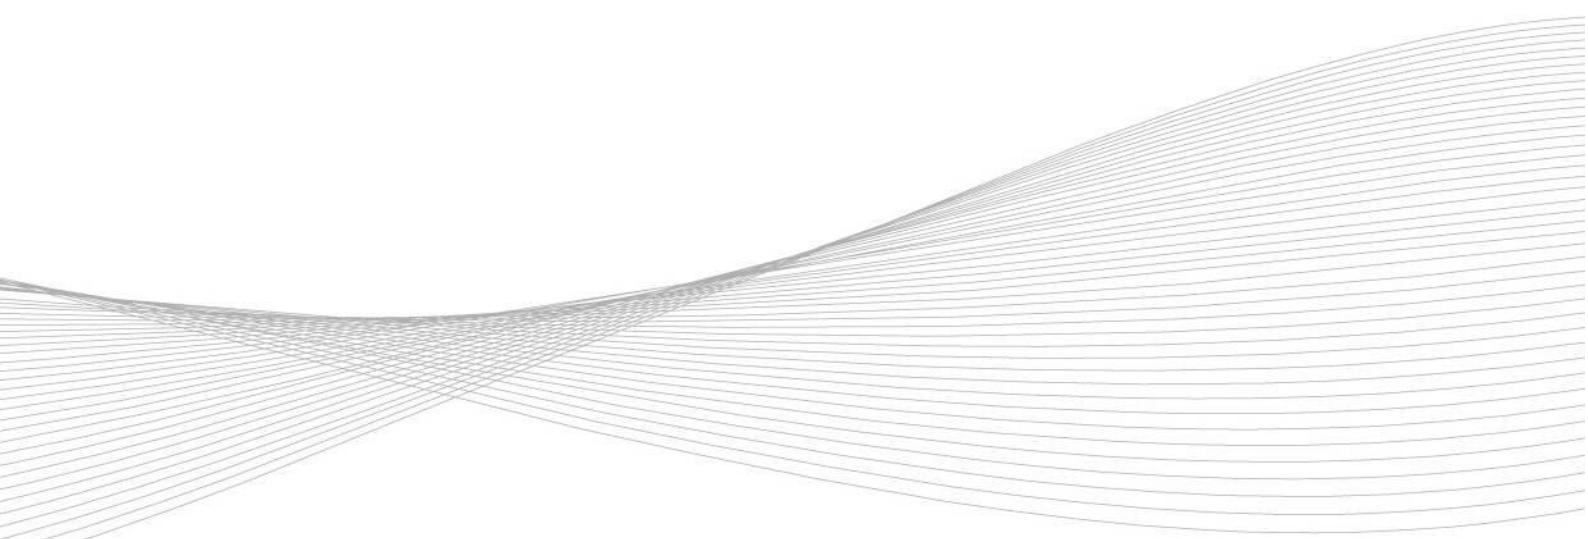**HQ / EUROPE**

ELATEC GmbH
Zeppelinstraße 1
82178 Puchheim, Germany
P +49 89 552 9961 0
F +49 89 552 9961 129
info-rfid@elatec.com

AMERICAS

ELATEC Inc.
1995 SW Martin Hwy.
Palm City, FL 34990, USA
P +1 772 210 2263
F +1 772 382 3749
americas-info@elatec.com

APAC

ELATEC Singapore
1 Scotts Road #21-10 Shaw
Centre, Singapore 228208
P +65 9670 4348
apac-info@elatec.com

MIDDLE EAST

ELATEC Middle East
Trading FZE
P.O. Box 16868, Dubai, UAE
P +971 50 9322691
middle-east-info@elatec.com

elatec.com

ELATEC reserves the right to change any information or data in this document without prior notice. ELATEC declines all responsibility for the use of this product with any other specification but the one mentioned above. Any additional requirement for a specific customer application has to be validated by the customer themselves at their own responsibility. Where application information is given, it is only advisory and does not form part of the specification. Disclaimer: All names used in this document are registered trademarks of their respective owners.