

PS3 Bluetooth Controller

RF-GPS3101

User Guide

Safety

Caution: Some medical studies have suggested that long periods of repetitive motion may be linked to certain types of physical discomfort or injuries. You should take frequent breaks during game play. If you feel aching, numbness, or tingling in your arms, wrists, or hands, consult a qualified health professional.

- Do not use the PS3 Bluetooth Controller if you have respiratory, heart, or other physical ailments that limit your physical activity. If you have any doubts, consult with a qualified health professional.
- The PS3 Bluetooth Controller is not intended for small children. The PS3 Bluetooth Controller may contain small pieces that should be kept away from small children because they may pose a choking hazard.
- Do not disassemble any of the PS3 Bluetooth Controller components. Refer all servicing to qualified personnel only.
- Do not place or store the PS3 Bluetooth Controller in a humid area and do not expose it to water or rain.
- Use the PS3 Bluetooth Controller only as instructed. Read all instructions before operating the PS3 Bluetooth Controller.
- Failure to follow these directions may void the warranty.

WARNING – Battery Leakage

PS3 Bluetooth Controller contains rechargeable Ni-MH batteries. Leakage of ingredients contained within the battery, or the combustion products of the ingredients, can cause personal injury as well as damage to your PS3 Bluetooth Controller. If battery leakage occurs, avoid contact with skin. If contact occurs, immediately wash thoroughly with soap and water. If liquid leaking from a battery comes into contact with your eyes, immediately flush thoroughly with water and see a doctor.

To avoid battery leakage:

- Do not expose battery to excessive physical shock, vibration, or liquids.
- Do not disassemble, attempt to repair or deform the battery.
- Do not dispose of battery in a fire.
- Do not touch the terminals of the battery, or cause a short between the terminals with a metal object.
- Do not peel or damage the battery label.

WARNING – Radio Frequency Interference


The PS3 Bluetooth Controller can emit radio waves that can affect the operation of nearby electronics, including cardiac pacemakers.

- Do not operate the PS3 Bluetooth Controller within 9 inches of a pacemaker.
- If you have a pacemaker or other implanted medical device, do not use the PS3 Bluetooth

Controller without first consulting your doctor or the manufacturer of your medical device.

- Observe and follow all regulations and rules regarding use of wireless devices in locations such as hospitals, airports, and on board aircraft. Operation in those locations may interfere with or cause malfunctions of equipment, with resulting injuries to persons or damage to property.

Contents

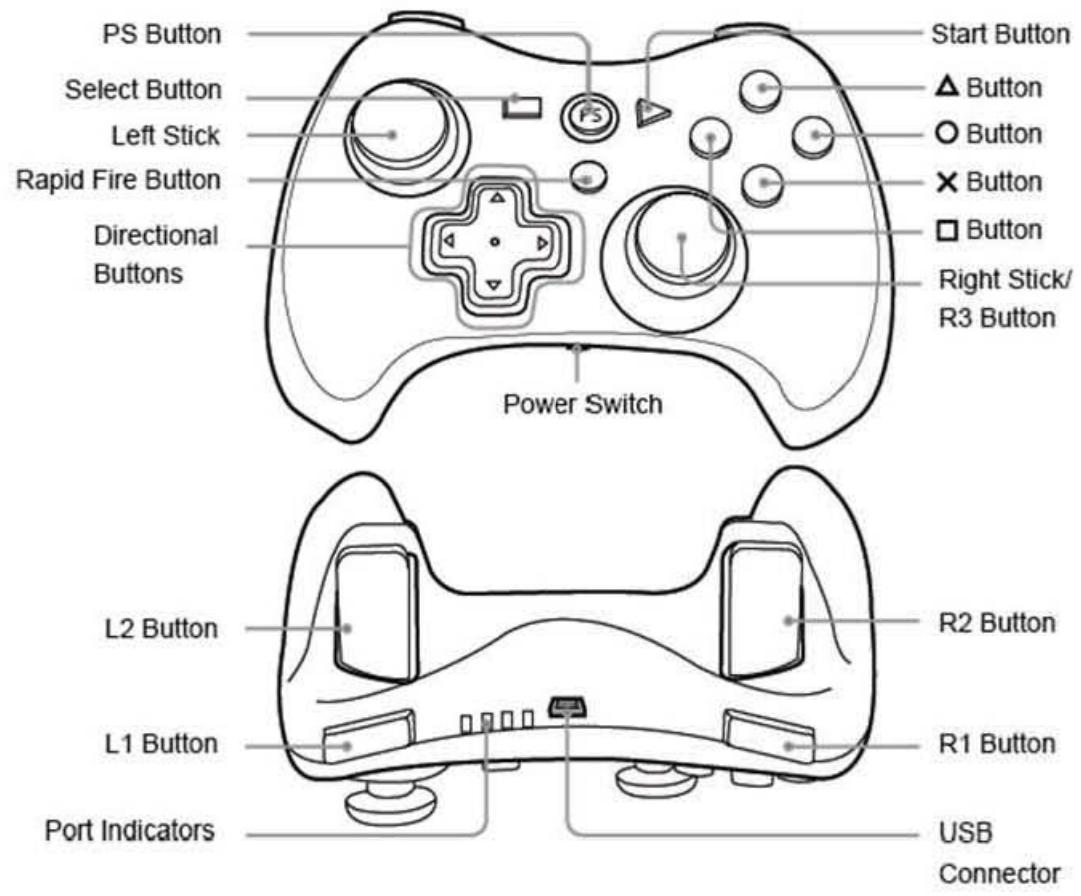


Charging the PS3 Bluetooth Controller Battery

Before you use the controller for the first time, or after you have not used it for a long time, you must charge the battery. (If the controller will not be used for long periods of time, the battery should be recharged at least once every six months.)

It takes approximately 3.5 hours to recharge the battery. (The actual time varies depending on how much battery life you have left.) You can play games while recharging the battery, but the recharge time will be longer.


1. Insert the mini-USB plug from the charging cable into the connector on the front of the controller.

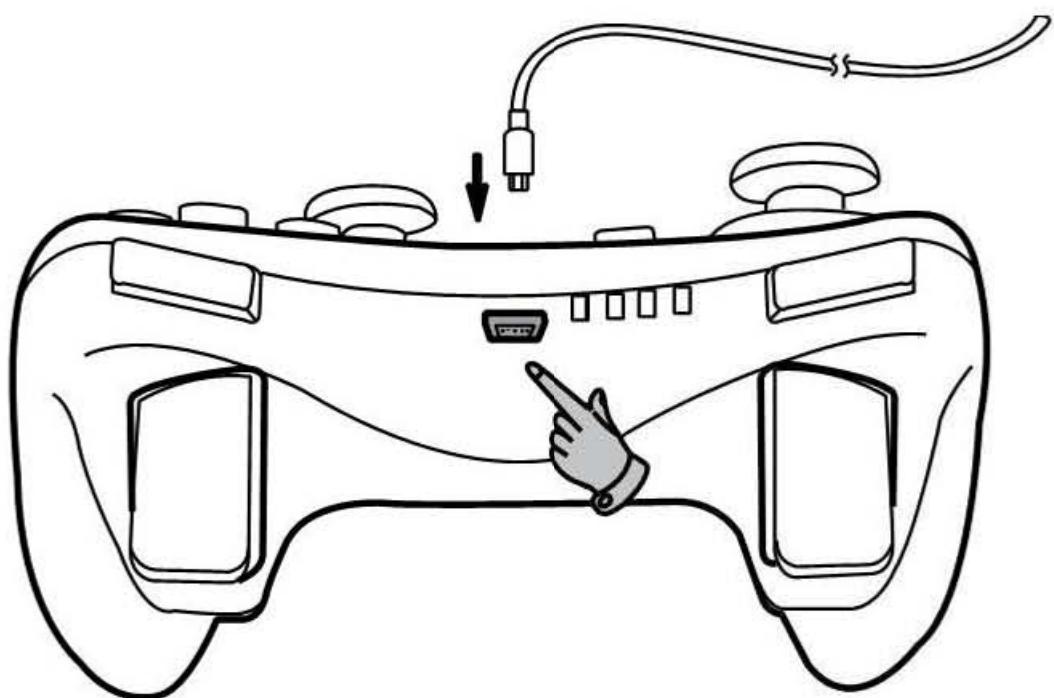

IMPORTANT: Be sure the min-USB plug is facing in the correct direction before inserting into the connector to avoid damaging either the plug or connector.

2. Insert the USB plug into the USB connector on the PS3 or any other standard USB port.


After power on your PS3, charging starts. The PS button will light on blue. When the battery is fully charged, the blue light of the PS button will turn off.

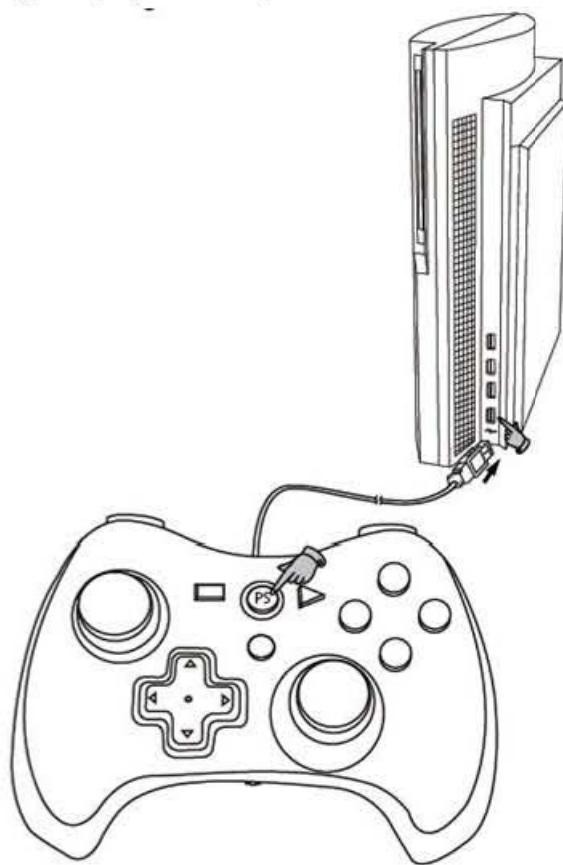


Pairing the PS3 Bluetooth Controller

To connect the PS3 Bluetooth Controller with your PS3 console for the first time:

1. Connect the USB cable with your controller and PS3 console.

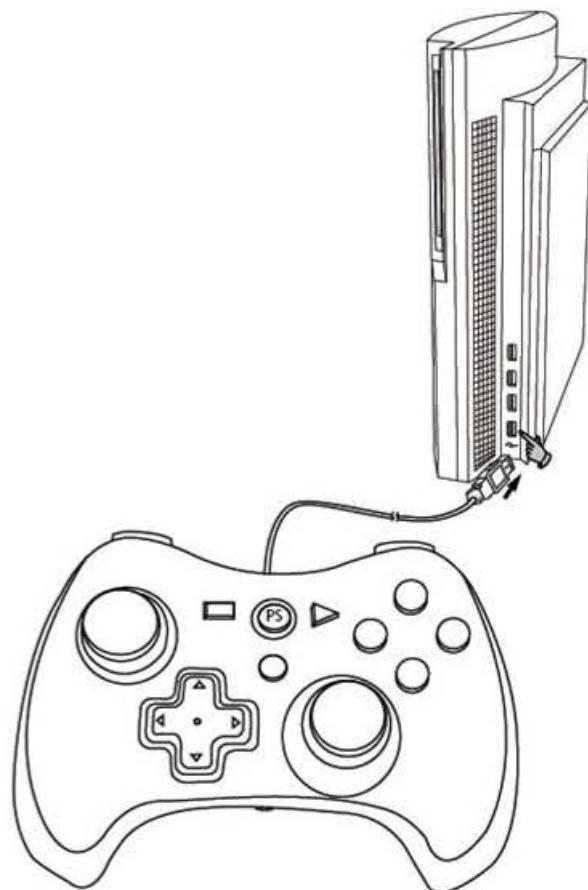

2. Turn on the controller and press the PS button. When it is recognized by the PS3, the port indicators will flash slowly. Press the PS button again to assign a port number.

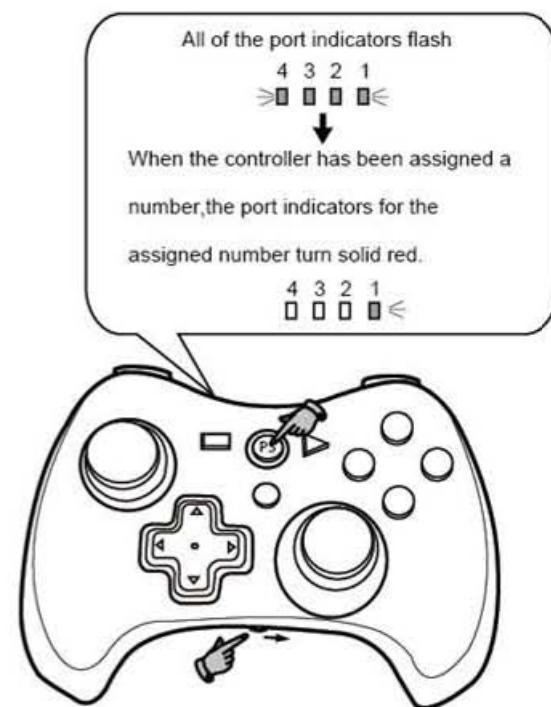

Notes:

- Pairing and assigning controller numbers can only be done when the system is turned on.
- When a paired controller is used with another PS3 system, the pairing with the original system is cleared. Pair the controller with the system again if the controller has been used with another system.
- If the controller or the system is turned off, the port indicators on the controller will turn off and the assigned number will be cleared.

Rapid Fire Function

Rapid fire allows certain buttons to perform as though they are being repeatedly pressed. This is a great feature for certain games that require fast button presses such as shooting and fighting games.

These buttons can be set to Rapid Fire: △, ○, ×, □, L1, L2, R1, R2.

To program the Rapid Fire feature:

1. Press and hold the Rapid Fire button, The PS light will begin to flash.



2. Press one of any button described above to set to Rapid Fire.



3. Release the Rapid Fire button.

Notes:

You can set three different Rapid Fire frequencies by pressing the Rapid Fire button; fast, medium and slow.

- The first time you press the Rapid Fire button to enter the Rapid Fire setting mode, the default frequency is "Fast" and the PS light will flash at the fastest rate indicating that the

Rapid Fire function is programmed at the fastest rate possible.

- The second time you press the Rapid Fire button, the PS light will flash at a medium pace indicating you have the Rapid Fire function programmed at the medium rate.
- The third time you press the Rapid Fire button, the PS light will flash at its slowest pace indicating you have the Rapid Fire function programmed at the slowest rate possible.
- Pressing the Rapid Fire button a fourth time will exit the RF setting mode. The PS light will turn off.

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.