


FIND YOUR MISPLACED GLASSES EVERY TIME!
EYE WHERE?
U.S. Patent 5,949,516

Activation

To activate the receiver:

1. Remove plastic tab from batteries
2. Hold transmitter approximately **18 inches** away from receiver and hold down transmitter button **until receiver beeps**. (Fig.A)

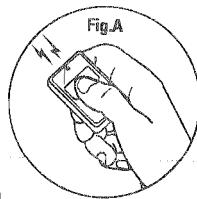

Please Read!

- Do not submerge in water! If unit gets wet, remove batteries, dry thoroughly, and replace batteries. Always use cr389 or cr390 style batteries.
- Battery life will depend on usage. If the unit is used once a day, the batteries will last approximately 120 days.
- The unit works on radio frequencies, so range will depend on the environment where it is used. Range will vary between 10-30+ feet. The unit will not penetrate metal.

Warranty

If within one year from purchase date, receiver or transmitter fails to work due to mechanical problems, simply return the unit and EyeWhere?, Inc. will send you a replacement unit at no charge.



This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept and interference received, including interference that may cause undesired operation. This device operates under part 15 of the FCC rules. Any modifications to this device not expressly authorized by Eye Where?, Inc. could void the user's authority to operate this device.

EyeWhere?™ • 33366 Dowd Avenue • Union City, CA 94587
www.eyewhereinc.com