

Custom Remote Control Tank User Manual

SPECIFICATION:

1. Battery of the toy: AAA battery, 1.5V*3; Battery of the Remote Control: 9V*1
2. Frequency of the Remote Control: 27MHz
3. Remote Distance: $\geq 10\text{m}$
4. Work Condition: $-30^{\circ}\text{C} \sim +60^{\circ}\text{C}$

OPERATION DESCRIPTION:

1. Battery Installation:

- A. Battery of remote control: take off the battery cover; make the battery (9v) into the remote control with the positive and negative aright, then cover the battery cover.
- B. Battery of the toy: Using the screwdriver("+") to remove the screws at the bottom of the battery cover and remove the battery cover, add 3 AAA batteries to the battery box with right position, cover the battery cover and fixed the screws tight.



2. Push the switch button on the "ON" position:

- A. Switch of the remoter control: OFF –Power off, ON- Power on
- B. The switch on the bottom of the toy: OFF –Power off, ON- Power on

3. Operate Method:

Make sure the switches of the toy and remoter control on the "ON" position, then place the toy on the floor, use the button (Go, Back, Left, Right) on the remoter control to control the toy.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.