

Circuit Description

F1: When input is shorted, it performs input shorted protect function.

L1、C1、C2: Work together with to performs EMI function.

D1、D2、D3、D4: Performs rectification function.

Q1、Q2、L2: Performs Oscillating function, let low frequency switch high frequency.

C6、C7、TR: When switching power, the C6 and C7 take place Series resonance startup the lamp, then TR restricting current.