



## Zigbee Interface INSTALLATION

1. The Zigbee Interface is an electronic component and can not be used as is by end user. it must be integrated in an electronic equipment as a component.
2. The Zigbee Interface must be handled with care, component is sensitive to ESD, special equipment must be used to handle it.

## USE CONDITIONS

1. Place the Zigbee Interface in a free area, the interface must not be put in a metallic enclosure.
2. Nominal Voltage range : 3.3 V (3.0 to 3.6 V)
3. Temperature range : [-20°C ; 70°C]
4. Altitude < 2000m, Pollution level protection : 3
5. Technical support : Refer to our website : [www.enersys-emea.com](http://www.enersys-emea.com) to find your local contact.
6. Federal Communications Commission (FCC) :

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. IN ACCORDANCE WITH FCC REQUIREMENTS, CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY ENERSYS COULD VOID THE USER'S AUTHORITY TO OPERATE THIS PRODUCT.

For more details, please contact your local EnerSys representative or :

EnerSys S.A.R.L. Rue Alexander Flemming Z.I. EST – CS40962 – F 62033 Arras Cedex