

Remote Control User's Guide

Package contents


- Remote control (part number **700031-003**)
- Mounting bracket
- 2 AAA alkaline batteries
- This guide

Overview

The dual-frequency remote control can transmit on one of two carrier frequencies:

- 27.145 MHz (ASK) to communicate with jukeboxes (Genesis I, II, Maestro, Rhapsody) that use the existing receiver/demodulator.
- 433.92 MHz (ASK) for jukeboxes with the new receiver/demodulator.

By default, the frequency is set to 433.92 MHz.

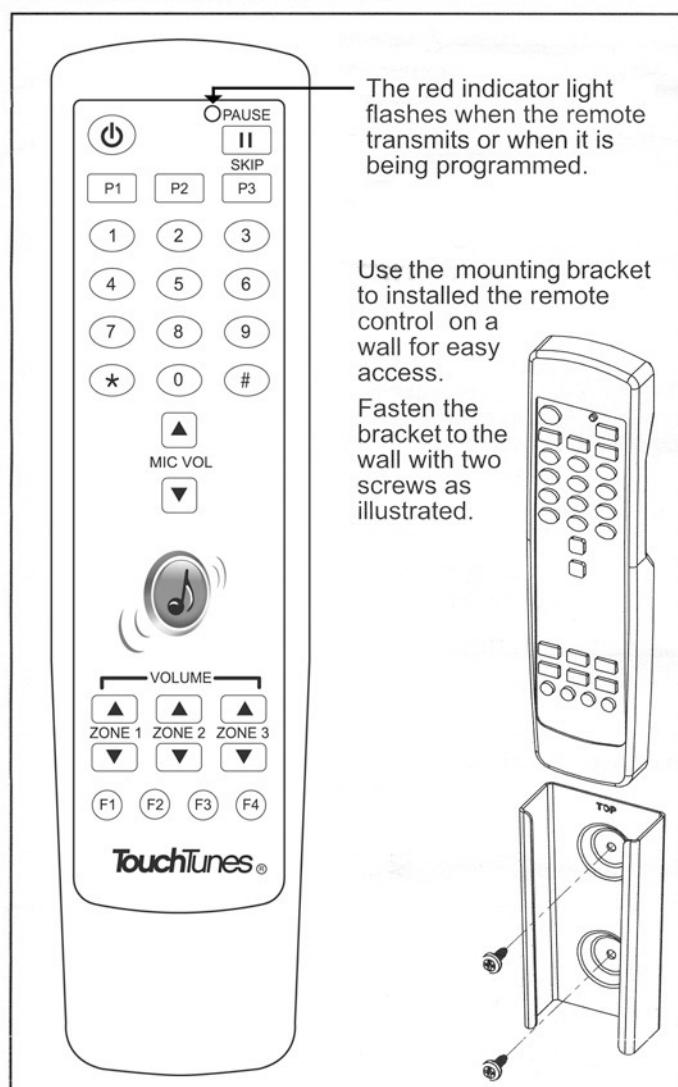

The red indicator light flashes when the remote transmits or when it is being programmed.

Use the mounting bracket to install the remote control on a wall for easy access.
Fasten the bracket to the wall with two screws as illustrated.

The remote control is RF-based. This eliminates the need to point it directly at the jukebox when using it. It has a range of up to 200 feet depending on the type of the obstructions between it and the jukebox. Concrete and metal provide more of a barrier than wood or plaster. The remote control can also be affected by interference from other RF-based devices.

The remote control is powered by two 1.5V AAA batteries. Insert the batteries in the compartment on the rear of the remote. Use only high-quality alkaline batteries.

Setting the carrier frequency

By default, the carrier frequency is set to 433.92 MHz. To change it, do the following:

1. Press the **PAUSE** and **F1** keys at the same time and hold them down until the red indicator light blinks two times.
2. Enter the three-digit numeric code for the frequency you want to use.
 - **027** for 27.145 MHz
 - **433** for 433.92 MHz
3. The red indicator light will light up for three seconds to confirm your selection. If you enter an invalid code the light will blink five times.
4. The default manufacturer carrier frequency selection code is 433.
5. The carrier frequency selection code is memorized in a non-volatile memory.

Setting the remote control ID

By default, the remote control ID is set to 000. To change it, do the following:

1. Press the **POWER** and **F4** keys at the same time and hold them down until the red indicator light blinks two times.
2. Enter the new three-digit code to use. The new code must be in the range **000** to **255**.
3. The red indicator light will light up for three seconds to confirm your selection. If you enter an invalid code the light will blink five times.

You must now have the jukebox re-learn the remote ID. See the – *TouchTunes Jukebox Software Manual* for details.

Key assignments and functionality

The keys on the remote are pre-programmed for the following functions.

Key	Function
Power	Press to turn the jukebox monitor and audio subsystem on or off. The jukebox computer remains on. Equivalent to pressing the Night Mode button on the jukebox (not available on all models).
Pause	Pauses the jukebox.
Numeric keys	Used to program the remote and for future use.
MIC VOL	Raises and lowers the volume of the microphone within the limits set on the Mixer Settings screen.
P1	Give promotional credit: Press and release this button to add a credit to the jukebox. Credits are deducted from the promotional credit count. The promotional credit feature is enabled/disabled on the Credit Settings screen.
P2	For future use.
P3/Skip	Skip song: Quickly press and release this button to stop playing the current song and immediately skip forward to the next song in the queue. The skip song feature is enabled/disabled on the System Settings screen. Flush play queue: Press and hold this button for four seconds to flush the entire play queue.
VOLUME ZONE 1, 2, 3	Raises and lowers the volume of the selected zone within the limits set on the Sound Mixer screen.
F1, F2, F3, F4	For future use.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Note: Unauthorized modification of the receiver or radio remote control could void the user's authority to operate this equipment.
This product complies with the Canadian ICES-003 Class B specification.



CAUTION: Do not use or store the remote near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



CAUTION: Dispose of used batteries in accordance with the regulations in your area. Do not incinerate.

TouchTunes Digital Jukebox, Inc.

3, Commerce Place, 4th Floor
Montreal, Quebec,
Canada, H3E 1H7

TouchTunes Music Corporation

1280 Rose Road
Lake Zurich IL 60047
USA

Technical Support

888-711-5853
www.touchtunes.com