
Safety Notice

1. Please do not let children handle the phone.
2. Do not use your phone at the place where there are inflammable and explosive gases, such as filling station, coal gas station.
3. Please do not throw the old batteries to the places as you like.
4. Please repair your phone at the appointed place, do not dismount your mobile privately.

Contents

1	ABC	6
1.1	Brief Introduction	6
1.2	Safety Information	6
1.3	Safety warning and Notice	6
2	Before Using	10
2.1	Name and description of every part	10
2.1.1	Technical Parameters	10
2.1.2	Basic Keys	11
2.1.3	Side key function introduction	12
2.1.4	Installation and Dismantlement of T card	12
2.2	Battery	12
2.2.1	Installation and Dismantlement of Battery	12
2.2.2	Charge of Battery	13
2.3	Connect the network	14
2.3.1	SIM card	14
2.3.2	Insert and remove SIM card (need the pictures from client)	15
2.3.3	Open/Close the phone	15
2.3.4	Uncoil lock of SIM card	16
2.3.5	Phone unlock	16
2.3.6	Connect to network	17
3	Basic Operate	17
3.1	Dialing	17
3.1.1	Dial Domestic Phone Number	17

3.1.2	Dial Fixed Extension Phone Number.....	17
3.1.3	Dial International Call Number.....	18
3.1.4	Dialing in list	18
3.2	Emergency Call	18
3.3	Answering call.....	19
3.4	Call records.....	19
3.5	Menu in Calling.....	19
4	Function Menu.....	20
4.1	The use of Function Menu	20
4.1.1	Scroll searching select function.....	20
4.1.2	Guide key function	20
4.1.3	Exit menu.....	20
4.2	Function menu configuration	20
4.3	Phonebook.....	24
4.4	Message	25
4.4.1	SMS	25
4.4.2	MMS	28
4.4.3	Voice mail box	29
4.4.4	Cell Broadcast.....	29
4.5	Call center.....	30
4.5.1	Call records.....	30
4.5.2	Call Setting	32
4.6	Setting.....	33
4.6.1	Mode setting	33
4.6.2	Touch screen setting	33
4.6.3	Phone setting.....	33

4.6.4	Network setting.....	34
4.6.5	Safety Setup.....	34
4.6.6	Restore Factory.....	36
4.6.7	Sound effect.....	36
4.7	Multimedia	36
4.7.1	Camera.....	36
4.7.2	Album	36
4.7.3	Film recorder	37
4.7.4	Film player.....	37
4.7.5	Music player	37
4.7.6	Record.....	38
4.7.7	FM Radio	38
4.8	File Management.....	39
4.9	Fun and Games.....	39
4.10	Profiles.....	39
4.10.1	General	39
4.10.2	Meeting	39
4.10.3	Outdoor	39
4.10.4	Indoor	39
4.10.5	Earphone	40
4.10.6	Bluetooth.....	40
4.11	Toolbox.....	40
4.11.1	Calendar	40
4.11.2	Memo	40
4.11.3	Alarm Clock.....	40
4.11.4	World time.....	40

4.11.5	City search.....	40
4.12	Service	41
4.12.1	STK	41
4.12.2	WAP	41
4.12.3	Accounting data	42
4.13	Extra	42
4.13.1	Calculator	42
4.13.2	Exchange Rate Conversion	43
4.13.3	Stopwatch	43
4.13.4	Electronic book	43
4.13.5	Bluetooth	43
4.14	Shortcut Function	44
5	Input Methods	44
5.1	General	44
5.2	Keys Definition	44
5.3	Input Methods Instruction	44
5.3.1	Pinyin Input Method	44
5.3.2	Stroke Input Method	46
5.3.3	Manual input method	47
5.3.4	Aptitude English text Input Mode	47
5.3.5	English text and number Input Mode	48

1.1 Brief Introduction

Thanks for your choosing this color-screen mobile phone. You can realize all-around the handset's use from read this handbook, and experience its full functions and simple operation methods.

This color-screen mobile phone is designed for the GSM/GPRS network environment. Besides its basic call functions, this mobile phone also provides you a lot of practical functions including Chinese/English input, business card holder style phonebook, polyphonic ringtone, clock/alarm clock, scheduler, calculator, game, Mp3 player, all of which aim to facilitate your work and leisure activities. Additionally, it uses individual human-machine interface, and its full function design can meet your different needs.

This color-screen mobile phone complies with the technical specifications of GSM/GPRS, and it is authenticated by authorities at home and abroad.

The company has retained the right to revise the content of the manual without any advance notice.

1.2 Safety Information

- If your handset is lost or stolen, immediately notify the telecommunications department or sales agencies to ban your handset and SIM card. This will not allow others to use your handset and will reduce your economic losses.
- When you contact telecommunications department or sales agencies, they need to know your handset's IMEI (printed on the label at back of the handset which can be found after removing the battery). Please copy this number for preservation and future use.
- In order to enable your phone from misuse, please take preventive measures, as following :
 - Set PIN number of the handset's SIM card, and change it in time before others know it.
 - When leaving the car, please do not put the handset where it is easy to see it, and it is the best to take with you or to lock it in a suitcase.
 - Setup call barring.

1.3 Safety warning and Notice

Please read these notice before using handset to make sure safety.

General Notices

- The designated battery and chargers can be only used for your handset from the company. To use other products may cause leakage, overheating, burst and on fire to batteries.
- Do not impact, vibrate or toss the handset severely, so that your handset fails and is on fire.

-
- Do not put the battery, handset and chargers into the microwave oven or the high-pressure equipment, otherwise, it could cause circuit to be damaged and be on fire and other accidents.
 - Do not use your handset at the place where there are inflammable and explosive gases, otherwise some failures may be caused to your handset and it will be on fire.
 - Do not put your handset at the place where it is high temperature, high humidity or has a large amount of dust, otherwise it may lead to failure.
 - Do not place your handset at the place where children can touch it, lest the children regard it as a toy, causing personal injury.
 - Do not place the handset at an uneven or unstable table-board to prevent it from falling to cause malfunction or damage.

Notices While Using Handset

- Please turn off your handset where cell phones are banned to be use, such as in flight or hospitals. Because handsets may phone impact on the normal work of electronic equipment and medical equipment; please comply with the relevant provisions of the place when use your handset in those areas. The handset has automatic startup function with a timer; please look at your alarm clock setup, to confirm your handset will not automatically start in flight.
- Do not use your handset near the high-precision electronic equipment or under weak signal. Radio wave interference may cause the misoperation and other problems of electronic equipment. Especially in the vicinity of the following equipment, pay special attention to: hearing aids, pacemakers and other medical electronic equipment, fire detectors, automatic doors and other automatic control devices. Please consult the equipment manufacturer or local vendors for the impact on pacemakers and other medical electronic equipment from the handset.
- Do not force the LCD display or use it to beat other things, or else, it will be damaged to LCD panels and LCD liquid leakage. If LCD liquid enters the eyes, which may be blind, immediately wash eyes with water (Do not rub eyes) and visits a doctor.
- Do not dismantle or modify your handset, or else, it will cause it to be damaged, leaked and malfunction in circuit.
- In very limited circumstances, when your handset is used in certain models of cars, the inside electronic equipment may be adversely affected. Then please do not use it to avoid missing the security assurance.
- Do not use needles, pens and other sharp things to press the keys; otherwise your handset would be damaged phone or misoperation.
- Please do not use the handset if the antenna is damaged, and otherwise it may cause physical harm.

-
- Your handset is not allowed to be too close to the magic card and other magnetic objects, the radiation of handsets may remove the stored information in floppy disks, fund storage cards and credit cards.
 - Please place such a small radius of metal objects, such as drawing pins away from the handset headphones. Speakers work with magnetism, which will attract such small metal objects, as may cause physical harm or damage to your handset.
 - Avoid your handset from moisturizing; water or other liquid flows into your handset to cause overheating, leakage and malfunction.

Notices While Using Battery

- Do not throw the battery into the fire, otherwise it will lead to the battery on fire and burst.
- While installing batteries, do not forcedly clamp down; otherwise cause batteries' leakage, overheating, and burst and on fire.
- Do not short-circuit batteries with wires, needles and other metal objects, and not put batteries with the necklace and other metal objects together, otherwise, cause batteries' leakage, overheating, and burst and on fire.
- Do not weld battery terminals, otherwise, cause batteries' leakage, overheating, and burst and on fire.
- If the liquid of batteries flows into eyes, it may cause the blind, then please do not rub the eyes with hands, rinse them with water and then visit a doctor immediately.
- Do not dismantle or refit batteries, otherwise, cause batteries' leakage, overheating, and burst and on fire.
- Do not use or place batteries under high temperature, such as near fire or beside a heater, otherwise, cause batteries' leakage, overheating, and burst and on fire.
- If batteries are in use, charging or preservation, there are abnormal phenomena, such as warming, discoloration and deformation, please stop to use them and then replace new batteries.
- If the liquid of batteries comes up against skin and clothing, as may cause skin to burn, immediately rinse the liquid with clean water, if necessary, and go for medical treatment at once.
- Please take the battery away from the open fire immediately if the liquid of it leaks or it emits a strange odor, to avoid the fire and burst.
- Do not make the battery moisturizing; otherwise it would cause the battery overheating, smoke and to be corrupted.
- Do not use or place the battery under direct sunlight or high temperature near vehicles, otherwise it could lead to liquid spilling and overheating, reducing its performance and shortening life.
- Do not charge the battery more than 24 consecutive hours.

Notices While Using Charger

- Please use 220V AC. The use of other kinds of voltage will cause leakage, fire and damage to your handset and charger.
- Prohibit short-circuit the charger, otherwise it would cause electric shock, smoke and damage to the charger.
- Please do not use the charger if the power cord has been damaged, otherwise it could lead to fire or electric shock.
- Please clean dust on the power socket promptly.
- Do not place the storage container with water near the charger lest the spilling water causes the charger overheating, leakage and malfunction.
- If the charger gets into contact with water or other liquids, must put out the power cord from the socket immediately, preventing overheating, fire, electric shock and malfunction of the charger.
- Please do not dismantle or refit the charger, otherwise it could lead to personal injury, electric shock, fire and damage to the charger.
- Please do not use the charger under high humidity places, such as in the electrocution, otherwise it could lead to electric shock, fire and damage to the charger.
- Please do not contact the charger, wiring and power socket with wet hands; otherwise it could lead to electric shock.
- Please do not place the heavy on the power cord or modify wires, otherwise it would cause electric shock and fire.
- Pull out the power plug from the socket before cleaning and maintaining.
- While pulling and inserting the plug, seize the charger; and it could damage the wires when pulling the power cord, causing electric shock and fire.

Cleaning and Maintenance

- Your handset, batteries and chargers have no waterproofing performance, please do not use them under a high humidity environment, such as in the bathroom and they should also be avoided by rain shower.
- Clean your handset, batteries and chargers with a soft dry cloth.
- Do not clean your handset with solutions, such as alcohol, thinner and benzene.
- Please regularly clean the socket because there is dirt on it, it will lead to bad connection and power-off, so as your handset can not be rechargeable.

General Notices**Handset:**

- Please use your handset under 5℃ to 40℃ temperature and 35%~85% humidity.
- Please use your handset as away from regular phones, TV sets, radios and office automation equipment as possible

so as not to affect the use effects of these devices and the handset.

Battery:

- Please place the battery where it is shade-ventilated without direct sunlight.
- The battery life is limited. Battery duration is gradually shortened due to frequent recharging. When repeated recharging fails, the battery life is over and the new batteries with designated models should be replaced.
- Do not throw old batteries as the general life garbage. Please comply with the requested instructions to dispose waste battery in accordance with the clear provisions.

Charger:

 
- Please do not charge at the following locations: under point-blank sunshine; the outside temperature is below 5℃ or above 40℃; areas with humid and much gray or where there is much vibration (to cause failing); near TV, radios and other electrical appliances (to impact on images and sound effects).

2 Before Using

2.1 Name and description of every part

2.1.1 Technical Parameters

Dimension	115mmx54mmx21mm
Rated capability	850mAh
Continuous standby time	150-200 Hours(lie on network instance)
Continuous call time	100-150 Minutes(lie on network instance)

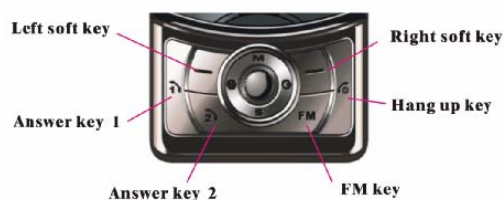

Left soft key

In standby status, press this key can enter main menu directly, you can do the edit operation to the main menu, it's option and confirm function in edit mode.

Right soft key

in standby status, press this key enter phonebook , it's cancel and backspace function when edit call records.

Hang up key

Finish call or reject incoming call; press this key for a long time to shutdown/restart mobile phone; in other cases, press this key generally means return to standby status

Answer key

Dialing and answer the call from SIM1; under standby status, find out the call record in SIM1.

Answer key 2

Dialing and answer the call from SIM2; under standby status, find out the call record in SIM2.

Navigation key

Descript in the function 4.1.

Number key

Input numbers and characters; 2-9 can be set as shortcut keys.

*** key**

Input special characters, Chinese interpunction and characters P, +W.

#key

Input #, switch input status, press this key long time it can switch mode between mute mode and general mode.

Note: "To press a key" in the manual means the key will be loosened at once after pressing it; "to long press a key" means to press the key and maintain two seconds or more.

2.1.3 Side key function introduction

You handset has convenient side key function.

- Press right side key enter camera when standby estate.
- Press up/down key right side to tune up the voice when standby estate.

2.1.4 Installation and Dismantlement of T card

Follow the following steps for dismantlement:

① open the T card cover upward.

②Take out the T card.

Follow the following steps for installation:

 
① Insert the T card to T card slot.

②slide the T card holder.

2.2 Battery


2.2.1 Installation and Dismantlement Battery

Follow the following steps for dismantlement: 1. Push the battery cover backwards. 2. Take the battery out.

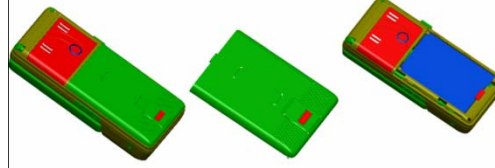

1. Follow the following steps for installation: 1. Insert upside of the battery in to holder . 2. push the bottom of

 the battery to the end of holder.

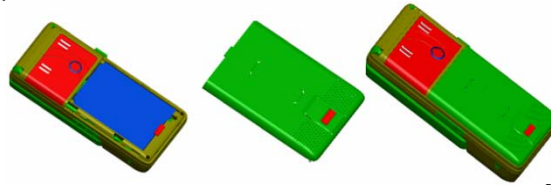

2.2.2 Charge of Battery



- Connect the power supply with the charger.
- Insert the interface of the charger into the handset bottom.
- Here a charging symbol is circulatory twinkling on the right-up of the screen icon zone; if the handset has been turned off when charging, the picture of charging indication will still appear on the screen, indicating the handset is being

charged. If the handset is still overused when a shortage of electricity is for it, it may take some time to display the charge icon on the screen after the charge.

- The charge has been completed if the indication symbol of electric capacity on the screen icon zone shows full and not twinkling. If the charge is going when the handset is turned off, the completed picture of charge will be shown on the screen. Charging process normally takes several hours. During the charge, the battery, charger and handset will become hot, as is normal.
- After the recharge is completed, disconnect the AC power supply with the charger and the handset.

Notice:

- The charging condition must be in an ambient temperature of +5℃ to +40℃ with ventilation, and the chargers provided by the manufacturers must be used. Unauthorized use of the charger may be dangerous, and it will also violate the warranty provisions of manufacturers.
- When the handset automatic shuts down or "electricity shortage" is warned due to electricity shortage, the battery should be timely charged. If the battery is not used up before it is rechargeable, the handset will automatically reduce charging time.
- The standby and call time of handsets provided by the manufacturers are based on the ideal working environment. In practical use, the working hours of the battery will vary with the different networks, working environments and use patterns.
- Please be sure that the battery is installed correctly when charging, and do not take the battery out of it when charging.
- After charging, please disconnect the charger with the mobile phone and the power supply.
- If you do not disconnect the charger with the mobile phone and the power supply, the battery power exhausts to some extent for a rather long time (about 5~8 hours), and the mobile phone begins to be recharged. We recommend you not do this, because this will bring some effects on the performance and life of your battery.

2.3 Connect to the network

2.3.1 SIM card

You must first insert an effective SIM card before using your handset. Your SIM card is the key for you enter into the digital GSM network.

All the relevant information with the establishment of network linking and your initialization of call records are recorded in the planar metal region of the SIM card, together with the names, telephone numbers and SMS stored and received in

 
Phonebook of your SIM card. SIM card can be taken out of your handset, and used by any arbitrary GSM/GPRS phone (a new handset automatically reads SIM card).

To prevent the information in the card from losing and being damaged, it should avoid touching the metal planar region, and keep the SIM card away from the electric and magnetic places. Once the SIM card is damaged, you will not be able to enter the GSM/GPRS network.

Warning: The handset must be switched off before SIM card is removed. It is absolutely forbidden to insert or remove the SIM card when the external power supply is connected, otherwise the SIM card may be damaged.

2.3.2 Insert and remove SIM card (need the pictures from client)

- SIM card generally is inserted into a card bag and it must be carefully taken out before installing it.
- Switched off the handset and remove the battery and other external power source.
- Such as below Fig. insert the SIM1 card into SIM1 card slot.

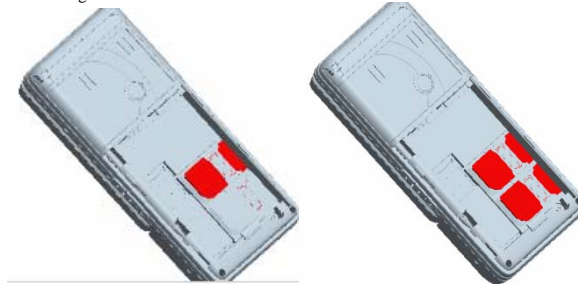

2.3.3 Open/Close the phone

- If you open the phone, please long press the hang up key and if you want to close the phone, please long press the key.
- If you first open the phone, there is no SIM card inserted, the phone will reminder you to insert a SIM card. Insert

the SIM card, so the phone will test automatically whether the SIM card is available.

➤ Then the reminders will appear on the screen under the following orders:

- **Input PIN1** —if you set SIM card password.
- **Input phone password** —if you set phone password.
- **Find network** —phone will find, till found appropriate network.

2.3.4 Uncoil lock of SIM card

PIN1 code can be used to prevent your SIM card from being illegally used. If the current PIN1 code has been closed, choose Open and start PIN1 code protection, and your PIN1 code will be inquired before your handset starts next; if the current PIN code has been opened, choose Close and close PIN code protection, and choose Change PIN1 code and set new PIN1 code; please input the old PIN1 code, new PIN1 code and repeat the new PIN1 code in order in accordance with the reminder.

- Press hang up key to open the phone;
- Input PIN1 code, use right soft key to clean wrong input, press OK finished. For example, if PIN1 set to 1234, then input as follows:
1 2 3 4

If input continuously incorrectly to three times, the SIM card will be locked, phone will ask the PUK1 code, if you don't know, please contact and give the SIM card to your network supplier, please look "safety setting".

Notice: Your network supplier will set a normal PIN1 number for your SIM card(4 to 8 bit), you must change to your personally password. Look the "safety setting".

2.3.5 Phone unlock

In order to prevent illegal usage, you can set password in your mobile phone. Once this function is chose, each time you power on your phone, you must input PIN1 code (if you setting PIN code protect), and you can unlock the phone only by this way, and then send or answer the call. Users can remove phone password (please look "safety setting"), in this case, the phone can not prevent illegal usage.

- Input phone password, use right soft key to clean wrong input, press OK finished. For example, if PIN1 set to 1122, then input as follows:
1 1 2 2

If you forget your phone password, you must connect to your network supplier to unlock. (phone barbarism password is 1122).

2.3.6 Connect to network

- After the SIM card is decrypted successfully, the phone can automatically search the available network (the searching network is displayed on the screen). Once contacted, the network supplier's name will appear on the center of the screen. At this time the handset enters standby status normally and besides can be used to call and receive calls, you can:
- Press right soft key enter phone book.
 - Press left soft key enter function menu.
- Note:** "Only for Emergency" is reminded on the screen, as means that your handset is out of the normal network coverage (service range), but you still can give an emergency call according to signal intensity.

3 Basic Operate

3.1 Dialing

You can dialing or answer when network supplier's sign show on the screen. Top left corner of screen show the network intensity (signal is strongest when it show 5 message lines).
It has a big infection when dialing fall across barrier, so move in small bound can advance the call quality.

3.1.1 Dial Domestic Phone Number

Input telephone numbers with the numeric key and then press the different dial key to choose SIM card 1 or 2 to begin calling. If you need to change the telephone numbers, please press the right soft key to delete characters. The screen will display the called animation while dialing. After the other side picks up, the screen will show the called status information, and if you open the tone, there will be a tone (be subjected to network support).

After the call ends, press the **hang up key** to hang up.

Zone number + Phone number + Dialing Key

3.1.2 Dial Fixed Extension Phone Number

Some fixed extension can not be directly called; you need to first get through the telephone exchange and then dial the extension. When you input the phone number, insert the symbol "P" between the telephone exchange number and the extension number, the phone will complete all your dial-up, automatically dial the extension. The method of inputting "P" is to long press * key (here symbol "P" is displayed on the screen).

Zone number + Telephone exchange number + P + Extension number + Dial key

An example of using the pausing character:

For example, if you have a voice mail box system by the dial-up for your 8880000 number, Box No. is 6666, password is 8888 and then you can dial in accordance with the following manner:

8880000 P 6666 P 8888

The first part numbers of this number is used to dial the voice mail system.

After the telephone responses, send 6666 and choose a mail box.

The second pausing sign would be delayed for five seconds (the first P indicates waiting for a telephone connected, and the following P indicates a delay for 5 seconds) before password 8888 is sent.

3.1.3 Dial International Call Number

To make an international call, you can not long press * key until the prefix symbol "+" of the international long-distance telephone number is displayed. This will allow you to dial any national telephone call even if you do not know the prefix of the local international telephone number (for example, it is 00 for China).

Input the prefix and then input the country code and the whole phone number you want to call. Country code complies with the usual practice, Germany 49, Britain 44, Sweden 46 and so on.

"0" ahead of the city code should be removed when dialing, as is the same as to call a usual international telephone.

For example, to call a hotline from other countries, you should dial:

+86 21 114

+ Country code + Whole phone number + Dial key

3.1.4 Dialing in list

Every call number you dialing and answered are all keep with a list in your handset, the number of you dialing and answered recently on top of list. Every number was classify according to dialed calls, Received Calls and missed calls, you can look up all call records. When it filled, old number will be delete. If you want to look up the list, do as follows:

- Look up the dialed call records, press dialing key.
- All of the number in list can dialing out get across the dialing key.

When number list show, press OK to look up , enter option and press save, you can saved the number to phonebook.

3.2 Emergency Call

If you stand within the network coverage (to check the indication bar about the network signal intensity on the upper left corner of the screen), you should be able to call for the emergency service (even in the absence of SIM card, you can call for

emergency). If your network suppliers don't have provided roaming services in the region, the screen will show "On for EMERGENCY ", indicating you can only do such a call.

3.3 Answering call

If any key answering is set to open, can press any key and answer a call. If a headphone has inserted, you can also use the headset button for the call.

3.4 Call records

Your phone can recording the last call and call times for you.

3.5 Menu in Calling

In calling case, press option key and then enter calling menu. The operation methods of calling menu and function menu are the same.

This call can only be seen during the course of calling, and functions such as call waiting, call hold, multi-conference need the support of network, please contact your network supplier.

In calling menu, you can implement the following operations:

- **Pause:** hold the current call or resume the hold call.
- **Finish:** finish the current call.
- **New Talk:** dial a new number.
- **Phone Book:** enter browsing phone book status.
- **SMS:** write and send a SMS.
- **Recording:** record the calling voice.
- **Mute/resumption:** do not send (or send) the local voice.
- **Send DTMF:** choose if sending DTMF or not
- **Hand free:** turn on megaphone and amplify call voice.
- **Multi-Call**
 - **Switch:** exchange the holder with the active counterpart.
 - **Conference:** begin teleconference.
 - **Call Transfer:** transfer the current call to other phone.
 - **Finish Single Line:** finish the current active call.
 - **All Over:** finish this call.
 - **Phone Book:** enter phone book menu.

-
- **SMS:** enter SMS menu.
 - **Recording:** record voice.
 - **Mute/Resumption:** don't send/recover local voice.
 - **DTMF:** turn on/off DTMF.

Note: some menu options only happen under some specific circumstances. Such as: "Switch" only happens when there exists the calling and pending call at the same time.

4 Function Menu

4.1 The use of Function Menu

4.1.1 Scroll searching select function

- When standby estate, press menu enter function main menu.
- In all main menu or submenu, press up/down scroll to function you need, press left soft key enter option, press right soft key cancel.

4.1.2 Guide key function

By way of use more convenience, guide key has enter some menu quickly besides scroll searching.

- When standby interface, press up guide key enter music player.
- When standby interface, press down guide key write messages.
- When standby interface, press left guide key enter Profiles.
- When standby interface, press right guide key enter ring setting.

4.1.3 Exit menu

In function menu, you can press right soft key to exit a menu. Press hang up key to standby interface.

4.2 Function menu configuration

Function menu configuration as follows:

- 1 Phonebook
 - 1-1 Quick search
 - 1-2 Name search
 - 1-3 Add number
 - 1-4 copy all
 - 1-5 Delete

-
- 1-6 Call group
 - 1-7 Other number
 - 1-7-1 SIM card 1 local number
 - 1-7-2 SIM card 2 local number
 - 1-7-3 SIM card 1 service dialing number
 - 1-7-4 SIM card 2 service dialing number
 - 1-8 Setting
 - 1-8-1 Capacity Inquiry
 - 1-8-2 Storage Position
 - 1-8-3 Calling card Setup
 - 1-8-4 My calling card
 - 1-8-5 Calling edition
 - 1-9 Full Screen Caller
 - 1-10 Calls Ring
 - 2 Message
 - 2-1 SMS
 - 2-2 MMS
 - 2-3 Voice mail box
 - 2-4 Cell Broadcast
 - 3 Call center
 - 3-1 Call record
 - 3-1-1 SIM card 1 call record
 - 3-1-2 SIM card 2 call record
 - 3-2 Call setting
 - 3-2-1 SIM card 1 call setting
 - 3-2-2 SIM card 2 call setting
 - 3-2-3 Auto recall
 - 3-2-4 Dialing speed
 - 3-2-5 IP dialing
 - 3-2-6 More

4	Setting
4-1	Mode setting
4-2	Touch screen setting
4-3	Phone setting
4-3-1	Time and date
4-3-2	Timing on-off
4-3-3	Language
4-3-4	Preset input method
4-3-5	Screen setting
4-3-6	Greetings
4-3-7	Designate function key
4-3-8	Auto update time
4-3-9	Hand write setting
4-3-10	UART setting
4-3-11	3D effect
4-3-12	other setting
4-4	Network setting
4-4-1	SIM card 1 network setting
4-4-2	SIM card 2 network setting
4-5	Safety setting
4-5-1	SIM card 1 safety setting
4-5-2	SIM card 2 safety setting
4-5-3	Phone lock
4-5-4	Keyboard lock
4-5-5	Change password
4-6	Restore Factory
4-7	Sound effects
5	Multimedia
5-1	Camera
5-2	Album

	5-3 Film recorder
	5-4 Film player
	5-5 Music player
	5-6 Record
	5-7 FM Radio
6	File Management
7	Fun and games
	7-1 Sutra games
8	Profiles
	8-1 General
	8-2 Meeting
	8-3 Outdoor
	8-4 Indoor
	8-5 Earphone
	8-6 Bluetooth
9	Toolbox
	9-1 Calendar
	9-2 Memo
	9-3 Alarm Clock
	9-4 World time
	9-5 City search
10	Service
	10-1 STK
	10-2 WAP
	10-3 Accounting data
11	Extra
	11-1 Calculator
	11-2 Exchange Rate Conversion
	11-3 Stopwatch
	11-4 Electronic book

Note: Some menu only show in some special status.

4.3 Phonebook

You can use phonebook to saved some name, number, home number, company number and calling card very important. Select phonebook or press right soft key when standby interface from main menu, enter phonebook function.

Note: This handset can saved 500 numbers.

In phonebook you can look up quick search, name search, add number, copy all delete, call group, other number, setting, Full Screen Caller, Calls Ring option.

- **Quick Search:** Choose the option and enter Phonebook browser interface, and there is a search enter box on the bottom of the window. You can enter the corresponding information here to filter the recorded telephone numbers. The alternative search methods are: 1. Pinyin, 2. Stroke, 3. small letter, 4. Numerical, press the # key switch input method to achieve the search mode switching.
- **Search Name:** Search the records in Phonebook by name.
- **Add Number:** Add a new telephone number record into Phonebook, which can be stored in SIM card or the handset.
- **Copy All:** Copy all records in the handset or SIM card and you can copy the records from the handset to the SIM card 1 or from the SIM card 1 to handset, also, can copy the records from the handset to the SIM card 2 or from the SIM card 2 to handset and copy the records from the SIM card 1 to the SIM card 2 or from the SIM card 2 to the SIM card 1.
- **Delete:** Choose the option and delete the telephone number records. Choose the SIM card 1 and delete all telephone number records; Choose the SIM card 2 and delete all telephone number records ;choose the handset and delete all telephone number records in the handset's Phonebook; and choose Delete one by one and delete the telephone number records one by one.
- **Call Group:** There are five call groups in the handset for you, and you can change the name of each call group and set ringing bell, call picture and individual members of the call group.
- **Other Numbers:** You can view and modify the other stored numbers in SIM card, such as the SIM card 1 and 2 number, the SIM card 1 and 2 service number, an emergency telephone number of the SIM card 1 and 2 .
- **Setup:** Phonebook's setup function, including five sub-items: Capacity Inquiry, Storage Position, Calling card Setup, My Calling Card and name card edition.
 - **Capacity Inquiry:** the storage of SIM card and phone number records can be inquired.
 - **Storage Position:** choose the preferential storage position, the handset or SIM card.

-
- **Calling card Setup:** set up the content recorded (Calling card) in Phonebook of the handset.
 - **My calling card:** Editors and records detailed information of users
 - **Name card edition:** Choose name card edition.
- **Full Screen Caller:** choose the displayed picture when calling.
- **Calls Ring:** choose deferent ring of calls.
- 4.4 Message**
- Select "Message" menu enter submenu. If your network support, and you apply this operation from network supplier, you can receive/send Chinese, English message and MMS get across message service center.
- 4.4.1 SMS**
- 4.4.1.1 Inbox**
- This menu divide into SIM card 1 inbox and SIM card 2 inbox. Operation method is same as follows:
- Enter submenu to look up received SMS in inbox.
 - When you look up the message list, it will show the message's date, time and the other side's number or name (when the number in phonebook).
 - When look up the message list, you can use u/down scroll key to select last one or next one message.
 - After SMS list show in inbox, you can press OK key to read the content of message. You can press option to operate as follows:
 - Reply:** send a SMS to the current SMS sender.
 - Delete:** delete the current SMS.
 - Edit:** pick up the content of the SMS and enter the edit box.
 - Transmit:** transmit the SMS.
 - Copy to SIM card (mobile phone):** if this message is stored in mobile phone, copy it to SIM card. If the message is stored in SIM card, copy it to mobile phone.
 - Move to SIM card (mobile phone):** if this message is stored in mobile phone, moves it to SIM card. If this message is stored in SIM card, moves it to mobile phone.
 - Chat:** enter the chat room.
 - Delete all:** delete all SMS in Inbox.
 - Copy all:** copy all of the messages in SIM card to mobile phone, or copy all of the messages in mobile phone to SIM card.

Move all: move all of the messages in SIM card to mobile phone, or move all of the messages in mobile phone to SIM card.

Use phone number: pick up the phone number of the sender who sent the SMS, and you can dial it dial-up or save it in Phonebook.

Use link: link the bookmark **URL** in SMS.

4.4.1.2 Outbox

This menu divide into SIM card 1 inbox and SIM card 2 inbox. Operation method is same as follows:

- Enter outbox to look up your messages saved.

- After SMS list show in outbox, you can press OK key to read the content of message. You can press option to operate as follows:

Send from the SIM card 1: send SMS via the SIM card 1. You can choose multi-side or group send to send SMS to multi members.

Send from the SIM card 2: send SMS via the SIM card 2. You can choose multi-side or group send to send SMS to multi persons.

Edit: pick up the content of the SMS and enter the edit box.

Delete: delete the current SMS.

Copy to SIM card (mobile phone): if this message is stored in mobile phone, copy it to SIM card. If the message is stored in SIM card, copy it to mobile phone.

Move to SIM card (mobile phone): if this message is stored in mobile phone, moves it to SIM card. If this message is stored in SIM card, moves it to mobile phone.

Delete all: delete all SMS in Outbox

Copy all: copy all of the messages in SIM card to mobile phone, or copy all of the messages in mobile phone to SIM card.

Move all: move all of the messages in SIM card to mobile phone, or move all of the messages in mobile phone to SIM card.

Use phone number: pick up the phone number of the sender who sent the SMS, and you can dial it dial-up or save it in Phonebook.

Use link: link the bookmark **URL** in SMS.

4.4.1.3 Write Message

- Message network service, allow you to send word message to other handset. Please make sure setting message service center number before you write message.
- Enter submenu write message, press option to do as follows:
 - **Finished:** select this option means finished SMS input, you can operate next, select SIM card1 or 2.
 - **Insert Object:** insert a picture, ring and animation, etc. in the SMS.
 - **Text Format:** define the text format of the SMS.
 - **Insert phone number:** In the SMS insert arbitrary phone numbers.
 - **Insert name of phonebook:** In the SMS insert arbitrary name of phonebook.
 - **Insert bookmark:** In the SMS insert the preset bookmark of network.
 - **input Method:** change the input method for editing SMS.
- Write finished, press OK, it can send to other phone by send, save and send, saved, Multi-side Send or group send based on your scroll key.
 - 1.**Send:** send this information and select this option and enter the addressee's edit box. You can input phone number via the numerical keyboard, or you press Search and transfer Phonebook for selection, and press OK and send
 - 2.**Save and Send:** send this information and save it into Outbox.
 - 3.**Store:** not send the SMS, but store it into Outbox.
 - 4.**Multi-side Send:** send this SMS to multi of handset numbers.
 - 5.**Group Send:** select one group and send this SMS to all members of the group.

Note: SMS centers in some cities and regions do not support the SMS with more than 70 Chinese characters (or 160 English characters).

4.4.1.4 Common phrases

Some commonly used phrases can be stored in Common Phrase to avoid the duplication of each enter while sending SMS. After it is finished, choose Edit or Delete.

4.4.1.5 SMS setting

This menu divide into SIM card 1 inbox and SIM card 2 message setting. Operation method is same as follows:

- Enter submenu SMS setting
 - 1.**Mode Setup:** choose a suitable mode for your SMS. Enter the corresponding names, SMS center number, period of validity and SMS format settings of all modes.

2.Status Setup: set whether to open the message report or return path.

3.Capacity Inquiry: view the storage space of SIM card or handset mailboxes.

4.Storage Position: choose your handset or SIM card.

- Set SMS center number: please connect your network supplier, get the SMS service number. Like a SMS service center number of china mobile in shanghai is +8613800210500. Operate is select SMS center submenu, after input your number, press OK saved.
- Estate report: if you let estate report open, then if other side received or not received, SMS center will report estate.

Note: this function need the support of network supplier.

4.4.2 MMS

- **new multimedia message:** Create a new multimedia message, you can see the following option: receiver, making a copy for, making a close copy for, subject, editing the content.
- **Inbox:** view received MMS(the same operation as SMS inbox)
 - Lookup: view the current content of the multimedia message.
 - Answer: to answer the current sender , all the senders and receivers in the multimedia message .
 - Answer in SMS: answer the current MMS sender or all sends and receivers in SMS.
 - Answer to all the people: answer all the senders in the multimedia message.
 - Transmit: edit the relative information of the current multimedia message, transmit the current multimedia message.
 - Delete: delete current multimedia message
 - Delete all: delete all the multimedia message
 - Save as template: save current multimedia message as template.
 - Detail information: lookup the detail current information of the multimedia message, include sender, subject, date, time size etc.
 - Use item: select the number in multimedia message to dial or save.
- Outbox store the multimedia message when sent out not succeed. (the same operation as SMS outbox)
 - lookup: view the current content of the multimedia message.
 - send: resend current multimedia message.
 - delete: delete current message
 - delete all: delete all the parts in outbox.
 - Save as template: save current multimedia message as template

- detail information: lookup the detail current information of the multimedia message, include receiver, date ,time ,size etc.
- use item: select the number in multimedia message to dial or save.
- **Draft box:** Draft box store the multimedia message which is not prepared yet so as to amend and send again, after sending , the message will be stored to outbox after the multimedia message has been sent.
- lookup: view the current content of the multimedia message.
- send: send current multimedia message.
- edit: edit current message
- delete: delete current multimedia message
- delete all: delete all the parts in draft box.
- Save as template: save current multimedia message as template
- detail information: lookup the detail current information of the multimedia message, include sender, duplicate , substance ,date ,time ,size etc.
- use item: select the number in multimedia message to dial or save
- Preset message: Preset MMS in handset.
- Setting: set parameter about send and receive of MMS.
 - Edit setting:** correlative parameters setting of editing the multimedia message.
 - Send setting:** correlative parameters setting of sending the multimedia message.
 - Receive setting:** correlative parameters setting of receiving the multimedia message .
 - Filter:** filt some messages.
 - Server setting:** MMS network setting, default is China Mobile MMS..
 - memory condition:** lookup the situation of the space occupied.

4.4.3 Voice mail box

This menu divide into SIM card 1 inbox and SIM card 2 voice mail box. Operation method is same as follows:

- **Network Selection:** choose network
- **Preferential Network:** Pre-save several networks you like.

4.4.4 Cell Broadcast

This menu divide into SIM card 1 inbox and SIM card 2 cell broadcast. Operation method is same as follows:

- **Receiving Mode:** turn ON or OFF Receiving Mode of Cell Broadcast
- **Reading Message:** read received message from Cell Broadcast.

-
- **Language:** choose language of Cell Broadcast.
 - **Channel Setup:** Set Cell Broadcast Channel, including choose, increase, edit and delete.
- Note:** the service of cell broadcast and voice mail box all need the support of service supplier.
- 4.5 Call center**
- 4.5.1 Call records**
- This menu divide into SIM card 1 inbox and SIM card 2 cell call records. Operation method is same as follows:
- 4.5.1.1 Missed call**
- Enter submenu, you can look up the list of missed call.
- In call record interface, press OK key, you can look up particular message, include date, dialing time, number, times about the record.
- In particular message interface, you can operate when you press option.
- **Delete:** delete the record.
 - **Save:** save the number into SIM car or Handset.
 - **Dial:** dial the phone number.
 - **Edit:** edit the phone number and store it into Phonebook.
 - **Trasmmmit SMS:** send a SMS to current number.
 - **Trasmmmit MMS:** send a MMS to current number.
- 4.5.1.2 Dialed Calls**
- Enter submenu, you can look up the list of dialed calls.
- In call record interface, press OK key, you can look up particular message, include date, dialing time, number, times about the record.
- In particular message interface, you can operate when you press option.
- **Delete:** delete the record.
 - **Save:** save the number into SIM car or Handset.
 - **Dial:** dial the phone number.
 - **Edit:** edit the phone number and store it into Phonebook.
 - **Trasmmmit SMS:** send a SMS to current number.
 - **Trasmmmit MMS:** send a MMS to current number.

4.5.1.3 Received Calls

Enter submenu, you can look up the list of Received Calls.

In call record interface, press OK key, you can look up particular message, include date, dialing time, number, times about the record.

In particular message interface, you can operate when you press option.

- **Delete:** delete the record.
- **Save:** save the number into SIM card or Handset.
- **Dial:** dial the phone number.
- **Edit:** edit the phone number and store it into Phonebook.
- **Transmit SMS:** send a SMS to current number.
- **Transmit MMS:** send a MMS to current number.

4.5.1.4 Delete call record

Enter submenu to delete call record, select clean a call record list.

4.5.1.5 Call Time

In Call Time, there are four submenus: the Last Call Time, All Dialed Calls, All Received Calls and all Return-to-zero Timing.

- **Previous call time:** view the time value of the last call.
- **Total Dialed Calls:** view the total time value of the call out.
- **Total Received Calls:** view the total time value of Received calls.
- **All Time Return-to-Zero:** Clear up the data in timing stat and restart time.

4.5.1.6 Call cost

Call Cost can store the accumulated charge of call for you.

- **Previous Call Cost:** View the last call cost.
- **All Call Cost:** View all the accumulated call cost.
- **Call Cost Return-to-Zero:** Enter PIN2 code and clear the counter and restart to count the cost.
- **Cost Limit:** Enter the sub-menu **Cost Limit**, which can be browsed, modified or cancelled. Where, it is essential to enter PIN2 code if you want to modify and cancel.
- **Price and rate:** Enter the sub-menu price and rate, which can be browsed, modified or cancelled. Where, it is essential to enter PIN2 code if you want to modify and cancel.

Note: You need enter PIN2 code for operating some functions, and please contact your network supplier to receive the password.

4.5.1.7 SMS Counter

- **Sent:** record the sent SMS number.
- **Received:** record the received SMS number.

You can select the left soft key “reset” to empty the two items respectively.

4.5.1.8 GPRS Counter

- **Last Sent:** record the last sent size
- **Received:** record the last received size.
- **All transmit:** record all transmit size.
- **All received:** record all received byte.
- **Clear counter:** recount

4.5.2 Call Setting

4.5.2.1 SIM card 1 call setting

- **The phone number:**
 - **Pre-set System:** the system default value is used for whether to send the number.
 - **Hidden Number:** while calling, the other side can not see the number. (need the supplier's support)
 - **Sending Number:** while calling, the other side can see the number.
- **Call Waiting:** open or close Call Waiting. Choose Inquiry and view the current status of Call Waiting.
- **Call Forwarding:**
 - **Unconditional transfer:** open the unconditional transfer and any dialing call will be transferred to your set number under no circumstances.
 - **Contact not transfer:** after not contact transfer is opened, under the circumstances where the other side will not contact you, transfer the dialing call to your set number.
 - **Transfer without answer:** after transfer without answer is opened, under the circumstances where your handset has no answer, transfer the dialing call to your set number.
 - **Transfer when busy:** after transfer when busy is opened, when your handset is busy, transfer the dialing call to your set number.
 - **Transfer all the data calls:** when calls are the data calls, forwarding.

-
- **Cancel forwarding:** cancel all Call forwarding.
 - **Call Restriction:** restrict the dialing calls.
 - **Stop Call out:** restrict dial all calls, international calls and international except national calls .
 - **Stop Calling:** restrict all the incoming calls and roaming calls.
 - **Cancel Restriction:** cancel the set restriction (input the PIN2 code).
 - **Change Password:** change the Password.
 - **Line Handoff:** choose Line 1 or Line 2.
 - **Close Group:** close Group function.
 - 4.5.2.2 SIM card 2 call setting**
The same of SIM card 1.
 - 4.5.2.3 Automatic Re-dial**
After automatically redialing, each failed call will be automatically redialed.
 - 4.5.2.4 Quick dial**
You can select open or close.
 - 4.5.2.5 IP Dial**
 - 4.5.2.6 More**
 - **Call Time Display:** whether to display Call Time or not.
 - **Call Time Reminder:** at the end of minute, whether to reminder Call Time or not.
 - **Auto limit time:** can open or close auto limit time function.
 - 4.6 Setting**
This menu include kind of personal setting.
 - 4.6.1 Mode setting**
It has Double mode open, Only the SIM card 1 open, Only the SIM card 2 open, Flight mode.
 - 4.6.2 Touch screen setting**
 - 4.6.3 Phone setting**
 - **Time and date setup:** set date and time
 - **Time Zone setup:** set time zone of a city.
 - **Time /Date Setup:** set the current time and date.

-
- **Time format Setup:** set the display format of time and date.
 - **Timing on-off:** set time and open or close the handset within the set time.
 - **Language:** set the display language of handset menu.
 - **Preset input method:** choose a default input method.
 - **Standby menu display:**
 - **Wallpaper:** choose standby interface wallpaper.
 - **Screen protection:** choose a screen protecting picture for the main screen in standby interface and set the wait time.
 - **Animation for opening:** choose the animation picture for opening.
 - **Animation for closing:** choose the animation picture for closing.
 - **Display Time and Date:** open or close the current display time in standby interface.
 - **Display the phone number:** open or close to change the display the phone number in standby interface.
 - **Display Service provider name:** open to display the service provider name in standby status, or close.
 - **Greetings:** In standby interface Open or Close greetings. Greetings Content can be edited.
 - **Designate function key:** designate the quick enter menu via press direction keys in the standby interface.
 - **Auto update time:** open or close auto update time.
 - **UART setting:** choose the SIM card 1 or 2 serial port.
 - Other Setup:** set the brightness and the delay time of LCD backlight.
 - Note:** A part of function need the support of network supplier.
- #### 4.6.4 Network setting
- This menu divide into SIM card 1 inbox and SIM card 2 network setting. Operation method is same as follows:
- **Network Selection:** choose network
 - **Preferential Network:** Pre-save several networks you like.
- #### 4.6.5 Safety Setup
- **Safety setup of the SIM card 1**
 - **The SIM card 1 Lock:** whether the PIN code protect of the SIM card open or not.
- You can set safety options of your handset in the menu in order to prevent your handset or SIM card from being illegally used.

PIN code can be used to prevent your SIM card from being illegally used. If the current PIN code has been closed, choose Open and start PIN code protection, and your PIN code will be inquired before your handset starts next; if the current PIN code has been opened, choose Close and close PIN code protection, and choose Change PIN code and set new PIN code; please input the old PIN code, new PIN code and repeat the new PIN code in order in accordance with the reminder.

* Note: if PIN code is input continuously incorrectly to three times, the SIM card will be locked, when, you need PUK code to unlock SIM card. PIN code and PUK code can be offered to you with SIM card, if not, please contact your network supplier. The default PIN code is generally 1234, and please change it to your own set password as soon as possible.

- **Fixed Dial-up:**

When the function operates, the phone numbers in Fixed Dial-up table or of beginning with some certain digits can only be dialed. (Require SIM card support)

• **Mode:** open or close Fixed Dial-up function (input PIN2 code) .

• **Fixed Dialing List:** input the phone number of Fixed Dial-up.

Note: to open and close Fixed Dial-up function, it is necessary to input your PIN2 code. Please contact your network supplier to obtain PIN2 code. Open Fixed Dial-up and then enter the calling card which displays the numbers of Fixed Dial-up.

- **Restrict dialing:** restrict dialing out.

- **Change Password:** Change Password, including modifying PIN1 and PIN2 and phone password.

Note: part of functions is supported by your network supplier.

➤ **Safety setup of the SIM card 2:** the setup operation consult the safety of the SIM card 1.

➤ **Phone Lock:**

In order to prevent illegal usage, you can set password in your mobile phone. Once this function is chose, each time you power on your phone, you must input phone password, and you can unlock the phone only by this way, and then send or answer the call. Users can remove phone password, in this case, the phone can not prevent illegal usage.

- Input the mobile phone password, use the right soft key to clean error input, and press confirm to finish it.

For example, if the password of mobile phone is set to be 1122, input 1122.

Note: The default password is '1122', please change the password to your own as quick as possible. Suppose that you forgot your phone password, you must contact with your retailer or local authorized maintenance center to unlock your password.

➤ **Keypad Lock:**

Set the wait time of Keypad Lock. After setup, the keypad will be automatically locked when the handset is not used within the designated time.

-
- Lock the Keypad in standby status, press Left Soft Key firstly and then press # key.
- **Change password:** modify the phone password.
- Note:** A part of function need the support of network supplier.
- 4.6.6 Restore Factory**
Set the functions of your phone to default settings. (Different phones are resumed differently, the password is '1122').
- 4.6.7 Sound effect**
This function can set the balance, sound effects style, 3D sound effect.
- 4.7 Multimedia**
This function include as follows: camera, album, film recorder, film player, music player, recorder, FM radio.
- 4.7.1 Camera**
Your handset can take photograph, and select Camera menu and enter; and click the option key to take photograph.
- **Album:** enter the album.
 - **Camera Setup:** Set some parameters while taking a photograph, also include switching between main-camera and sub-camera.
 - **Photo Setup:** Set photo size and photo quality.
 - **White Balance:** To choose multifarious appropriate white balance mode.
 - **Profiles:** Choose Automatic or night mode.
 - **Special Setup:** To choose photographs of the effects of different modes.
 - **Picture frame:** choose a picture frame.
 - **Store Path:** Setup photographs default storage path.
 - **Restore Setup:** restore the setup to the default.
- 4.7.2 Album**
Select menu to enter album.
Press option enter:
- **Check:** zoom in preset photos.
 - **Browsing Mode:** change the check mode of photos in the album, and choose "Matrix" or "List" mode.
 - **Transmission:** use the picked photos as wallpaper, screen saver, on/off cartoon, head portrait of incoming call or MMS accessory.
 - **Rename:** change the filename of picked photos.

-
- **Delete:** delete the picked photos.
 - **Delete All of Files:** delete all of the photos in the album.
 - **Sorting:** sort the photos in the picked folders according to name, type, time or size.
 - **Storage Path:** change and choose the default path of reading and taking photos.

4.7.3 Film recorder

Your handset can record the animation; and select Animation recorder and enter; and click the OK key to enter the video.

Press option enter:

- **Recorder Setup:** choose the menu and set some relative parameters of the recorder.
- **File Setup:** set the relative parameters, such as film size, format and recorded time.
- **Special Setup:** you can select a special effect for you record.
- **Store path:** store it to your handset or memory card.
- **Restore Setup:** restore all setup to the default.

4.7.4 Film player

Select film player in menu.

Select the file you want to play in file list, press option enter:

- **Play:** play the currently chosen animation file.
- **Transmit:** send the current video to the phonebook, MMS, Bluetooth etc.
- **Rename:** Rename the currently chosen animation file.
- **Delete:** Delete the currently chosen animation file
- **Delete all files:** Delete all the currently chosen animation files.
- **Sort:** array the order of animation files (by name, type, time, size or no) .
- **Store path:** choose the storage position of the file, can store it in the handset or memory card.

Press play key to play the film when enter play interface.

Press "*"key enter play full screen, press that again cancel.

4.7.5 Music player

Select music player in menu enter mp3 play interface.

Press left soft key list enter play list, you can scroll search song to play.

In song list, press left soft key again enter setting of the song.

- **Play:** play the currently chosen song.

-
- **Detail:** View the detail of the song.
 - **Add a ring:** add the current song into the ring storage of profiles.
 - **Add :** add new item in play list.
 - **Delete:** delete the item from play list.
 - **Delete all:** delete all of the item in play list.
 - **Setup:** Set multimedia playing.
 - **List:** phone zone or memory card.
 - **Auto make list**
 - **Repeat:** replay a song.
 - **Random:** the order is random when playing.
 - **Play Background:** the music will not stop as the menu exits.
 - **Stereo sound output via Bluetooth:** open the function, sound output via Bluetooth can be used.
 - **Stereo Bluetooth earphone:** open the function can enjoy music via Bluetooth earphone.
 - **Sound effects setting:** can choose different music style after opening the balance..
 - **Lyric:** it can open or close when play songs.

4.7.6 Record

- Select the **record** to record. Press option to enter:
- **Record:** record one section of new voice.
 - **Play:** play the currently chosen record.
 - **Extra:** add one new section after the currently chosen record
 - **Rename:** rename the current record file.
 - **Delete:** delete the current record file.
 - **Delete All:** delete all record file.
 - **Set:** set record format.
 - **Transmit:** send the current record to the profiles or MMS, etc.

4.7.7 FM Radio

- Choose FM radio menu to enter, press 'option' key enter.
- **Channel list:** can edit channel, name, show on this list.
 - **Manual input:** directly input FM channel frequency.
 - **Auto search and setting:** Auto search FM channel, and auto update channel list.

-
- **Set:** can set play background and output to the handset loudspeaker.
- 4.8 File Management**
- Save user's file. Enter file option:
- **Open:** display the content of the folder.
 - **Create the data folder:** create a new data folder in the folder.
 - **Format:** format the folder.
- 4.9 Fun and Games**
- **Sutra games:** the handset provide several sutra games.
- 4.10 Profiles**
- User can select different profiles, and setting to several profiles. Handset provide 7 kind of profiles: general, meeting, outdoor, indoor, earphone, Bluetooth.
- 4.10.1 General**
- You can select open or personal setting.
- **Startup:** Choose Startup and enter the general environment.
- **Individual Setup:** Choose Personal Setup and enter the general mode to customize. Function as below:
- **Ring settings:** change the calls, alarm clock, open-close the phone, information and key sound.
 - **Volume:** here set the rings and the volume of keys.
 - **Ring methods:** select the ring, shaking, vibration and ring and ring after vibration several options.
 - **Ringtones types:** select one tone, continuous ring and gradual increase.
 - **Reminder tones:** open or close the alarm sound, errors, network linking sound and call linking these several sounds.
 - **Response mode:** any key can be set to receive this response mode.
- 4.10.2 Meeting**
- Operate it like the general profile.
- 4.10.3 Outdoor**
- Operate it like the general profile.
- 4.10.4 Indoor**
- Operate it like the general profile.

4.10.5 Earphone

Auto open this mode when insert earphone. Operate it like the general profile.

4.10.6 Bluetooth

When the handset is inserted, open the mode automatically. Operate it like the general profile.

4.11 Toolbox

The handset provide function of calendar, memo, alarm clock, world time and city search.

4.11.1 Calendar

Enter the agenda management sub-menu.

Press left and right keys to modify the date, and modify month by up and down keys. Press option enter submenu.

- **Calendar:** create a new schedule. And add an alarm clock reminder. You can choose one time, Daily, Customization, Every Week an Every Month five options.
 - **One time:** the schedule is reminded for one time.
 - **Daily:** the set hour daily is reminded.
 - **Customization:** set the ringing hour of the alarm clock in a week.
 - **Weekly:** the set hour weekly is reminded.
 - **Monthly:** the set hour monthly is reminded.
- **Add item:** add a new work.
- **Jump to the specified date:** jump to the specified date from the current date.
- **Week view/month view:** view exchange between week and month.
- **Lunar Calendar:** open or close lunar calendar.

4.11.2 Memo

This handset can save many memo message. Select memo in submenu, you can browse, add, edit, delete record, delete all, send.

4.11.3 Alarm Clock

This handset can set 5 alarm clock. Select one of it, you can edit and setting.

4.11.4 World time

Select world time in submenu, press left/right guide key to switch city and time zone.

4.11.5 City search

- It can show the land of other side when call coming.

-
- Input phone number or area number can search the land of number.

4.12 Service

4.12.1 STK

This function provide by network supplier. If SIM card and network supplier don't support the service, it can be used. Please connect network supplier for more message.

4.12.2 WAP

You handset support WAP service. You can visit service of your network supplier support. This service can let you get message like news, weather report, plane flight.

Note: GPRS service need the support of network.

- **Front page:** choose the front page, you can land in the frond page. The front page is the WAP site you have set in the setting. If you have not yet set, use the site set in advance by the manufacturer.
- **Bookmark:** choose bookmark, showing varies of the bookmarks in the bookmark list. Choose one of the bookmarks you need, you can carry out the operation of this bookmark in heading for, editing, deleting, deleting all the parts, adding new bookmark.
- **Web history:** under this submenu, list all the recent visit web record, for your convenience; choose the connection to visit the web directly.
- **Input website:** under this submenu, input the URL site of the WAP service.
- **Service inbox:** store the information from the service inbox.
- **Setting:** setting of browse relative content of the WAP service.
 - select SIM card
 - edit setting
 - browse option
 - service information setting
 - clear up cache
 - clear up personnel data
 - credit credence

➤ Online function describe:

- **Forward:** jump to the connected website.
- **Back:** return to last page.

-
- **First page:** jump to first page.
 - **Rearrange:** refresh the browsing web page.
 - **Add to Bookmark:** show bookmark existed. Select the bookmark you can connect to the web site, edit bookmark name or delete bookmark.
 - **Please input website:** connect to the website you want. you need input the point URL to directly connect.
 - **Service inbox:** read service inbox message.
 - **Cancel:** quit WAP browse window, return to main menu.

4.12.3 Accounting data

■ GSM accounting transmit: select one data enter:

- **Name:** edit and set the name of the account data file.
- **Number:** the dialing connection number of the current account data.
- **User account:** the dial service (not WAP gateway) account name.
- **Code:** the dial service (not WAP gateway) code.
- **Style of line:** choose the style of line, simulation or digital.
- **Speed:** choose right transfers speed.
- **Website:** IP address

■ GPRS: select one data enter

- **Name:** edit and set the name of the account data file.
- **GPRS connection:** input APN.
- **Account s of the user:** the dial service (not WAP gateway) account name.
- **Code:** the dial service (not WAP gateway) code.
- **Attestation mode:** set the attestation manner applied in the attestation of the identity of WAP.

4.13 Extra

4.13.1 Calculator

Your handset provide a calculator has 4 basal function for you.

Select calculator menu, press select enter.

- Input the numbers to be calculated with numbers 0-9 and input decimal with # key.
- Press the operator key on the screen to input the four operators +, -, x, ÷.
- Press the Right Soft Key and remove the recent enter or results by digit, and press the right soft key "Exit" to exit from

the calculator. Press the left soft key "Result" the calculated results.
* **Note:** The accuracy of the calculator is limited, as will generate rounding error, especially in addition to countless times.

4.13.2 Exchange Rate Conversion

Input the exchange rate before currency conversion, and then input the home or foreign currency values, after confirmation, and the value you need is shown in the other edit box.

4.13.3 Stopwatch

4.13.4 Electronic book

4.13.5 Bluetooth

This handset support kind of Bluetooth function:

Menu as follows:

- **Activate Bluetooth:** open or close the Bluetooth function.
- **Search wireless setting:** search the equipment of Bluetooth. Include: HSP and A2DP/GAVDP.

Note: Only Bluetooth earphone need search in this menu, other equipment: like handset, computer searching in "my equipment".

- **My equipment:** if connect Bluetooth equipment already, then it will show the position in "my equipment". Otherwise, "search new equipment" in "option", search other equipment besides Bluetooth earphone. Some menu function as follows when handset searched Bluetooth.
 - On-line: select a kind of service record.
 - Dropped: cut the service of on-line.
 - Equipment name: edit the Bluetooth equipment.
 - Delete: delete on-line.
 - Delete all: delete all on-line.
 - Service record: view the service record.
 - Searching new equipment: searching new equipment. Besides Bluetooth.
- **On-line equipment:** show the service name of on-line. And you can select cut service of you choose. For example: It has HSP A2DP/GAVDP function Bluetooth earphone, then it will show sound play service/earphone equipment service/hand free service. You can select one of it or all service.
- **Setting:** set to Bluetooth.

- **My Bluetooth:** show message about Bluetooth.

Setting shortcut key

Numeric key 3	def	
Numeric key 4	ghi	
Numeric key 5	jkl	
Numeric key 6	mno	
Numeric key 7	pqrs	
Numeric key 8	tuv	
Numeric key 9	wxyz	
* key	Press * key to provide symbol marks	
# key	Switch input method	
Up scroll key	Page up or select Pinyin	
Down scroll key	Page down or select Pinyin	
Left Scroll Key	Scroll left or select Pinyin	
Right Scroll Key	Scroll right or select Pinyin	
Left soft key	Confirm	
Right soft key	Back	
Hang up key	Back to standby interface	

The general operation sequence for Pinyin input is:

- Enter Pinyin Letter: Press 2-9 digital keys to input Pinyin letters;
- Scroll through and Select Pinyin: to select Pinyin via Scroll key, press Right Soft Key to delete the last entered Pinyin, exit input via press Hang Up Key;
- Scroll through and Select Chinese characters: Up or Down scroll keys page up or down, Left or Right scroll keys scroll left or right to locate the desired Chinese characters, press Left Soft Key to select the words;
- Select associated word: Up or Down scroll keys page up or down, Left or Right scroll keys scroll left or right to locate the desired Chinese character, Left Soft Key to select the words.
- Edit the entered words: Left or right scroll keys move the cursor left or right, Up or Down scroll keys move the cursor up or down. Press Right Soft Key to delete a Chinese character.
- Switch Input Method: in text edit status, press # key to switch the input method, you can switch pinyin, capital

-
- English, lowercase English and number input, there is a prompt on the upper left corner of the screen.
 - Symbol Input: press the * key to appear Symbol Input.
 - Repeatedly press each key until the desired characters or words appear, scroll key to select the desired words, Left Soft Key to select the characters or words.
 - With the # key switch input method.
 - Delete the misinputted letter using Right Soft Key.

5.3.2 Stroke Input Method

The exact definitions for each key in Stroke Input Mode are below:

Key Name	Corresponding Character or Function	Description
Numeric key 0	—	
Numeric key 1	Horizontal stroke	—
Numeric key 2	Vertical stroke	
Numeric key 3	Left-falling stroke	/
Numeric key 4	Dot stroke, right-falling stroke	\
Numeric key 5	Horizontal-turning stroke	View the attached drawing
Numeric key 6	Asterisk	Asterisk
* key	Press * key to provide symbol marks	
# key	Switch input method	
Up scroll key	Page up	
Down scroll key	Page down	
Left Scroll Key	Scroll left	
Right Scroll Key	Scroll right	
Left soft key	Confirm	
Right soft key	Back	
Hang up key	Back to standby interface	

Attached drawing:

1	2	3	4	5	6
一 丿	丨 丿	㇏	丶	㇏ ㇏ ㇏ ㇏	?

The general operation sequence for stroke input is:

- Press corresponding numeric keys according to the standard orders of strokes to enter strokes, your handset will display the related Chinese characters for selection. Chinese character's radical can be entered in this mode, press Left Soft Key to select the radical, Right Soft Key to delete the last stroke.
- Scroll through and Select Chinese characters: Up or Down scroll keys page up or down, Left or Right scroll keys scroll left or right to locate the desired Chinese characters, press Left Soft Key to select the words.
- Select associated word: Up or Down scroll keys page up or down, Left or Right scroll keys scroll left or right to locate the desired Chinese character, Left Soft Key to select the words.
- Edit the entered words: Left or right scroll keys move the cursor left or right, Up or Down scroll keys move the cursor up or down. Press Right Soft Key to delete a Chinese character.

5.3.3 Manual input method

The general operation sequence for manual input method is:

- Use the touch pen to write character, letter and number according to Chinese or letter's Standard stroke of character orders, and you can use the touch pen to select character and sign down screen.
- Edit the input word already: Left or right scroll keys move the cursor left or right, Up or Down scroll keys move the cursor up or down.
- Press Right Soft Key to delete a Chinese character.

5.3.4 Aptitude English text Input Mode

The exact definitions for each key in aptitude English Input Mode are below:

Key Name	Corresponding Character or Function	Description
----------	-------------------------------------	-------------

Numeric key 2	Abc	
Numeric key 3	Def	
Numeric key 4	Ghi	
Numeric key 5	Jkl	
Numeric key 6	Mno	
Numeric key 7	Pqrs	
Numeric key 8	Tuv	
Numeric key 9	wxyz	
*key	Press * key to provide sign input	
#key	switch input method	
Up scroll key Down scroll key	Move cursor up	
	Move cursor down	
Left Scroll Key Right Scroll Key	Move cursor to left	
	Move cursor to right	
Left soft key	Confirm	
Right soft key	Back	
Hang up key	Back to standby interface	

General operation methods for aptitude English text Input as below:

- Each key is used for entering multi-character. Repeatedly press each key until the desired characters appear. Enter the next character after the cursor move.
- With the # key switch input method.
- Press * key to provide sign input.
- Delete the misinputted character using Right Soft Key.

5.3.5 English text and number Input Mode

The exact definitions for each key in English and Number Input Mode are below:

Key Name	Corresponding Character or Function	Description
----------	-------------------------------------	-------------

Numeric key 1	. , - ? ! ' @ : # \$ % / - 1	
Numeric key 2	ABCabc2	
Numeric key 3	DEFdef3	
Numeric key 4	GHIghi4	
Numeric key 5	JKLjkl5	
Numeric key 6	MNOmno6	
Numeric key 7	PQRSpqrs7	
Numeric key 8	TUVtuv8	
Numeric key 9	WXYZwxyz9	
Numeric key 0	0	
*key	Press * to provide symbol marks	
#key	Switch input method	
Up scroll key	Move cursor up	
Down scroll key	Move cursor down	
Left soft key	Confirm	
Right soft key	Back	
Hang up key	Back to standby interface	

General operation methods for English text input as below:

- Each key is used for entering multi-character. Repeatedly press each key until the desired characters appear. Enter the next character after the cursor move.
- With the # key switch input method.
- When you need a spacebar, please press Key 0 once in Capital or small letter status.
- Delete the wrong input characters using Right Soft Key.

FCC Warning

We declare that:

※ The product is installed with battery separately in the box. The FCC ID label is placed on the mobile phone clearly visible to all persons at the time of purchase.

※ The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

※ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

※ Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.

※ Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications

※ Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of

scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless fixed phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power.

