

---

# **Digital Color Screen Mobile Phone**

## **User Manual**

---

## Contents

<b>1</b>	<b>BASIC KNOWLEDGE</b>	<b>4</b>
1.1	INTRODUCTION	4
1.2	SAFETY INFORMATION	4
1.3	SAFETY AND HEALTH PRECAUTIONS	4
1.3.1	<i>General guideline</i>	4
1.3.2	<i>Mobile phone guideline</i>	4
1.3.3	<i>Batteries guideline</i>	5
1.3.4	<i>Charger &amp; accessories</i>	5
1.3.5	<i>Cleaning &amp; maintenance</i>	5
1.3.6	<i>Others</i>	5
<b>2</b>	<b>BEFORE START</b>	<b>6</b>
2.1	PARTS NAMES & EXPLANATION	6
2.1.1	<i>Technical Parameters</i>	6
2.1.2	<i>Key pad description</i>	6
2.1.3	<i>Side keys</i>	6
2.1.4	<i>Using T-Flash Card</i>	7
2.2	BATTERIES	7
2.2.1	<i>Changing a battery</i>	7
2.2.2	<i>Charging a battery</i>	7
2.3	CONNECTING NETWORK	8
2.3.1	<i>SIM card</i>	8
2.3.2	<i>Insert and remove SIM card</i>	8
2.3.3	<i>Switch on/off</i>	8
2.3.4	<i>Unlock the SIM card</i>	9
2.3.5	<i>Unlock the mobile phone</i>	9
2.3.6	<i>Connecting to the network</i>	9
<b>3</b>	<b>BASIC FUNCTIONS</b>	<b>9</b>
3.1	MAKING A CALL	9
3.1.1	<i>Domestic call</i>	9
3.1.2	<i>Fixed line &amp; extension</i>	9
3.1.3	<i>International call</i>	10
3.1.4	<i>Calling from call history</i>	10
3.2	EMERGENCY CALL	10
3.3	ANSWERING A CALL	10
3.4	CALL TIME	10
3.5	OPTIONS DURING A CALL	10
<b>4</b>	<b>FUNCTION MENU</b>	<b>11</b>
4.1	USING THE FUNCTION MENU	11
4.1.1	<i>Accessing function menu by scrolling</i>	11
4.1.2	<i>Accessing function menu by navigating key</i>	11
4.1.3	<i>Using Shortcuts</i>	11
4.1.4	<i>Exit Menu</i>	11
4.2	MENU FUNCTION	11
1	<i>Phone book</i>	11
2	<i>Messages</i>	12
3	<i>Call center</i>	12
4	<i>Organizer</i>	12
5	<i>Fun &amp; Games</i>	12
6	<i>Services</i>	12
7	<i>Multimedia</i>	12
8	<i>Extra</i>	12
9	<i>Settings</i>	12
10	<i>User Profiles</i>	13
11	<i>ShortCuts</i>	<i>Error! Bookmark not defined.</i>
12	<i>File Manager</i>	13

---

13	FM radio.....	13
14	Audio Player.....	13
15	Vedio Player.....	13
16	Vedio Recorder.....	13
17	Camer.....	13
4.3	PHONE BOOK.....	13
4.4	MESSAGES .....	14
4.4.1	SMS.....	14
4.4.2	MMS.....	15
4.4.3	Voice Mail Server.....	15
4.4.4	Broadcast Message.....	15
4.5	CALL CENTER .....	16
4.6	<b>ORGNIZER ERROR! BOOKMARK NOT DEFINED.</b>	
4.6.1	Calendar.....	16
4.6.2	To Do List.....	16
4.6.3	Alarm.....	17
4.6.4	World Clock.....	17
4.6.5	Search City.....	17
4.7	FUN & GAMES.....	17
4.8	SERVICES.....	17
4.8.1	STK.....	17
4.8.2	WAP Service.....	17
4.8.3	Data Account.....	18
4.9	MULTIMEDIA.....	18
4.9.1	Image Viewer.....	18
4.9.2	Sound Recorder.....	18
4.10	EXTRA.....	18
4.10.1	Calculator .....	18
4.10.2	Currency Converter .....	18
4.10.3	Stopwatch.....	19
4.10.4	E-Book.....	19
4.10.5	Bluetooth .....	19
4.11	SETTINGS .....	19
4.11.1	Dual SIM Settings .....	19
4.11.2	Phone Setup.....	19
4.11.3	Network Setup .....	20
4.11.4	Security Setup.....	20
4.11.5	Restore Factory settings .....	20
4.11.6	Sound Effect .....	20
4.12	USER PROFILES .....	21
4.13	USING SHORTCUTS.....	21
4.14	FILE MANAGER.....	21
4.15	FM RADIO.....	21
4.16	AUDIO PLAYER.....	21
4.17	VIDEO PLAYER .....	22
4.18	VIDEO RECORDER .....	22
4.19	CAMERA.....	22
5	<b>INPUT METHOD .....</b>	<b>22</b>
5.1	GENERAL .....	22
5.2	KEYPAD DEFINITION.....	22
5.3	INPUT METHOD INSTRUCTION .....	22
5.3.1	Smart English input method.....	22
5.3.2	English and number input.....	23
5.3.3	Handwriting input method.....	24

---

# 1 Basic Knowledge

## 1.1 Introduction

- Thank you for choose our digital color screen mobile phone. By reading these guidelines before using your mobile phone you will have an overall knowledge of this phone set and understand its simple but outstanding functions.
- This phone set is designed for GSM/GPRS networks. On top of basic functions, it enables you to use name card style phone book, sound effect, clock/ alarm, agenda, unit conversions, health management, calculator, games, audio player, camera (optional), video recorder (optional), sound recorder and other functions. It serves your work and leisure time. Having unique interface and perfect feature designing this phone set meets all your expectation.
- Our phone set meets the GSM/GPRS standard and has the qualification from related organizations worldwide.
- Our company reserves the rights modifying the content in this Instruction without pre-notify.

## 1.2 Safety information

- Under the circumstance of stealing and lost, contact the telecom branch or sales outlet immediately.
- When you contact with telecom branch and sales outlet, it is necessary to provide them with IMEI number (printed on the back of the phone set, remove the battery to discover it). Please record the IMEI number and keep it safe for future use.
- To prevent miss usage of your phone set please take precautions such as:
  - Set the PIN number of the SIM card, and update it timely
  - When get of the cai ,please do not leave the phone set unattended, keep it with you or in the suitcase.
  - Set call barring.

## 1.3 Safety and health precautions

Read the guidelines before using your phone. Failure to comply with them may be dangerous.

### 1.3.1 General guideline

- Only use the approved batteries and charger. Other products may lead to leaking, over heat, exploding and fire
- Avoid violent drop, shake or hit to the mobile phone, otherwise damage or fire may occur.
- Do not place mobile phone, batteries or charger in or on the microwave oven or high pressure equipment. That may damage the mobile phone.
- Do not use mobile phone in potentially explosive or flammable atmosphere. Using mobile phone in such area could cause fire or explosion.
- Do not keep mobile phone in hot, humidity or dusty space.
- Keep mobile phone out of the reach of children. Do not let children play with mobile phone.
- Do not leave mobile phone on unstable or uneven place. Such condition may result in mobile phone falling.

### 1.3.2 Mobile phone guideline

- Switch off your mobile phone before boarding an aircraft or in hospital and any other facility where posted notices require you to do so. Mobile phone effects the electronic equipments and medication equipments. This phone set has auto switch on function, please check your alarm setting and make sure the phone set will not switch on automatically during the flight.
- Certain electronic equipment may not be shielded against the RF signals from our phone, such as hearing aid, pacemakers, other medical devices, fire sensor, auto gate and others. For the satisfactory operation of the equipment and for the safety of personnel, please consult the manufacturer or local sales outlet to discuss alternatives.
- Do not put hard pressure or hit on the screen. Rough handling can break the internal circuit board and the screen. The liquid from screen can dangerous human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- Do not modify or dismantle the mobile. Unauthorized modify or dismantle will result in damaging the mobile phone.
- In some cases, mobile phone has side effect to the vehicle carried electronic equipments. Please do not use mobile phone under that circumstance. Failure to observe these instructions may lead to the denial of legal right.
- Do not operate mobile phone with sharp object such as needle or ball pen. Sharp object will damage mobile phone or lead to malfunction.
- Please do not use mobile phone which wire is damaged. Otherwise it will dangerous the user.
- Please do not place mobile phone close to magnetic objects. Mobile phone can eliminate the information from disc, credit car and other cards.
- Please keep small metal objects away from mobile phone's ear phone. The speaker has magnetism and attract small metal objects which has potential to damage itself and the one who use it,
- Precipitation, humidity and liquids will corrode electronic circuits. Keep the phone dry.

---

### 1.3.3 Batteries guideline

- Please keep mobile phone away from fire. Fire will damage the batteries and lead to explosion.
- During changing batteries, hard pressure will cause the batteries leaking, over heated, explosion and caught fire.
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (wire line, clip) or necklace connect two terminals. Short circuit may damage the battery.
- Please do not weld the battery's terminal. Welding the battery will damage it.
- The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- Do not modify or dismantle the battery. Unauthorized modify or dismantle will result in damaging the mobile battery.
- Do not place batteries in or on the microwave oven or over heated places. That may damage the battery.
- During charging, using or storing, if batteries temperature rise, color change, or deformed, please stop using and replace with new battery.
- The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- If the battery liquid is leaking or smelly, please remove it from fire to avoid explosion.
- Please keep battery away from humidity. Humidity will cause over heat, corrosion of the batteries.
- Please do not leave the battery in hot places such as in a car in summer as you will reduce the capacity and life time of the battery.
- Please do not leave the battery on charger for over 24 hours

### 1.3.4 Charger & accessories

- Please charge with dedicated voltage. Using mismatched power will damage the mobile phone and charger.
- Short circuit charger is forbidden. It will cause electric shock and damage the charger.
- If the power line is damaged, please do not use the charger.
- Please keep the charger free from dust all the time.
- Keep charger away from liquid. Spilled liquid will dangerous the charger.
- If charger has close contact with liquid, take off the charger from socket immediately to prevent further damage.
- Do not modify or dismantle the charger. Unauthorized modify or dismantle will result in damaging the charger or personnel.
- Please do not charge in humidity place. Humidity will cause over heat, corrosion of the batteries.
- Do not touch the charger, power line or socket with wet hands. Doing so may give you an electric shock or damage the phone
- Do not store heavy article on top of power line or dismantle it. Doing so will cause electric shock and fire.
- Unplug the charger from socket before cleaning and maintenance.
- Take the terminal to unplug the charger. Pulling the power line to unplug will damage the charger and cause electric shock or fire.

### 1.3.5 Cleaning & maintenance

- Mobile phone, batteries and charger are not water proof. Please do not use them in humidity place such as shower room. Avoiding spilled by rain.
- Clean mobile phone, batteries and charger with soft fabric.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the mobile phone.
- Please clean the socket regularly. Dirt will make the charger malfunction.

### 1.3.6 Others

#### Mobile phone:

- Please always keep the phone at room temperature between 5°C~40°C and humidity between 35%~85%.
- Please keep mobile phone away from telephone, , Radio and other office electronic appliances. Mobile phone will have side effect over such equipments.

#### Batteries:

- Keep batteries away from direct sun shine. Keep batteries in cooling place with good ventilation
- Lifespan of batteries are limited. The stand by time of the batteries will be shortening after frequent charging. When the operation time is noticeable shorter than normal, the batteries are worn out. It is time to buy a new battery.
- Dispose of used batteries in accordance with location regulation. Always recycle. Do not dispose of batteries with normal daily waste.

#### Charger:

- Please do not charge in the following places: under direct sun shine, temperatures below 5°C or above 40°C place, humidity or dusty place, vibrate place, place close to , radio or other appliances.

## 2 Before start

### 2.1 Parts names & explanation

#### 2.1.1 Technical Parameters

Measurement: 110mm\*52mm\*19mm

Voltage: 3.7V

Maximum charging voltage: 4.2V


Standard Li-ion capacity: 1000mAh

Stand by time: about 120~150 hours

Call time: about 2~3 hours

Input : 100~240V 50/60Hz 200mA

#### 2.1.2 Key pad description

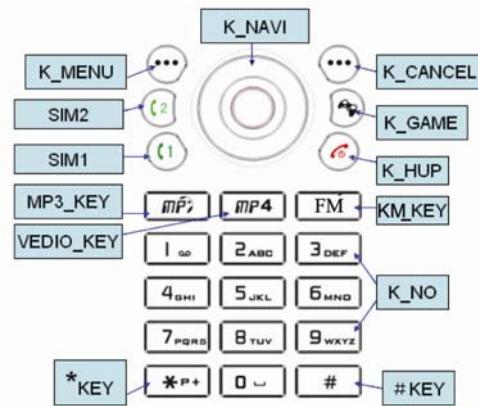

K\_MENU: Left soft key

In idle screen, press it to get into main menu.

K\_CANCEL: Right soft key

In idle screen, press it to get into phonebook menu.

K\_HUP: End

Press it to hung up a call, switch on/off mobile. Press it in edit screen to get back to idle screen.

K\_CALL: Send

Press it to make a call, answer a call; show call history in idle screen.

K\_NAVI: Navigate

Please see detail in 4.1.1.

K\_NO: Numbers

Input numbers and alphabets. 2-9 can be set as short cut and speed dial.

K\_STAR: Star

Input symbols, \*, P and +W.

K\_HASH: Hash

Press it to change the input method. In idle screen, hold it to switch between silence and normal mode.

**Attention:**

PRESS means press the key for short time then loosen it. HOLDING means press the key for more than 2 seconds.

#### 2.1.3 Side keys

Side key has short cut function:

- 1) Press left side key on the idle screen to using camera,
- 2) Press left up and down key on the idle to control the volume.

#### 2.1.4 Using T-Flash Card

At the right-bottom side, there is T-Flash Card slot. You can insert T-Flash card here.

Insert T-Flash card

- Slide down the fixture
- Insert card into the slot.
- Slide up the fixture.

Remove T Flash card

- Slide down the fixture
- Get card out.

## 2.2 Batteries


Batteries have been charged to 50% full. It can be used after unpack. The first three times batteries must be totally discharged before charging. It will help to prolong the batteries lifespan and working quality.

### 2.2.1 Changing a battery

Please follow the steps to remove the battery:

1) Push the back cover backward


2) lift the battery up to remove it

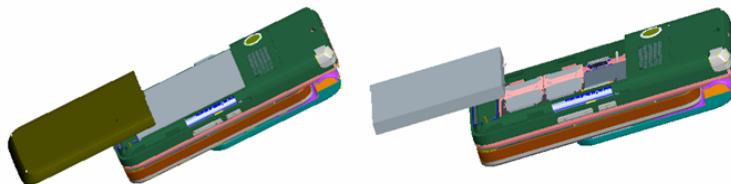


Please follow the steps to install a battery:

1) Place the top part of the battery to connect with grooves on the phone.

2) Push the battery downward till it clicks into place.

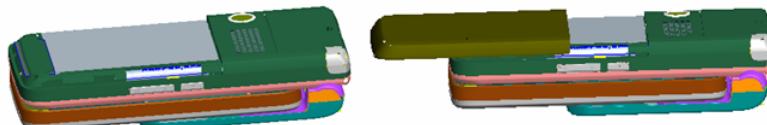

### 2.2.2 Charging a battery

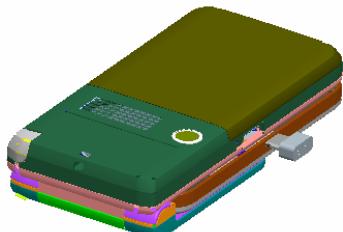

Plug the charger into the socket.

Connect the adapter into the right of the phone.

- Battery charging indicator sign will flash; if mobile phone is switch off during charging, the indicator sign will show on the screen. If the battery is too weak, the charging indicator sign will not show immediately after the charger plugs in.
- When charging indicator sign shows the battery is full and stop flashing, charging is finished. If charge when switch off, the screen shows charging finished. The charging will last for a few hours. It is normal that the battery, mobile phone and charger's temperature rise. Disconnect the mobile phone,

---

charger and socket after charging finish.

**Attention:**

- Please always charge the battery at place temperature between 5°C~40°C . Use only the supplied charger. Unauthorized charger may damage the phone and violate regulation and guarantee.
- When mobile phone switch off due to out of power or the indicator sign shows run low battery, charge the battery in time. Battery charging time depends on the remaining battery charge.
- The stand by time and call time of this mobile phone is tested in an idealistic environment. In reality it is greatly affected by the signal strength o the cellular network, working environment and other factors
- Do not remove the battery during charging. Please make sure the battery is in place before charging.
- When charging is finished, unplug the adapter from the power outlet and from the phone.
- If you do not unplug the adapter from the power outlet and from the phone, after 5 to 8 hours, the phone will start charging again due to the failure of battery power. We strongly suggest no to do so. It will shorten the lifespan of batteries.

## 2.3 Connecting network

### 2.3.1 SIM card

- Please insert the SIM card before switch on the mobile phone. SIM card is the key to GSM network.
- When you subscribe to a cellular network, the plug-in SIM card loaded with our subscription details such as your call history, call record, messages and others. SIM card can be removed and inserted into any GSM mobile phone ( new mobile phone can read SIM card simultaneously)
- The plug-in SIM card and its contacts can be easily damaged by scratches or bending, please keep SIM card away from electric, magnetic objects. Once the SIM card is damaged, it will loss the accessibility to GSM network.

**Warning:**


Switch off the mobile phone before remove the SIM card. It is forbidden to remove the SIM card when the power resource is connected.

### 2.3.2 Insert and remove SIM card

Handle the SIM card with care.


Insert SIM card

- Switch off mobile phone and remove external electrical source.
- As shown on the picture, insert SIM card into the SIM car slot.

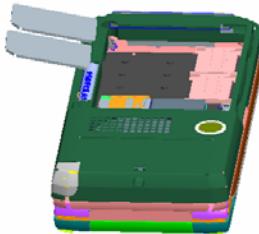

Remove SIM card

- Switch off the mobile phone and remove electrical source.
- As shown on the picture, slide the SIM card out from SIM card slot to remove it.

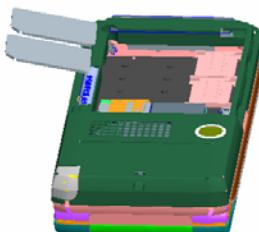

### 2.3.3 Switch on/off

To switch on the mobile phone, hold the END.

To switch off the mobile phone, hold the END

---

If the mobile phone is switched on without insert SIM card, please insert SIM card as instruction shown on screen. Mobile phone will run auto test once the SIM card is inserted.

The following messages will show in order

- Please key in the PIN1—if PIN is set for SIM card
- Please key in the password—if the password is set to unlock the mobile phone
- Searching for network—auto search for cellular network until connecting to network

#### 2.3.4    **Unlock the SIM card**

To eliminate unauthorized usage, SIM card can be locked by adding PIN1 number. Once select this function, PIN1 must be inputted every time the mobile is switch on. If user does not set SIM card protection method, SIM card can not be protected from unauthorized usage.

- Press END to switch on.

Input PIN1 number, use right soft key to erase wrong input. Press Confirm to finish. For example, if PIN1 is 1234, then please input 1234.

If wrong input for 3 times, the SIM card will be locked by the network. It requests PUK1 number, if you do not know PUK1 number, please do not input yourself. Give the SIM card to cellular network service to deal. Detail information please refer Security setting

**Attention:**

The network supplier will set a standard PIN1 (between 4 to 8 digitals) for your SIM card. Please change it to your personal pass word. For detail please see Security setting

#### 2.3.5    **Unlock the mobile phone**

Please set pin number to protect your mobile phone from unauthorized usage. Once select this function, pin number must be inputted every time the mobile is switch on. If user does not set pin number protection method, the mobile phone can not be protected from unauthorized usage

- Input mobile phone password, use right soft key to erase wrong input. Press Confirm to finish. For example, if the password is 1122, then please input 1122
- If you forget the mobile phone password please contact the local sales branch or service centre to unlock the mobile phone. (Default mobile phone password is 1122)

#### 2.3.6    **Connecting to the network**

After the SIM card is unlocked, the mobile phone searches for network service. Once connected, the cellular service provider will show on the centre of the screen. The mobile phone is at idle stage and can make or receive a call

- Press right soft key to go into phonebook
- Press left soft key to go into functional menu

**Attention:**

If ONLY EMERGENCY shows on the screen, it means you are not in the service area of the network only the EMERGENCY call can be connected.

### **3    Basic functions**

#### **3.1    Making a call**

When cellular network service provider shows on the screen, you can receive or make a call through network. The received signal strength is shown on the up left corner of the screen (maximum 5 lines—best signal condition)

The quality of network connection is affected by the environment. Moving within small scale can improve the network connection quality.

##### **3.1.1    Domestic call**

Use the Number key to input the phone number then press Send key to make connection. Press Right soft key to delete symbols or number. The image is showing on the screen during connecting. The current calling status is also showing on the screen.

Press END to end a call

##### **3.1.2    Fixed line & extension**

Call the switch board first then dial the extension number. If key in P (Pause) between the switch board number and the extension number, the mobile phone will finish the whole process and connects with the extension directly. Press \* key to input P.

Country code    switch board number P    extension number    Send key

---

Sample for Pause.

If you have voice mail service with 8880000 the box number is 6666 and pass word as 8888, you dial 8880000 P 6666 P 8888.

The first part of this number is dialing the voice mail service

After connecting, 6666 to the right voice mail box.

Before key in the pass word, the second Pause key P will cause 5 seconds delay then send in 8888 pass word.

### 3.1.3 International call

To dial an international call press \* key until the + sign show up on the screen. This will enable you to dial an international call at anywhere even without knowing the pre fixed country code.

After that input the country code and the number you want to dial. Country code follows the common regulation such as 49 for Germany, 44 for UK, 46 for Sweden.

Take off the 0 before regional code when dial the international call.

Calling from other country for ShangHai service: +86 21 114

+ country code phone number Send

### 3.1.4 Calling from call history

Every number you dial or receive will be saved in Call history record. The newest record is on top of the list. They are segregated by Dialed number, Received number and Miss Call. The mobile phone provides the options to search for all record. When the memory status is full, the oldest record will be deleted. To search for record please:

- To see the Dialed number press Send Key
- Select the number you want to dial in the call history record, and press Send Key to make a call directly.

Once in the call history record, press OK to show the detail. After selecting the number press Save to transmit the number into phonebook directly.

## 3.2 Emergency call

If you are in the area covered by network service, you would be able to make Emergency call. If the cellular network service does not cover that area, ONLY EMERGENCY shows on the screen. That means you are not in the service area of the network only the EMERGENCY call can be connected. If you are in area covered by network service, the Emergency call can be made without inserting SIM card.

## 3.3 Answering a call

If any key to answer is switched on, you can press any key to receive a call. Otherwise press Number key or Left soft key to answer a call. If the ear phone is connected, you can answer a call though ear phone.

## 3.4 Call time

To store the duration of last call and the accumulated call time.

## 3.5 Options during a call

Press Options Key to get into option menu during taking a call. The option menu is similar with Function menu. It is only possible to get into option menu during a call. The functions such as on hold, forward or making a multiparty call need network support. Please contact your network service provider for detail.

In option menu you can select among:

- **Hold:** Put the call on hold or recover it
- **End:** End the call
- **New Call:** Making a new call
- **Phone Book:** Get into phone book to search
- **SMS:** Edit and send a message
- **Sound Recorder:** Record the conversation
- **Mute:** Mute or send
- **DTMF:** Press Left soft key to switch on /off
- **H-Free:** To switch on the speaker to enlarge the volume
- **Multiparty call**
  - Switch: Keep switching between different parties
  - Meeting: To have a conference phone call
  - Transferring: Transfer current call to other phone
  - End A Call: To end the current call
  - End All Calls: To end all active calls
  - Phone Book: To get into Phone book Menu
  - SMS: To get into Message Menu
  - Sound Recorder: To record the conversation
  - Mute: To Mute or send the voice

---

- DTMF: To switch on/ off

**Attention:**

Some options are available under certain condition. Such as Switch only can be used when there are more than one call are connected at the same time.

## 4 Function Menu

### 4.1 Using the function Menu

#### 4.1.1 Accessing function menu by scrolling

- In Idle screen, press Menu to get into main menu or press K\_NAVI key to get into main menu.
- In all menus or sub menus, press UP or Down to find the function and press Left soft key to select the function. Press Right soft key to exit current menu.

#### 4.1.2 Accessing function menu by navigating key

To serve the user, navigating key can do search function and accessing menu function.

- In Idle screen, press Up navigating key to start Music Player
- In Idle screen, press Down navigating key to Write Message
- In Idle screen, press Left navigating key to User Profiles
- In Idle screen, press Right navigating key to tone setup

#### 4.1.3 Using Shortcuts

This mobile phone has 11 sets for shortcuts. In Main Menu select shortcuts to set up. Detail as follow: select a short cut function in Short cut Menu, press left soft key to edit, select a menu, press Left soft key to confirm.

Get into Setting Menu then into Phone setting Menu, find the functional key, select any key from UP, Down, Left, Right key as the short cut key. At Idle screen, press any key from UP, Down, Left, Right key to active short cut. Then select the right short cut to carry out the function.

#### 4.1.4 Exit Menu

In Function Menu, in general, you can press Right soft key to exit from current menu. Press End to get back to idle screen.

## 4.2 Menu function

The structure of the menus:

### 1 Phone book

Quick Search  
Search Entry  
Add New Entry  
Copy All  
Delete  
Caller Group  
Extra Other  
    Owner Number  
    Service Dial Number  
    SOS Number  
Settings  
    Memory Status  
    Preferred Storage  
    Fields  
    My vCard  
Caller Picture  
Caller Ring Tone  
Caller Video

---

## 2 Messages

SMS  
MMS  
Voice Mail Server  
Broadcast Message

## 3 Call center

Call History

## 4 Organizer

Calendar  
To Do List  
Alarm  
World Clock  
Search City

## 5 Fun & Games

Classic Games

## 6 Services

STK  
WAP Service  
Data Account

## 7 Multimedia

Image Viewer  
Sound Recorder

## 8 Extra

Calculator  
Currency Converter  
Stopwatch  
E-Book  
Bluetooth

## 9 Settings

Dual SIM settings  
Phone Setup  
Time and Date  
Schedule Power  
Language  
Preferred Input Method  
Display Characteristic  
Contrast

---

Greeting Text  
Speed Dial  
Dedicated Key  
Auto Update of Date and Time  
Flight Mode  
Handwriting setting  
Misc setting  
Network Setup  
Network Selection  
Preferred Network  
GPRS Connection  
Security Setup  
SIM1 security setup  
SIM 2security setup  
Phone Lock  
Auto Keypad Lock  
Change Password  
Restore Factory Settings  
Sound Effect

## 10 User Profiles

General  
Meeting  
Outdoor  
Indoor  
Headset  
Bluetooth

## 11 Shortcuts

## 12 File Manager

## 13 FM radio

## 14 Audio Player

## 15 Vedio Player

## 16 Vedio Recorder

## 17 Camer

### Attention:

Some menus only appear under circumstance.

## 4.3 Phone book

You can save names, mobile phone number, fixed line number, work place phone number and other information by Phone book function. From Main Menu, select Phone Book or press Right soft key on idle screen to get into Phone book directly

- Quick Search: select this option to get into phone book screen. There is an input space down the bottom of the screen. Input information as searching criteria. The searching methods are English and Number. Press # Key to switch between different input methods.
- Search Entry: to search record according to names in the phone book.
- Add New Entry: to add a new record into phone book. You can select to save in phone or to save in SIM card. The saving form is slightly different

- Copy All: to copy all record in phone or in SIM card. You can select from Phone to SIM card or from SIM card to Phone.
- Delete: to delete the record. Select to delete all record from SIM card or from Phone. Select to delete record one by one from SIM card or from Phone.
- Caller Group: this set provides 5 call groups for you. You can change the group name, ring tone, picture shown, or personal setting for each group.
- Extra Number: Extra numbers that saved in SIM card such as own number, service number and emergency number. You can select and edit.
- Settings: phonebook's setting has 4 sub menus: Memory Status, Preferred Storage, Fields, My vCard.
  - Memory Status: the memory status of SIM card and Mobile Phone
  - Preferred Storage: to select the prioritized place to save, SIM card or mobile phone.
  - Fields: to set the content of name card in phone book.
  - My vcard: edit owner's name card and send it.

## 4.4 Messages

### 4.4.1 SMS

#### 4.4.1.1 New Message

The phone will vibrate (if function is on) or have let out message tone (if function is on) when it received a new message, also show the picture on screen. If new message is not read, the reminder sign will show on the screen at idle screen and it is saved in SIM card or mobile phone automatically.

Number of messages that SIM card can saved is depends on the capacity of SIM card. To read new message, go into sub menu Mail Box, press OK to read new message There have SIM1 and SIM2 card ,the same to uses the two cards.

#### 4.4.1.2 Write Message

- Message service centre allow you to send or receive message through mobile phone. Please confirm that the service center's number is set before use.
- Go to sub menu Write New to write new message (detail see chapter 5). Press Options
  - Done: finished writing message, ready for next step
  - Use Template: to insert Idiom that saved before
  - Insert Object: inset picture, sounds, animations into the message
  - Format Text: define the format of the message text
  - Input Method: to change the input method during editing
- After finishing, press Yes, press Scrolling key to select send/save and send/ save/ send in group to send the message
  - Send Only: to send the message, select this option to get into receiver screen, press Number key to key in the number or search in phone book to find the number. Press yes to send
  - Save and Send: sending the message to receiver meanwhile save it in outbox.
  - Save: do not send but save the message in outbox
  - Send to Many: send the message to more than one receiver at the same time
  - Send by Group: select a call group and send the same message to all members of the group

**Attention:** some cities and regions do not support the message that is longer than 160 English letters.

#### 4.4.1.3 Inbox

- Go into Inbox to read the received messages. Go into outbox to read the saved messages.
- In Inbox, the date of receiving and the sender's name, number are also showing
- Use scrolling key to choose previous or next message.
- In Inbox menu, press Send to read the message or select options to :
  - Reply: reply the message to sender
  - Delete: to delete the current message
  - Edit: to edit the content of the message
  - Forward: to forward the message
  - Copy to Phone/ SIM card: to copy the message to Phone/SIM card
  - Move to Phone/SIM card: to move the message to Phone/ SIM card
  - Delete All: to delete all messages in Inbox
  - Copy All: to copy all from SIM card to phone or from phone to SIM card
  - Move All: to move all from SIM card to phone or from Phone to SIM card
  - Use Number: to edit the sender's number, to dial or to save to phonebook
- In Outbox menu, press Yes to read the message or to select options to:
  - Send: to send the message. You can choose send or send to groups
  - Edit: Edit the message content
  - Delete: to delete the message
  - Copy to Phone: to copy the message to phone
  - Move to Phone: to move the message to phone
  - Delete All: to delete all messages in Outbox
  - Copy All: to copy all from SIM card to phone or from Phone to SIM card
  - Move All: to move all from SIM card to phone or from Phone to SIM card
  - Use Number: to edit the sender's number, to dial or to save to phonebook
  - Save Objects: extract objects from the EMS and save it

#### 4.4.1.4 Template

- Save some frequent used terms to avoid typing in the same terms many times. It can be edited or deleted.

#### 4.4.1.5 Message settings

Finish message setting before using the function

- Go into Message settings menu
  - Profile Setting: select appropriate mode for message. Different mode has different setting for folder name, service center number, expired date, form and other features.
  - Common Setting: to set Reply pass
  - Memory Status: to show the memory status of SIM card or phone
  - Preferred Storage: to select to save in Phone or in SIM card
  - Pref. Bearer: to set the transmit method of message
- Set message service center number: please contact your network service provider for information. Select the Message service center Menu, input the service center number, press Yes to save setting
- Status Report: set the status report at ON, then you will be able to see the receiving status of the messages you have sent out.

**Attention:** this function is only available with service provider's support

### 4.4.2 MMS

- Write message: to add a new multi media message. Message includeTo, Cc, Bcc, Subject, Edit content.
- Inbox: to receive multi media message
  - Play: to play current selected multi media message
  - Reply: to reply picture message to the sender of the current selected message
  - Details: to find detail information about current selected message
  - Forward: to forward correct selected message
  - Save Image: to save the picture from current selected message
  - Save Music: to save music from current selected message
  - Get Number: to take the sender's number from message
  - Delete: to delete the current selected message
- Outbox: where to save the messages that have been sent
  - Forward: to forward the message to other receivers
  - Play: to play the current selected message
  - Details: to find detail information about current selected message
  - Delete: to delete the current selected message
- Draftbox: to save the message before sending; after sending the message will be moved to Outbox
  - Send: to send the current select message
  - Play: to play the current select message
  - Details: to find detail information about current selected message
  - Edit: to edit the current selected message
  - Delete: to delete the current selected message
  - Send then Save: to send and save the message
- Empty box: to empty the Inbox, Outbox, Draftbox or all message boxes.
- Message settings: to set the features for the multi media message's send and receive
  - MMS Setting: to set the network service
  - Memory Status: to show the memory status of the Picture message

### 4.4.3 Voice Mail Server

The voice mail messages are saved in the cellular network. To listen to the voice mail message, please dial the voice mail box number.

- Edit: to add/edit the voice mail box number to speed up when using the function
- Connect to Voice: to connect with the voice mail box to listen to the messages

### 4.4.4 Broadcast Message

- Receive Mode: to switch on/off the broadcasting function
- Read Message: to select the menu to access to the broadcasting message you ordered
- Language: to select the language for broadcasting
- Channel Setting: to select the channel for broadcasting

**Attention:** the broadcasting and voice mail box functions are provided by network service provider. Please contact your service provider for detail.

---

## 4.5 Call Center

### 4.5.1 Call History

#### 4.5.1.1 SIM1 call history

#### 4.5.1.2 SIM2 call history

Your mobile phone can save each 50 records for miss calls, received calls and dialed calls. Through this menu you can search for all history records

- Missed Calls: press OK to go into Miss calls menu
- Dialed Calls: press OK to go into Dialed calls menu
- Received Calls: press OK to go into Received calls menu

Under Call History Menu, press OK to see all detail information including: date, time, number, dialed times.

Under detail information menu, press Option to carry on the following functions:

- Delete: to delete the current record
- Save to phonebook/SIM: to save the number to SIM card or phone
- Dial: to dial the current number
- Edit: to edit the current number and save it into phone book
- Delete Call Logs: select to empty the selected call history folder
- Call Time: In call time menu, there are four sub menus: last call time, total sent, total received, reset all time.
  - Last Call Time: to show the duration of last call
  - Total Sent: to show the total duration of dialed call
  - Total Received: to show the total duration of received calls
  - Reset All Time: to restart time counting
- Call Cost: to calculate the cost of calls
  - Last Call Cost: Go into Last call Menu to see the cost of last call
  - Total Cost: Go into total cost Menu to see the total call cost
  - Reset Cost: In put PIN2 code ( with network support) to zero take the cost and restart cost counting
  - Max Cost: Go into Cost Limited to search, edit, or cancel the function. Among those, Edit and Cancel function need PIN2 code.
  - Price Per Unit: Go into Price and cost menu to search, edit or cancel the function. Among those, Edit and Cancel function need PIN2 code.

**Attention:** some functions need PIN2 code. Please contact the service provider to get the Pin code.

- SMS Counter
  - Sent: to count the messages those have been sent
  - Received: to count the messages those have been received

You can press Left Soft key to empty it

- GPRS Counter
  - Last Sent: to record the bites of last uploading
  - Last Received: to record the bites of last downloading
  - All Sent: to record the total amount of bites have been uploaded
  - All Received: to record the total amount of bites have been downloaded
  - Reset Counter: to start counting again

★The same to uses SIM1 and SIM2.

## 4.6 Organizer

The functions include calendar, to do list, alarm , world clock and search city .

### 4.6.1 Calendar

Going to Calendar menu, press OK to show date. Use up, down, left and right key to select Date and Month. Press Option to go into sub menu

- View task: set a new task and add an alarm clock as reminder. You can choose Once, Everyday, Day, Weekly and Monthly.
  - Once: only remind once for this task
  - Every day: remind everyday at set time
  - Day: to set the time for alarm to ring during a week
  - Weekly: remind once a week at set time
  - Monthly: remind once a month at set time
- Go to weekly view: view as once a week.
- Jump to date: jump to selected date from current date.

### 4.6.2 To Do List

Support many to do list items. You can View, Add, Edit Task, Delete Task, Delete All , Send vCalendar on an selected item.

---

#### 4.6.3 Alarm

5alarm clocks can be set: select an alarm clock to edit and set.

#### 4.6.4 World Clock

Select World Clock in sub Menu, press left/right navigate key to switch between cities and time zones.

#### 4.6.5 Search City

- Search the caller's city when call incoming.

Search the city of the phone number that you inputted

### 4.7 Fun & Games

- Classic Games: this mobile phone has many classic games

### 4.8 Services

#### 4.8.1 STK

This function is provided by network service provider. If SIM card and network service provider do not support this function, this function does not work.

#### 4.8.2 WAP Service

The mobile phone supports functions based on WAP. You can visit the services that are supported by your network service provider. Such services can serve you with news, weather forecast, flight information and others.

Attention: GPRS service need network support. Only available when the mobile is switch on and stays within GPRS network coverage.

- Homepage: to surf homepage. Homepage is the WAP connecting point that you have set for active connection. If no setting is done, the setting by vendor is default setting
- Bookmark: to show all bookmarks. Select it to link with bookmark's website
- Recent Pages: to show all history record that you have visited.
- Enter Address: select it to input any WAP address or other website address.
- Service Inbox: where to save news sent by service provider
- Settings: to set internet surf
  - Edit Profile
  - Browser Options
  - Service Message Setting
  - Clear Cache
  - Clear Cookies
  - Trusted Certificates
- Online function
  - Go to: go to the linked address
  - Back: go back ward
  - Set as homepage: to set current page as homepage
  - Add bookmark: add address to bookmark
  - Visit homepage: to visit homepage
  - Please input URL: You can connect with any address. To do that please input URL directly
  - Bookmark information: to show all bookmarks. Press Select to link to the current bookmark address, edit bookmark, edit address or delete the bookmark.
  - Exit: exit WAP page and return to main menu

### 4.8.3 Data Account

#### ■ GSM Data

Select an account to go in

- Account name: select to edit account name
- Number: to show account number
- Username: server's account
- Password: server's password
- Line type: analogue or ISDN:
- Speed: to select the speed for transmit
- DNS: IP address

#### ■ GPRS

Select an account to go in

- Account name: select to edit account name
- APN: input APN
- Username: server's account
- Password: server's password
- Auth. Type: to select authentication type

## 4.9 Multimedia

This function includes: Image viewer and sound recorder.

### 4.9.1 Image Viewer

Go to Album.

### 4.9.2 Sound Recorder

Select to record sound. Press Left song key to select

- Record: to record a new sound
- Play: to play the selected file
- Append: to add new extended part to the selected file
- Rename: to rename the selected file
- Delete: delete current file
- Delete All: select all files
- Settings: to set the parameters for sound record

Forward: forward current file to Mode

## 4.10 Extra

Include calculator, , currency convector, Stopwatch, and E-Book.

### 4.10.1 Calculator

This calculator has four basic functions. Select Calculator menu, press Select to go in

- Use 0-9 number keys to input the number, use # key to input the dot ‘.’
- Press touch screen icon to input +, -, x, ÷
- Press Right soft key to clear off the input or result. Press Right soft key to return. Press Left soft key to make calculation

**Attention:** the calculator's accuracy is unprecise, it may has deviation especially in dividing.

### 4.10.2 Currency Converter

To convert currency please input the exchange rate first then input local currency or foreign currency amount, press Left soft key to show the result

---

#### 4.10.3 Stopwatch

support stop watch.

#### 4.10.4 E-Book

#### 4.10.5 Bluetooth

- There are many bluetooth arrounding us, such as mobile phone, computer, bluetooth headset and so on.
- It is compliant with Bluetooth wireless technology::
- HSP( Bluetooth headset to make phone call), A2DP/GAVDP(Stereo music function): These two functions are used on bluetooth headset. Please pay attention to the product instructions, as many bluetooth headset only supports one of these functions.
- FTP(Change data via Bluetooth wireless technology with other moblie phone)
- SPP(Change data via Bluetooth wireless technology with computer)
- DUN( Connecting to internet when connecting to computer)
- The menus are as follows:
  - Power: open or close the bluetooth of the mobile phone.
  - Inquiry Audio Device: search for bluetooth audio headset, that is the opening bluetooth headset. The device include HSP and A2DP/GAVDP.
  - Ation: Bluetooth headset can open on this menu, and other device should open from "My device".
  - My Device:
    - There are the name of the connected devices in My device when connected to bluetooth device. Or else you can choose" Option -> Inquiry New Device" to search bluetooth device. There are these menus as follows after connecting to bluetooth device:
    - Connect: choose a service to record connecting;
    - Disconnect: disconnect the connected service.
    - Rename: edit the name of the bluetooth.
    - Delete: disconnect the connecting device.
    - Delete All: disconnect all the connected device.
    - Service List: view the service list.
    - Inquiry New Device: Inquiry new bluetooth device except bluetooth headset.
    - Active Device: Display the connecting service name and choose to disconnecting choosing device..
    - Setting: set the bluetooth functions of this mobile phone.
    - Visibility: open or close.
    - Change Device Name.
    - Authentication: After switch on, it needs to authentication when other device connecting to.
    - Audio Path: choose the sound source when bluetooth connected.
    - FTP: set the path and permission of the bluetooth working folder.
    - About: display the bluetooth info.

### 4.11 Settings

This menu includes many personal setting to the phone.

#### 4.11.1 Dual SIM Settings

Use this function Dual SIM open,Only SIM1 open,Only SIM2 open, Flight mode.

#### 4.11.2 Phone Setup

- Time and Date: to set the date and time in mobile phone
  - Set Home City: to select a city for the time setting
  - Set Time/Date: to set current time and date
  - Set Format: to select a format to show the time, 12 hours or 24 hours
- Schedule Power On/Off: to set the time that the mobile phone will be switch on/off automatically
- Language: to select the language that will be used
- Preferred Input Method: to select a default input method

---

- Display Characteristic
  - Wallpaper: to select the wallpaper for idle screen
  - Screen saver: to select a screen saver for idle screen and the default time setting
  - Power On Display: to select 3D to display at switch on. It could be default setting or downloaded
  - Power Off Display: to select 3D to display at switch off. It could be default setting or downloaded
  - Show Date and Time: to select switch on/off the display of time and date on idle screen
  - Show Owner Number: to select whether to display own number on idle screen.
  - Show Operator Name: to select whether to display the Operator's name on the idle screen
- Greeting Text: to select whether to display a greeting at switch on screen
- Speed dial: to set the speed dial method. Hold the number keys at idle screen can get connected with pre set receiver
- Dedicated key: to set the function of direction keys in idle screen.
- Auto Update Date and Time: to select switch on/off the auto update function
- Flight mode: can select among normal mode and flight mode when switch on.
- Handwriting: to set handwriting speed and pen color.
- Misc Setting: to set the LCD backlight

#### 4.11.3 Network Setup

- Network Selection
  - Automatic: auto search the network which the SIM card belongs to
  - Manual: manual search all current available network and do manual registration
- Preferred Networks: pre save the preferred networks
- GPRS Connection: the GPRS connection method

#### 4.11.4 Security Setup

- SIM Lock: Choose security setting under this Menu to avoid unauthorized usage of mobile phone or SIM Card.  
PIN number setting can avoid unauthorized usage of SIM Card
- If PIN number is switched off, choose ON to select PIN number protection. Next time when you switch on mobile phone, it will ask for PIN number: If PIN number is switched on, choose OFF to cancel PIN number protection. Choose Change PIN Number to set new PIN Number. Please follow the instruction to input old PIN number, new PIN number and retype new PIN number.

Attention: If PIN number has been wrongly inputted for three times, the SIM card will be locked. PUK number is needed to unlock the SIM card. PIN number and PUK number could be provided at the same time to you. If not, please contact the network service provider. The default setting put PIN number is 1234, please set your own PIN number as soon as you receive the mobile.

- Phone Lock: Phone lock can avoid the unauthorized usage of your mobile phone.

Select Phone Lock to switch on the pin number protection. Next time when you switch on mobile phone, you will be asked for PIN number. Press it again to switch off the mobile phone PIN number protection

**Attention:** the default setting for mobile phone pin number is 1122. Please set your own mobile phone PIN number as soon as you receive the mobile.

- Auto Keypad Lock: Setting the waiting time to lock the keypad. After setting is done, the keypad will be auto locked after the setting waiting time  
Press right soft key then hash key to lock keypad manually on the idle screen( only the sim card is activated).
- Fixed Dial: With the SIM card's support, you can choose to dial only the limited phone number. When this function is on, only certain numbers in your phone book or only numbers start with the fixed numbers could be connected.

Going to Menu Fixed Dial:

- Mode: switch on/off of Fixed Dial(PIN number is needed)
- Fixed Dial list: input the numbers for Fixed Dial

**Attention:** to switch on/ off Fixed Dial function, the PIN2 number is needed. Please contact your network service provider to get PIN2 number. After switch on Fixed Dial, go into phonebook to show the fixed dial numbers.

- Barred Dial: on the contrast to Fixed Dial, you can set the barred numbers from calling.
- Change Password: to change the password. It includes setting for PIN, PIN2 and mobile phone password

**Attention:** partial functions need support from network service provider.

#### 4.11.5 Restore Factory settings

To restore factory settings, please input the initial password: 1122.

#### 4.11.6 Sound Effect

To set equalizer, in call background sound, audio 3D effect.

## 4.12 User Profiles

User can select different mode, and can define your own modes. This set of mobile provides 6 modes: general, meeting, outdoor, indoor, headset and bluetooth

- General
  - Activate: select to apply General mode
  - Customize: Select Customize to set the General mode. Available options are: tone set up, volume, alert type, ring type, extra tone, answer mode and LCF back light.
    - Tone Setup: to set tone for incoming call, alarm, switch on, switch off, open cover, close cover, message tone and key pad tone.
    - Volume: to adjust the volume for ring tone and key pad
    - Alert Type: to select alert type. There are ring, vibration only, vibra and ring, vibra then ring.
    - Ring type: select to single, repeat or ascending
    - Extra tone: to set reminding sound for special case: warning, error, camp on or connect.
    - Answer mode: to set Answer by any key is on/off
    - LCD backlight: to set time for LCD backlight
  - Meeting: Operating as General Mode
  - Outdoor: Operating as General Mode
  - Indoor: Operating as General Mode
  - Headset: Plug in headset to active this mode. Personal setting is as General Mode
  - Bluetooth: When connected to the bluetooth, the mode open automatically. Personal setting is as General Mode

## 4.13 Using Shortcuts

This mobile phone has 11 sets for shortcuts. In Main Menu select shortcuts to set up. Details as follow: select a short cut function in Short cut Menu, press left soft key to edit, select a menu, press Left soft key to confirm.

Get into Setting Menu then into Phone setting Menu, find the functional key, select any key from UP, Down, Left, Right key as the short cut key. At Idle screen, press any key from UP, Down, Left, Right key to active shortcut. Then select the right short cut to carry out the function.

## 4.14 File manager

Explore the saved files. Support different functions depending on file format

## 4.15 FM Radio

You can listen FM radio by this phone, select the menu of FM radio to use it

Choose option to

- Channel list: At most 20 channels.
- Manul Input: Input one channel by manul;
- Preset Auto Search: Auto search the channel.
- Settings: Set the background play and skin.

## 4.16 Audio Player

Select Audio player to go into MP3 screen. Functions are as follows:

- Up key: Play/Pause the music
- Down key: Stop playing
- Left key: select the previous song
- Right key: select the next song

Press Left soft key to go into play list, use the scroll to select songs to play.

In Song list screen, press Left soft key to do setting for songs.

- Play: play the selected songs
- Detail: to see detail information for selected song
- Add To Rings: to add this song to rings tone in Mode setting
- Refresh List: to refresh the play lists.
- Settings: to do setting for multi media player.

- Play List: memory status for mobile phone or SIM card
- List Auto Generation: generation music list automatically or not
- Repeat: Select to replay the song
- Shuffle: select to play randomly
- Background play: select to play music even after exit this menu
- BT Stereo Output: select to play music Bluetooth stereo output
- BT Stereo Headset:select to use BTstereo headset
- Equalizer: select to play music model
- Lyrics Display:select to play music Lyrics display On/Off

## 4.17 Video Player

Select Video Player menu to go in video player

Select the file to be played in folder. Press OK

- Play: go into play screen
- Forward: forward the file to phonebook, screen saver, power on/off display
- Rename: to rename the files
- Delete: to delete the selected files
- Delete All Files: to delete all saved files
- Sort: to set the logic for sorting
- Storage: to select the pass to store or to read, either from mobile phone or from SIM card

Press '2' key and '5' key to change volume.

- Select Play to start after get into play screen. Press \* key to play in full screen, press \* again to exit from full screen.

## 4.18 Video Recorder

If your mobile phone supports video recorder function, select Video Recorder to get into menu, press K\_NAVI to record video.

- To Player: select to going to video player to play recorded video
- Camcorder Setting: to set related parameters for camcorder
- Video Setting: to set video parameters
- Effect Setting: to set video effects
- Storage: to select saving pass to mobile phone or SIM card
- Restore Default: to restore default setting

## 4.19 Camera

Select Camera to go into menu. Press K\_NAVI to take a photo.

Press Option to go into:

- Album : go to album
- Camera Setting: to set related parameters for photo taking
- Image Setting: to set photo's size and quality.
- White Balance: choose a light mode for photo taking.
- Effect Setting: to choose screen style.
- Add Frame: to choose frame.
- Cont Shot : to choose continuous shot, after selecting, press K\_NAVI key to make continuous shot.
- Delay Timer: to select whether to delay photo shot.
- Storage: to select saving pass. To mobile or SIM card.
- Restore default: to restore default setting.

# 5 Input Method

## 5.1 General

It supports normal English input method, smart English input method, number input method , handwriting input method, smart Pinyin input method, simplified Chinese input method and symbols input method.

## 5.2 Keypad definition

General keypad definitions are as follow: (for detail input keypad definition please refer Input method instruction)

Left soft key: to confirm, Right soft key: to delete a letter

Scrolling key: to move the cursor up, down, left, right or to see last or next page to select the letter.

#key, press it to switch between different input methods

\*key: to select Symbols

0-9 number keys: represents the letters on that key.

## 5.3 Input method instruction

### 5.3.1 Smart English input method

Definition of keypad in smart English input method:

Name of key	Letters or functions
2 Key	Abc

3 Key	Def
4 Key	Ghi
5 Key	Jkl
6 Key	Mno
7 Key	Pqrs
8 Key	Tuv
9 Key	wxyz
*Key	Press * to find symbol input page
#Key	Switch between input methods
Scrolling Up	Move cursor up
Scrolling Down	Move cursor down
Scrolling Left	Move cursor left
Scrolling Right	Move cursor right
Left soft key	OK
Right soft key	Clear
END key	Return to idle screen

Smart English input method's operation:

- Every key pressed has input function to its corresponding letter, and all letters have been pressed will be auto shuffle to find the best combination. Repeat key in until the word or symbol you are looking for appears
- Use # key to switch between input methods
- Hold \* key to find symbol input page.
- Use Right soft key to clear off the wrong input. Hold Right soft key to clear off the whole line.

### 5.3.2 English and number input

Detailed definition for English and number input keypad are;

Name of key	Letters or functions
1key	. , - ? ! @ : # \$ / - 1
2key	ABCabc2
3key	DEFdef3
4key	GHIghi4
5key	JKLjkl5
6key	MNOmno6
7key	PQRSpqrs7
8key	TUVtuv8
9key	WXYZwxyz9
0key	0
*key	Press * to find symbols input page
#key	Switch between different input methods
Scrolling Up	Move cursor up
Scrolling down	Move cursor down
Left soft key	OK
Right soft key	Clear
End	Return to idle screen

General operation for English input

- Every key pressed has input function to its corresponding letter, repeat until the letter you are looking for shows up. After the cursor moved, input next letter.
- Use # key to switch between different input methods
- Press \* key to add symbols
- Press 0 key to input space
- Use Right soft key to clear off the wrong input.

---

### 5.3.3 Handwriting input method

The normal way to use:

- Use the touch pen to write symbol and character on the screen, then choose the symbol and character from the bottom of the screen
- Left right up down key can move the cursor
- Press right soft key to delete a symbol, long press delete the whole line.

### FCC Warning

We declare that:

※ the product is installed with battery separately in the box. The FCC ID label is placed on the mobile phone clearly visible to all persons at the time of purchase.

※ the user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

※ This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

※ Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.

※ Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications

※ Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless fixed phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting as its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power.