




Owner's Manual

Bluetooth Helmet Headset

SALUT

1. Headset Buttons

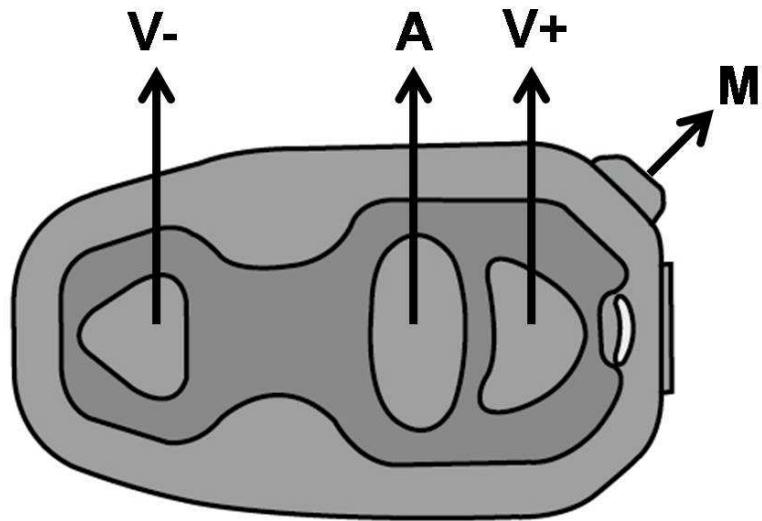

M: 1. Play/Pause [cell phone music]

- 2. Redial last phone number
- 3. Cell phone voice dials

A: Select to Intercom with A1/A2/A3


V+: 1. Next track [cell phone music]

- 2. Volume up

V-: 1. Previous track [cell phone music]


- 2. Volume down

2. Recharge

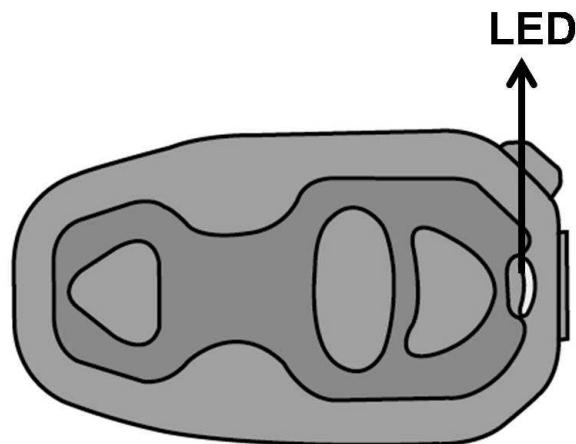


1. Use Mini USB cable to recharge. During recharging, LED stays red. When charged, LED stays blue. Headset battery is initially partially charged. Please fully recharge the headset before the first use.
2. Low battery warning: When battery is low, 3 <beeps> can be heard (i.e., <beep><beep><beep>) is heard to remind the user to recharge.

3. Power ON/OFF

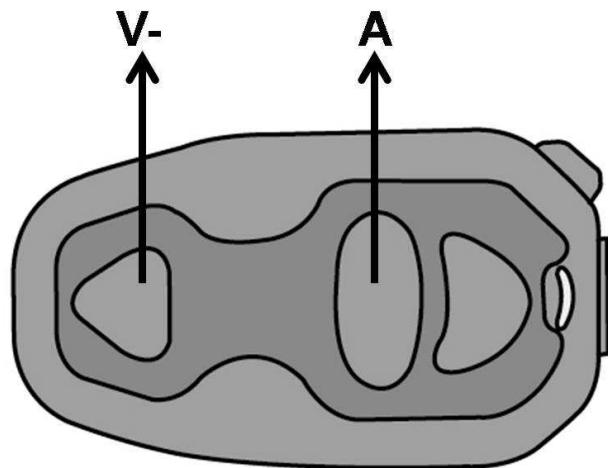

1. Power ON: Press both A and V- buttons simultaneously until LED stays blue and release both button.
2. Power OFF: Press A and V- buttons simultaneously until the LED stays red. A voice notification can be heard to inform you the remaining battery capacity.

4. Pair with Cell Phone and Use

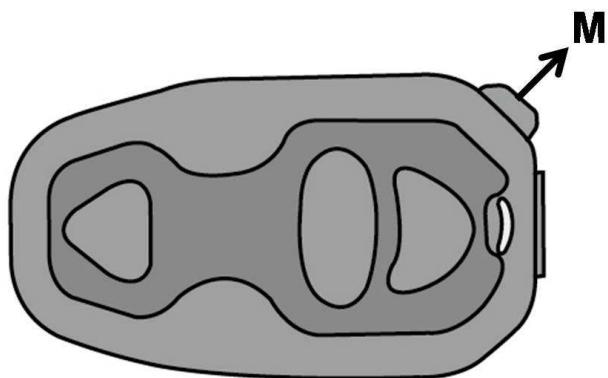

Pair with Cell Phone

1. Turn on SALUT, press M until the LED flashes red/blue alternately.
2. Ice name: SALUT, and connect. Activate cell phone Bluetooth. Search for device SALUT and connect.
3. When asked for password, input <0000> (4 zeros). After connection, a voice notification <Bluetooth device pairing complete> is heard, and the LED flashes blue slowly to indicate successful pairing.

Use Cell Phone

1. Press M to answer incoming call.
2. When auto-answer is set, the incoming call will be automatically answered after ringing for 10 seconds.
3. To end a call, press M once. or wait for the called person to end the call.
4. To reject a call, press M for 3 seconds. (Note: when auto-answer is off, the call is automatically rejected after ringing for 16 seconds.)
5. Voice dial: Press M once and speak into the phone (cell phone must provide voice dial function.)
6. Redial last number: Press M twice rapidly, the cell phone will redial the last call-out number.
7. When paired with two cells phones to redial the last number on the second cell phone, press M 3 times rapidly.
8. To reconnect cell phone, press M to reconnect. (When paired with two cell phones, both cell phones are reconnected.)


9. When connected to two cell phones if the second cell phone has an incoming call during the first cell phone talk, press A to answer the incoming call on the second cell phone and hold the first cell phone. When the call on the second phone ends, the headset will resume the first cell phone.
10. Set Auto-Answer: Hold both M and V+ for 8 seconds. A voice notification <cell phone answer mode> <automatic answer> can be heard to indicate successful setting.
11. Disable Auto-Answer: Hold both M and V- for 8 seconds. A voice notification <cell phone answer mode> <manual answer> can be heard to indicate auto-answer is disabled.
12. Cell phone music (AVRCP)
Play/Pause: press M for 2 seconds.
Next track: press V+ twice.
Previous track: press V- twice.
13. Cell phone Volume
Volume UP: press V+.
Volume DOWN: press V-.
When adjusting volume, a sound <dun-dun> can be heard. When reach the maximum or minimum volume, a <beep> tone can be heard. To adjust cell phone and headset volume, the cell phone function must be activated and the cell phone must be in talk or in music play mode.

5. Pair with Headset for Intercom and Use

Two SALUT headsets must be paired for 1-on-1 intercom. Each SALUT can connect to 3 (at most) other SALUT headsets for 1-on-1 intercom. The three SALUT headsets will be defined, according to the reverse time order they were paired, as: (i.e., the most recently paired has the highest priority) first priority: "Comm A1", second priority: "Comm A2", and third priority: "Comm A3" .

Pair with headset

1. SALUT headset#1 is turned on, pressed A until the LED flashes blue rapidly.
2. SALUT headset#2 is turned on, press M until the LED flashes red/blue alternately and rapidly.

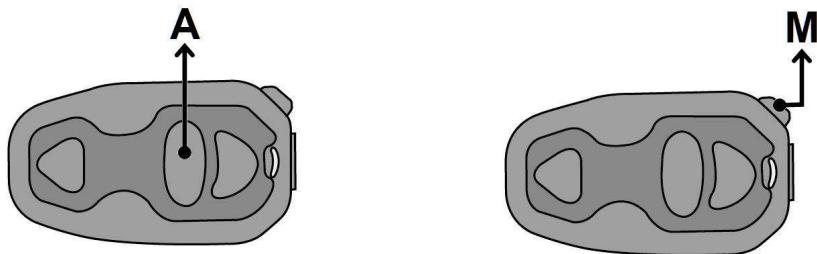

After the above two steps, the two headsets will automatically pair with each other until the LED on both headsets flashes blue. At this point, two headsets can intercom with each other directly and both headsets can hear a voice notification <headset A pairing completed>.

5.1 1-on-1 Intercom Usage

Paired SALUT headsets for 1-on-1 intercom can start intercom transmission in two modes:

Manual mode and VOX mode.

The default mode when SALUT headsets are shipped is manual mode. When SALUT is powered on, the user will hear "VOX sensitivity Manual Mode"

Manual Mode for starting 1-on-1 Intercom:

The SALUT headsets already paired for 1-on-1 intercom can use [A] to select one of the three headsets recorded in the list, as follows:

Press [A] once to start 1-on-1 intercom with A1; press [A] twice to start 1-on-1 intercom with A2; and press [A] three times to start 1-on-1 intercom with A3.

Manually Ending 1-on-1 Intercom

During 1-on-1 intercom, any of the two headsets can press [A] once to end the intercom.

VOX Mode

SALUT provides four sensitivity levels for VOX to start 1-on-1 intercom to accommodate for different speeds and ambient noise levels.

VOX Usage

Using VOX to start 1-on-1 intercom will connect you to the last intercom SALUT partner.

During intercom, the 1-on-1 intercom will be automatically end after a 15-second silence on both parties. If any member of the party speaks into the microphone, the 1 on 1 intercom connection will be restarted.

NOTE: VOX only connects you to the last intercom partner. To intercom with a different partner for 1-on-1 intercom, you must manually start the 1-on-1 intercom.

5.2 Voice Activation (VOX)

VOX Level:

The SALUT headset provides five volume levels for setting the voice volume required to activate the intercom connection. It is possible to adjust the required voice volume according to your needs. Level 1 means that VOX has a lower activation threshold, i.e., you may use a lower voice volume to activate the headset intercom connection. The higher the level is, the higher the voice volume required to activate the intercom connection. The indicated speeds are only for reference, and level selection depends on actual ambient noise levels and wind speed.

Level 5 is also the manual mode:

VOX Level Control:

1. Turn SALUT headset on (i.e., ready to connect) without transmitting any voice signals (i.e., turn off cell phone music playback and FM, and stay silent for 15 seconds to leave the intercom mode).
2. Press [P] upward or downward for 2 seconds to adjust and then release [V]. Different voice notifications will be provided to indicate the transition from a level to a different level. The following gives the details:

VOX Level 1

Description: When in VOX activation Level 1, a voice notification saying “VOX sensitivity Level 1”.

Note: if ambient wind can activate the intercom, noise sensitivity is too great so a higher level must be used.

VOX Level 2

Description: When adjusting to Level 2, a voice notification saying “VOX sensitivity Level 2”. Note: if ambient wind can activate the intercom, noise sensitivity is too great so a higher level must be used.

VOX Level 3

Description: When adjusting to Level 3, a voice notification saying “VOX sensitivity Level 3”. Note: if ambient wind can activate the intercom, noise sensitivity is too great so a higher level must be used.

VOX Level 4

Description: When adjusting to Level 4, a voice notification saying “VOX sensitivity Level 4”, and when adjusting to Manual Activation Mode, a voice notification saying “VOX sensitivity Manual Mode”.

Manual activation mode (default)

Description: “Manual activation mode” you must activate the intercom manually. When adjusting to Manual Activation Mode, a voice notification saying “VOX sensitivity Manual Mode”, which means the VOX activation mode is restored.

The headsets already paired for 1-on-1 intercom can use [A] to select intercom. During 1-on-1 intercom, any of the two headsets can press [A] once to end the intercom.

VOX Level Control:

3. Turn SALUT headset on (i.e., ready to connect) without transmitting any voice signals (i.e., turn off cell phone music playback, and stay silent for 15 seconds to leave the intercom mode).
4. Press [V+] or [V-] twice to raise or lower the voice level. Different voice notifications will be provided to indicate the transition from a level to a different level. The following gives the details:

VOX Level 1

Description: When in VOX activation Level 1, a voice notification saying “VOX sensitivity Level 1”.

Note: if ambient wind can activate the intercom, noise sensitivity is too great so a higher level must be used.

VOX Level 2

Description: When adjusting to Level 2, a voice notification saying “VOX sensitivity Level 2”. Note: if ambient wind can activate the intercom, noise sensitivity is too great so a higher level must be used.

VOX Level 3

Description: When adjusting to Level 3, a voice notification saying “VOX sensitivity Level 3”. Note: if ambient wind can activate the intercom, noise sensitivity is too great so a higher level must be used.

VOX Level 4

Description: When adjusting to Level 4, a voice notification saying “VOX sensitivity Level 4”, and when adjusting to Manual Activation Mode, a voice notification saying “VOX sensitivity Manual Mode”.

Manual activation mode (default)

Description: “Manual activation mode” you must activate the intercom manually. When adjusting to Manual Activation Mode, a voice notification saying “VOX sensitivity Manual Mode”, which means the VOX activation mode

is restored.

6. Group Intercom Pairing and Usage


SALUT provides up to 4 SALUT headsets for group intercom.

Pairing for Group Intercom

1. Assign a number to each headset (1, 2, 3, 4)

a. Enter Group Member Setting Mode :

In ON state, press [V+] until LED stays blue.

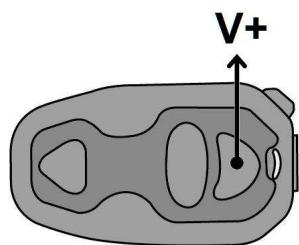

b. Assign a number to headset:

According to the number assigned, press [V+] rapidly.

For example:

To assign 1 to SALUT headset (called SALUT#1), press [V+] once. At this point, LED flashes blue once and voice notification “Group Member 1”.


To assign 2 to SALUT headset (called SALUT#2), press [V+] once. At this point, LED flashes blue twice and voice notification “Group Member 2”.

.

.

To assign 4 to SALUT headset (called SALUT#4), press [V+] once. At this point, LED flashes blue five times and voice notification “Group Member 4”.

Note: the headset only allows assigning up to Group Member 4

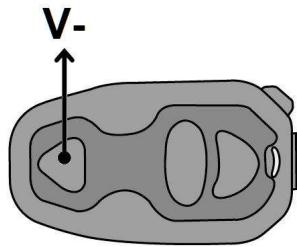

c. Exit Group Member Setting Mode :

After assigning a number of each SALUT headset, press [V-] on each headset. The LED flashes blue to indicate exiting the setting mode.

d. Check the current headset number:



In ready state, press [V-] for 6 seconds and a voice notification will announce the current assigned number.

2. Pairing between SALUT#1 and SALUT#2:

Note : The distance between two headsets must be less than 2 meters.

SALUT#1: in ON state, press [V-] until LED flashes red rapidly.

SALUT#2: in ON state, press [M] until LED flashes red/blue.

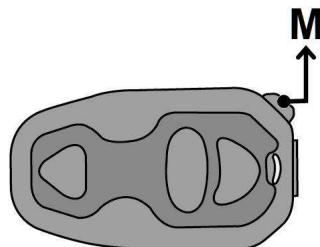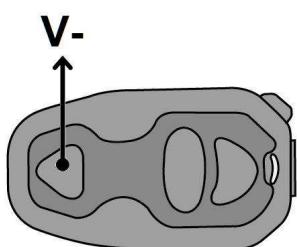

At this point, the two headsets start to pair.

Completing pairing:

SALUT#1: LED flashes in blue pattern, and voice notification “member2 paired”

SALUT#2: LED flashes in blue pattern, and voice notification “member 1 paired”

At this point, the pairing is successful and the two headsets can intercom with each other.

3. Pairing between SALUT#2 and SALUT#3
(Refer to: a. Pairing between SALUT#1 and SALUT#2)
4. Pairing between SALUT#3 and SALUT#4
(Refer to: a. Pairing between SALUT#1 and SALUT#2)

6.1 Group Intercom Usage

After completing pairing for group intercom, press[V-] for 2 seconds and release on any member headset will automatically start group intercom among the four headsets.

6.2 Leave group intercom:

During group intercom, any headset can press [A] to leave the group intercom.

FCC Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Change or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

RF exposure warning:

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.