 


# USER GUIDE MODEL 800+ Platinum with Alarm \*

**FM Two Way & AM One Way**

**NOTE : Please refer to the ICONS on your transmitter to the following instructions**

 
## **Lock / Arm (optional)**



Press button to **Lock/Arm**. Parking lights will flash once, horn or siren chirp once (if installed). \*System is armed within 6 seconds. LED (flashing light on antenna) starts flashing. Any attempt to open the doors will immediately trigger the horn for 30 sec. (or siren for 60 sec.) To stop, press the same button again once

**Panic** – (Also see section Panic below) Hold for 1.5sec will trigger the horn or siren to sound continuously. To stop, press and release momentarily

## **Unlock / Disarm (optional)**




Press button to **Unlock/Disarm**. Parking lights flash twice with 2 chirps. System is disarmed. Starter kill function is temporarily suspended for 60 seconds

## **Trunk (optional)**

 
Hold button for 2 seconds to release the trunk. Parking lights will flash 3 times

## **Silent mode (optional)**




Press momentarily to **Lock/Arm** or **Unlock/Disarm** **SILENTLY (without chirp)**

## **Start / Stop**

 

Press to start. Parking lights will flash 6 times and stay on for the duration of the cycle (20 or 3 minutes). Press again to stop

## **Panic**

 

1. Hold for 1.5sec will trigger the horn or siren to sound continuously.
2. To stop, press and release momentarily

\*If the remote does not have this icon, see section Lock (Panic) above

## **2 cars operation (For specific model only)**

Press the **BLUE** button first then the function to command the second car. It will automatically return to the first car after the function is executed.

## **Mis-touch Function (For specific model only)**

To lock all the buttons :

- 1-Press both **LOCK + START (FM2W)** or **LOCK + BLUE** buttons **ONCE**
- 2-To reactivate the function, repeat the same procedure as in 1

## **TURBO mode**

1-Press both buttons **START + SILENT** momentarily, park lights will flash 3 times.

2-Remove the key, open and close door. Engine will shut off after 2 minutes

## **LED (flashing light located on antenna – optional)**

1-The LED lights up when you first start the engine then goes out when the brake pedal is depressed. If it is not the case, contact your installer

2-When the alarm and the starter kill are active, the LED will flash once every one second

## **Cold Start Timer (every 2, 3 or 4 hrs for 3 minutes depending on the model)**

Press **LOCK + UNLOCK** buttons at the same time to enable this function, parking lights will flash 2 times to confirm for 2 hrs

Repeat same for 3 hrs and for 4 hrs

To **Cancel** this feature, start the vehicle with the transmitter or with the key

**Important: Do not use this feature when the vehicle is parked in a closed area**

## **Security switch (On/Off) (locate inside the vehicle)**

Leave the **Security Switch (ON/OFF switch)** to the **OFF** position to **disable** the operation of the remote starter (such as when indoor parking or at car maintenance, etc...) Switch back to **ON** position for normal operation

**OFF= No remote start**

**ON= Yes remote start**

**Warning:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.