



neo Ellipse - Quick Guide




English



Screen & Icons

The "Home Screen"


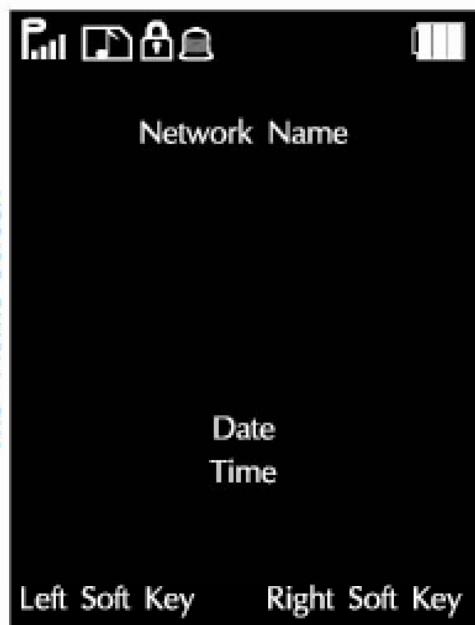


- Signal Strength Indicator
- "SILENT" Mode Active
- "VIBRATE" Mode Active
- "Vibrate then Ring" Mode Active
- "Vibrate and Ring" Mode Active
- "Ring" Mode Active
- Battery Level Indicator
- Active Alarm

- Keypad Locked
- Data Connection in Progress

Location of SIM and Micro SD Memory Card


Open the curved cover of the phone by sliding it downwards.

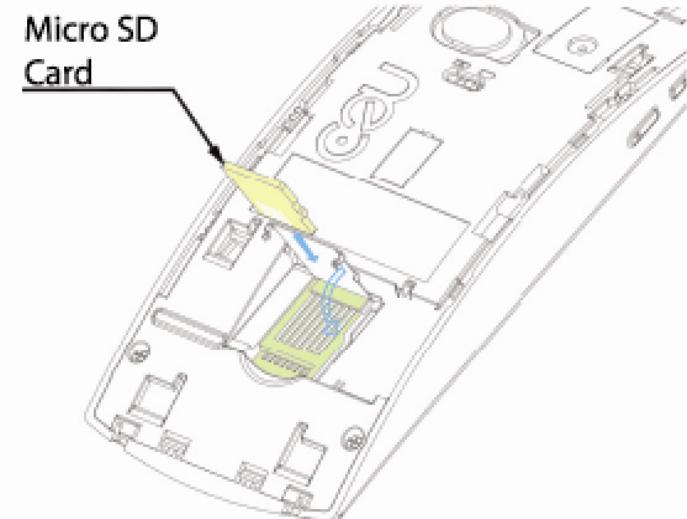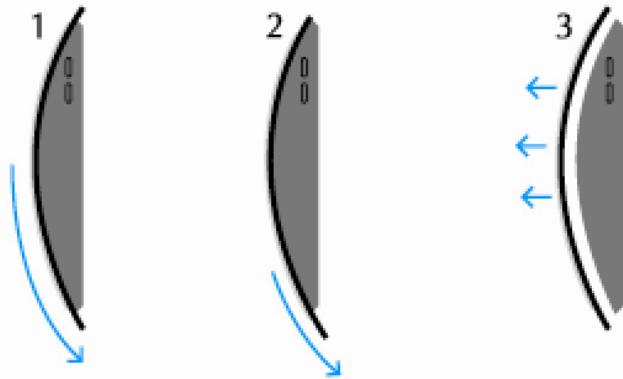

Setting up


Step 1 Turn on battery source.

Open the battery cover of the phone by firmly sliding it downwards and lifting off. Turn the main power on by sliding the switch shown below towards the right.

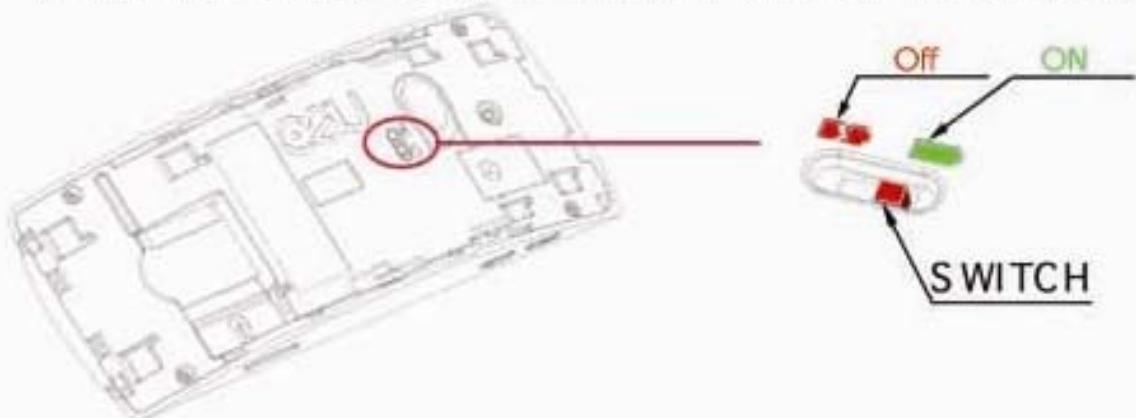

Step 2 Insert SIM Card

Slide the SIM card as shown. Please ensure that the SIM has been inserted all the way towards the left as shown.

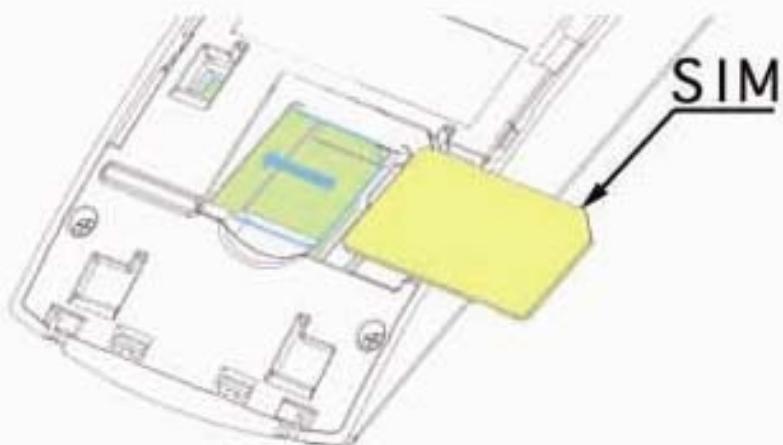

Step 3 Close Cover

Close the cover by sliding it upwards until you feel a click. Keep the "End Key" pressed for a few seconds to start your phone. Once the phone is started, your phone should automatically connect to the Network. You can then use the left soft key or the center key to go into the menu and customize your phone.

Making Calls

For Your Safety

NOTE! Any Changes to the Settings can ONLY be done with a valid SIM card inserted, and the Phone connected to a Service Provider!

Please note the following issues when using your device

Before using your device, please read the user's guide carefully!

Please switch off your device when in or around aircraft. If automatic switch-on is enabled for such features of your device as alarm clock and reminder, please check and cancel the settings before boarding.

Do not expose your device to high temperature or high voltage, such as electric appliances or electric heating cookers. Be sure to use your device in a normal temperature. Your device may be damaged in a temperature higher than 55° C or lower than -10° C.

Switch off your device in an area where a potentially explosive atmosphere exists, for example, at a chemical plant, gas station, or oil depot.

Always keep your hands free to operate the vehicle while driving. Do not place your device in the area above your car's air bag, preventing your device from injuring you when the air bag is expanded.

Use only approved batteries, chargers and accessories. The use of any other types may invalidate any approval or warranty.

Making Calls

Do not attempt to disassemble your device.

Because of possible interference, please keep your device away from electric appliances like televisions, radio recorders, personal computers, cardiac pacemakers, and hearing aids. Do not place your device near your credit cards or other magnetic storage medias.

Do not drop or shake your device. Do not knock the screen of your device with edge tools.

Use of the phone bag or plastic phone bag may ruin the paint on your device.

Do not use solvents, harsh chemicals, or strong detergents to clean your device. Use a soft and clean cloth to clean it.

Do not expose your device to strong sunlight, or use it in smoky or dusty areas.

Keep your device dry. Do not use it in areas of high humidity like bathrooms. As your device is not waterproof, do not expose it to rains or moistures.

Use earphones and other accessories with care. Do not touch the antenna unnecessarily. Use only the supplied antenna. Unauthorized antennas could damage your device.

To remove the charger, hold the plug, other than the power cord, and pull out.

Never rely solely upon your device for essential communications, for example, medical emergencies.

Making Calls

Keep your device out of the reach of small children.

The statement shall require a socket outlet. That is installed near the equipment and that shall be easily accessible.

Please follow the guidelines below when using batteries

Before use, please carefully read user's guide.

Use chargers indoors. If recharging in a too high temperature, the battery may become hot, smoky, burnt, distorted, or even explosive.

Do not remove the battery from the mobile.

Do not leave the battery in too hot or too cold places.

Do not dispose of the battery in a fire as they may explode.

Never put the battery in water; otherwise, it may be short-circuited, and become heat, smoky, distorted, damaged, or even explosive.

Keep the battery out of the reach of small children.

The GSM mobile phone shall only be connected to a USB interface of version 2.0 or higher.

Making Calls

Please note the following issues when using chargers

Before use, please carefully read user's guide and signs on the charger surface.

Do not disassemble or modify the charger. If the power cord is damaged, do not use the charger to reduce risks of electric shock, fire and damage.

Do not touch the charger with wet hands. If the charger is exposed to water or other liquid, cut off the power immediately.

Do not short-circuit, knock or shake the charger. Do not expose the battery to sunshine. Do not use it in areas of high humidity like bathrooms. As the battery is not waterproof, do not expose it to rains or moistures.

Do not use the charger near such electric appliances as televisions and radio recorders.

Hold the charger when unplugging it from the socket.

Keep the charger out of the reach of small children

Warning: Your device has a sound recorder feature. When using it, do obey related laws and regulations and respect privacy and legitimate rights of others. Users shall take full responsibilities for improper use of this feature and unauthorized replication and distribution of the recordings.

Getting Started

Making Calls

- You can make calls only after your phone has connected to the network and you are within network coverage area
- In home screen mode, enter numbers through the keypad ,and press Dial to make calls ,or press left soft key after dialing to save numbers.
- To dial calls through contacts(phonebook)- In home serene mode, press The Right soft key to enter the phonebook .Here ,you can Scroll to find your desired contact and his/her phone number by Quick search or Name search, and press dial to make the call.
- Dial calls through SMS, If the SMS you received contains a phone number, you can dial the number contained in the SMS or dial the sender's number.
- In the In box menu, select and open your desired SMS, press left soft key to enter. Options menu, then press use number to select the phone number contained in the SMS or choose the sender's number. Then, press options again and choose to Dial or save the number
- Press right soft key to delete the last digit of your input number .press and hold right soft key to clear all inputs.

Making Calls

- After a call is connected, press right soft key to enter hands free mode. In this mode, do not hold the device near your ears as exposure to high volume may damage your hearing .press right soft key again to return mode from hands free mode.
- Press the End key to end a call.
- Press the End key to cancel a receiving call or send key to answer.
Press the # key to mute an incoming call. Press the“*” key twice to get a “+”

Messaging

SMS

To go to the SMS function, please navigate to **Menu>Messages>SMS** From this menu, you can check your inbox, outbox, Write message , Template and settings.

To scroll between input types, click the “#” while in the write message screen.

If the storage for messages is used up, you cannot receive any new message. In the Inbox, select and delete old messages. When there is space for messages, the messages will be delivered to your phone.

To save your sent messages, please select the option to “save And send” before sending the message. The sent items will be saved to your Outbox.

MMS & Email

Your Ellipse also allows you to send and receive MMS and mails, To use the services a short set up is required. Please check our website www.stuffbyneo.com and download the full user manual from the support section to learn how to use these services.

Bluetooth

Navigate to [menu>settings>Bluetooth](#)

To start / stop Bluetooth connection: If you want to connect or disconnect the wireless Bluetooth, please choose

[Menu>settings>Bluetooth>power](#)

TO allow other devices to see your phone, switch the visibility on by navigating to [Menu>settings>Bluetooth>settings>visibility](#)

Open multimedia to send photos to another mobile phone from your memory. To send a file, go to the file manager from the Main Menu and select a file .Once you have selected a file, click on the “option” key and select “Forward”. Here you are presented with several options.

Select the “To Bluetooth” option.

Select the “Inquiry BT Device” option for your phone to search for other devices. Once the device that you want to send to appears, select it and click “Bond.” It will ask you to type a password that the receiver also has to type. Send the file.

When receiving a file using Bluetooth, your phone will ask you to type a password that corresponds with the senders password. Once the right password is typed and you accept the file, you will begin to receive the file. This may take several minutes depending on the size, Once the file is received, it automatically saved to the “Received” folder. You can see the received folder by going to [Menu>file manager](#)

Multimedia

Audio player

※ Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Navigate to [Menu>Multimedia>Audio player](#)

- The audio player of your device can be used to play music files.
- On the audio player screen, press Up to play, press Left for previous track, and press Right for Next track.
- On the player screen, press left soft key to enter “List” where you can select music files you would like to play, If there are no files, please select the “Option” key and select “Refresh List”. From the options menu you can also select “settings”. Only music that is stored on your phone or Memory card in the folder titles “My Music” can be shown on the list.

Other Items

There are many other multimedia functions available in the [Menu>Multimedia List](#).

Camera

Audio player

FM Radio

Video Recorder

Video player

Image Viewer

Sound Recorder

Melody Composer

Personalize

Profiles

Navigate to [Menu > Settings > User Profiles](#)

The device provides several modes: General Mode, Meeting Mode, Outdoor Mode, Indoor Mode, and Hands free Mode. When you connect the earphone, the device will turn to Hands free Mode automatically.

In standby mode, you can switch between Silent and General by pressing the # key for a few seconds.

Display Options

Navigate to [Menu > Settings > Phone Setup > Display Options](#)

In this section you can select from several options to customize your phone. You may select wallpapers, select a screen saver, change the settings of the home screen and much more.

How to change the Preset Directional Keys

Navigate to [Menu > Settings > Phone Setup > Dedicated Key](#)

Menus (Quick Reference)

Phone Book

Quick Search
Search Entry
Add New Entry
Copy All
Delete
Caller Group
Extra Number
Settings
Caller Picture
Caller Ring Tone

Settings

User Profiles
Bluetooth
Phone Setup
Call Setup
Network Setup
Security Setup
Sound Effects
Shortcuts
Restore Factory -
Settings

Fun & Games

Java
Java Settings
Java Default -
Security
Games

Messages

SMS
MMS
Email
Voice Mail Server
Broadcast Message

Multimedia

Camera
Audio Player
FM Radio
Video Recorder
Video Player
Image Viewer
Sound Recorder
Melody Composer

Applications

Alarm
Calendar
To Do List
Calculator
Unit Converter
E-Book Reader
World Clock
Stop Watch

Call History

Missed Calls
Dialed Called
Received Calls
Delete Call Log
Call Time
Call Cost
SMS Counter
GPRS Counter

File Manager

Phone
Memory Card

Services

WAP
Data Account

Visit
www.stuffbyneo.com
to view a complete
animated Menu tree
in the Support
section.

Important Codes

IMEI

International Mobile Station Equipment Identity. Switch off your device, remove the battery, and you can find a bar-code label with this number on the back of your device. This number is also stored in your device and can be presented on the screen when you enter *#06# in standby mode after switching on the device. Any mobile phone must have a globally unique IMEI. We recommend that you maintain this number properly as this number can protect your phone against unauthorized use, even using different SIM cards.

Other codes

PIN (4-8 digits)

The PIN is the personal identity number of your SIM card, which is provided by your network operator.

If you enter the wrong PIN three times consecutively, the SIM card is blocked. To unblock it, you need to enter your PUK. For details, please consult your network operator.

PIN 2 (4-8 digits)

The PIN 2 will be provided for some SIM cards to use some functions like, call fee notice and fixed dialing number. These functions can be used only when your SIM card supports them.

PUK

To unblock the blocked PIN, you need to enter your PUK (Personal Unblocking Key). Your PUK is provided together with your SIM card. If not, please contact your network operator to get it. If you forget your PUK, please contact your network operator.

Phone Code

The phone code protects your phone against unauthorized use (the original phone code is 1122 or in some countries 0000).

To ensure security of your personal information, please change the original phone code in time.

Quick FAQ

How can I watch a video in Full Screen Mode?

Select the video you wish to play. On the play screen, you can press * key to switch between full screen mode and non-full screen mode.

How to use Speed Dial

Keep any number key between 2 – 9 pressed for a while to speed dial. If the desired key is empty and no contact is allocated to this key a message "no number specified" will appear.

The number key 1 is reserved for voicemail service.

How do I divert calls?

Navigate to [Menu > Settings > Call Settings > Call Diverting](#), calls will be diverted to the specified number.

Checking Missed Calls and other Call Logs

Select Call History from the Menu

How to allocate Speed Dial numbers

To set phone numbers for speed dialing, select [Menu > Settings > Phone Setup > Speed Dial](#). On the Speed Dialing screen, you can edit phone numbers for speed dialing at unset number keys, or delete the available phone numbers for speed dialing. You can choose to delete available phone numbers and set new ones. The number key 1 might have been reserved for voicemail service.

How do I get Auto Key-Lock?

Navigate to [Menu > Settings > Security Setup > Auto Keypad Lock](#)

To manually lock the key pad, **press the "Right Soft Key" and the # key. Repeat to unlock.**

What are the Preset Directional Keys

These are the 4 items preset to your joystick. This helps you go directly to an application or item without going through the menu.

The pre set keys are:

Up=Audio Player, Down=Alarm, Left=User Profiles, Right=Camera

Quick FAQ

How do I transfer files to my Phone?

There are two ways to transfer files to your phone.

Send using Bluetooth

You can receive files via Bluetooth. Make sure that the Bluetooth is turned on and that you have set your visibility to "On". You will be able to find your device and send files. Your phone will ask you to confirm that you want to receive a file. Once the file is received, it is stored in the "Received" folder on your Memory Card. To move the file to a new location, please go to Menu > File Manager > Memory Card > Open > Received > Open > Option > Move

Send using USB

You will find a USB cable in your Neo 808i Box. Please use that to connect your 808i to your PC. On connection, device will ask for you to select an option on the 808i screen. Please select the "Mass Storage" option. Once you select Mass Storage, you will find the storage device show up on your PC. You can see this by going to "My Computer". When you open this device, you will see all the folders listed. You can now add or delete files as you require.

Note: This may not work with some Mac computers.

How do I use the Camera

To use the camera, please press the Camera key located on the side of the phone next to the volume keys. While in the Camera application, you can press the "Options" to change the settings or use other features of the camera.

How do I record a video

Go to Menu > Multimedia > Video Recorder. While in the Video Recorder application, you can press the "Options" to change the settings or use other features of the Recorder.

Additional safety information

Small children

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2centimetres (7/8 inch) away from the body .when a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas

instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3centimetres (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3centimetres (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimize the potential for interference.
- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic

antiskid(antilock)braking systems,

Electronic speed control systems, and air bag systems. for more information, check with the manufacturer ,or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids,gases, or explosive materials in the same compartment as the device,its parts,or

Enhancements. For vehicles equipped with an air bag , remember that air bags inflate with great force. Do not place objects,including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates,serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft, may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal. A dditional safety information

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle Engine. sparks in such areas could cause an explosion or fire resulting in bodily

injury or even death. switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment on fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

Emergency calls

 **Important:** This device operates using radio signals, wireless networks, landlines networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device will attempt to make emergency calls over both The cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
 - Insert a SIM card if your device uses one
 - Remove certain call restrictions you have activated in your device.
 - Change your profile from offline or flight profile mode to an active profile.

2. press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency number vary by location.
4. press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end call until given permission to do so.

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Ellipse (FCC ID: WWF-NEOELLIPSE) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.457 W/kg and when properly worn on the body is 0.894 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Accessories

Accessories

1. USB cable
2. Charger
3. Ear Phone
4. CD ROM
5. Quick Guide
6. Warranty card
7. 1G byte T-card
8. Plant card
9. Pouch
10. Lens clearing cloth

Complete User Manual is available at
www.stuffbyneo.com
in the support section.