


## User instruction, RF remote system

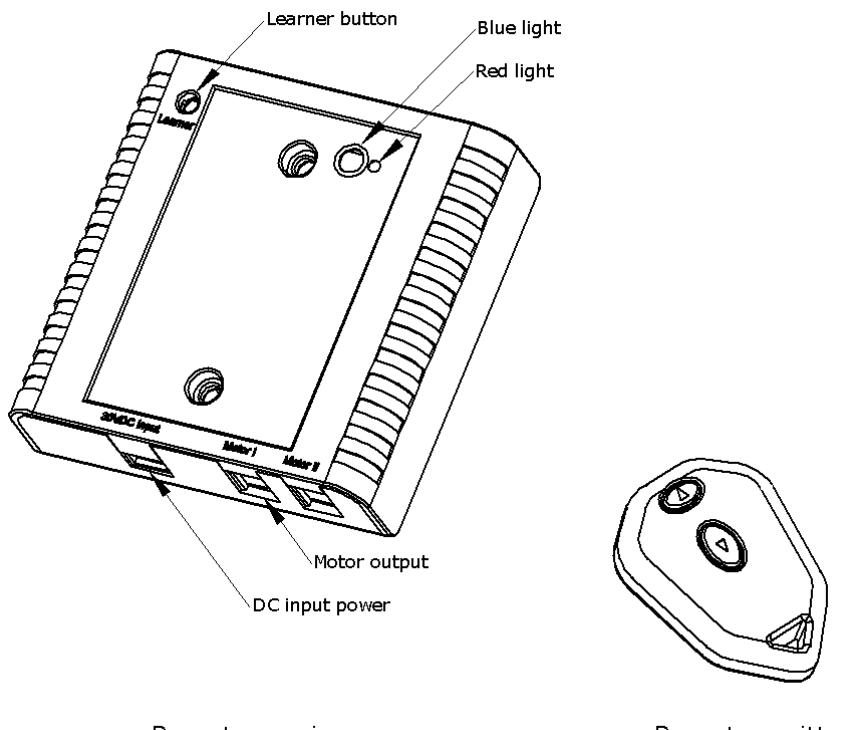

Remote receiver

Remote emitter

### Installation

- o connect the power supply and the motor unit to the remote receiver. 2 different plug sizes make this connection only possible to make in the right way
- o after having connected the plugs, the blue light will be lightning
- o push the emitter buttons and the motor unit will move up and down
- o for stopping the motion one of the buttons need to be pushed

### Learning

- o if the remote receiver do not respond when pushing the emitter buttons, reset the receiver. After that, code the emitter and receiver together again

### Coding

- o push the learner button on the receiver for less than 1 sec.
- o push one of the emitter buttons
- o the red light will start flashing
- o push one of the emitter buttons again and the red light will turn off
- o the units now are coded together with a unique code

### Reset

- o push and hold down the learner button on the receiver for 10 sec. (will be reset when the red light turns off).

### External rocker switch

- o the external rocker switch can be connected to the receiver, if a fixed operation unit is required.

### Trouble shooting

- o check the plug connections
- o check whether the blue light is on
- o reset the receiver and make a new coding

### Change of battery in emitter (type 27A/12V)

- o remove lid on back side
- o lift up battery
- o place new battery

### FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.