

rothdock

Wireless Dock / Receiver

Roth



iPod not included

Safety Instructions

CAUTION

Please read these important safety instructions carefully

IMPORTANT NOTES

Before turning on the power for the first time, make sure the power cord is properly installed.

These instructions should be retained for future reference.

- Avoid installing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters
 - On top of other stereo equipment that radiate to much heat
 - Places blocking ventilation or dusty areas
 - Places subject to constant vibration
 - Humid or moist places
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any serving to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user servicable parts inside. Doing so will void your warranty.

Please refer all serving to qualified service personnel.



NOTE

This unit may become warm when used for a long period of time.

This is normal and does not indicate a problem with the unit.

Thank you

Thank you for choosing the Rothdock.

We have tried to make this product as simple and effective as possible, utilising wireless technology for convenience of use. We considered what people need and what people want and we think this product is the answer. We hope you agree.


Turn It Up.

James A. Roth, England, November 2008.



Remote Control

- 1 Press and hold to toggle the Rothdock between Standby and On mode.
Press once to play or pause a song.
- 2 Press to temporarily mute the volume
Press again to resume volume level
- 3 Press to move up or down through the Menu
- 4 Press to increase/decrease volume
- 5 Return to the previous Menu screen
- 6 Select a Menu item
- 7 Press once to go back to the beginning of the song or press and hold to rewind the song
- 8 Press once to skip to the next song, or press and hold to fast forward the song.

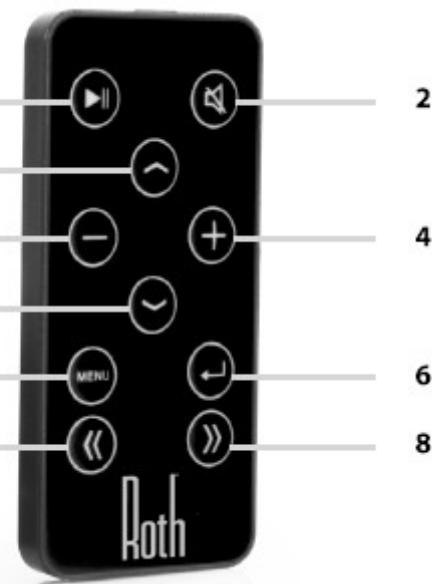

“Some people tap
their feet, some
people snap their
fingers, and some
people sway back
and forth. I just sorta
do ‘em all together,
I guess.”

Elvis Presley



Rear Connections



For other audio devices such as MP3/
Mobile Phone or MiniDisk Player.
Plug-in via 3.5mm mini Jack



"The best revenge is
massive success."

Frank Sinatra



Set up

- Insert the power supply into the DC connector on the rear of Rothdock and insert the power supply into the wall outlet.
- Insert the power supply into DC connector on the receiver and connect your 3.5 mm line-in cable or RCA connector to the audio input of any amp systems.
- Place your iPod/iPhone into the dock and press down gently until it is fully seated in the dock connector.
- Switch on the Rothdock by pressing the on/off button at the back. The led light at the front of the dock will glow red.
- Turn on your iPod/iPhone and choose song using the remote control.
- Turn on your speaker system.
- Change the volume using the remote control or the speaker system's volume control.

Line In Connections

- The Rothdock includes a 3.5 mm line-in jack that allows you to connect and listen to other audio sources, such as the iPod Shuffle, MP3 players, CD players, portable DVD players and laptops. To connect Rothdock to another audio source, follow the steps below:
- Connect one end of the 3.5 mm line-in cable (supplied) into the line-in jack at the back of the Rothdock and the other end to the headphone or line out jack on your audio device.
- Set the volume on the audio source at mid-level.
- Set the volume on the Rothdock at minimum level and then increase to comfortable listening level.



FAQ

Q No sound coming from speakers.

A 1. Check if the Receiver is connected to the correct input on the amplifier.
2. Check the Amp's power is on or off.
3. The volume may be set too low? Press and hold the "+" button on the remote control and check if the Amp's volume is in the right position. Also check the iPod/iPhone sits correctly in the docking station. If you are using an alternate audio source such as CD player, make sure that the device is correctly connected to the Rothdock.

Q No power.

A 1. Check the switch of the back of the Rothdock, is "on".
2. Check the Led is red (on).
3. Check the Led in the receiver is "on".

Q There is crackling sound coming from the speakers (when connected to a PC or laptop)

A This means that the operating system's volume level is set too high.
Please check and decrease if needed.

Q The remote control does not work.

A You may have a low battery. Also check that the remote control is pointing at the speaker system within 20 feet of the unit.

FCC WARNING STATEMENT

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received,
including interference that may cause undesired operation.



Plug in MP3/Mobile Phone or MiniDisk Player via 3.5mm mini Jack

Plug receiver into any Hi-Fi in the house

"There is no dark side of the moon really. Matter of fact it's all dark."

Pink Floyd



Roth™

www.rothaudio.co.uk

Apple, the Apple logo and iPod are trademarks of Apple Computer Inc, registered in the U.S. and other countries Roth and the Roth brand are registered trademarks worldwide