

User Manual

Thank you for purchasing HENTAI Remote Electric Boat Toys. Before using the item, please be sure to read this manual for operating instructions and safety notices in order to ensure a safe and pleasure usage.

Quick Reference Guide:

- 1) Install 2 AA batteries into the battery compartment of the transmitter and make sure the polarity is correct.
- 2) Connect the plug of the rechargeable battery pack to the socket at the battery compartment of the receiver.
- 3) When the switch of both the transmitter and receiver are in “ON” position, the red LED on the transmitter goes up and it is ready to play.
- 4) The boat moves forward when pulling the trigger on the transmitter forward. When the trigger is pulling backward, the boat moves backward. To stop the boat, just stop pulling the trigger. The boat turns left or right during motion by turning the wheel on the transmitter.
- 5) If the boat does not run straightly, please adjust the direction knob located at the bottom of the boat.
- 6) Please fully extend the antenna on the transmitter to maximize the remote control distance.

Notes:

- 1) The package contains small parts and avoids swallowing them.
- 2) Please use alkaline or rechargeable battery for the best performance.
- 3) The boat may not function properly when there is a serious RF signal interference nearby.
- 4) Please replace batteries when the boat is getting slow or does not function properly.
- 5) The rechargeable battery will get hot or even leaks if not properly used. Please note the followings:
 - i) Please refer to the user manual of the charger in order to charge the battery correctly.
 - ii) Please ensure the polarity of the battery is correct.
 - iii) Please switch off the transmitter and the boat when finished using them. It is recommended to uninstall the batteries when not going to use them for a period of time.
 - iv) Do not short-circuit the battery.
 - v) Please do not use the item if it is wet.
- 6) Do not put the item into fire or water. Unauthorized disassembly is not allowed.
- 7) Do not break the antenna.
- 8) Do not store the item close to fire, heat or humid area.
- 9) Be sure to maintain a safe distance form the boat when in operation to avoid injury.
- 10) Please operate the item in a safe place.
- 11) Please dispose the packaging to a proper place.
- 12) Rechargeable batteries are to be removed from the toy before being charged;
- 13) Rechargeable batteries are only to be charged under adult supervision.
- 14) Non-rechargeable batteries are not to be recharged;
- 15) The supply terminals are not to be short-circuited;

Attention of the parents to the fact that the charging unit to be used with the toy should be regularly examined for potential hazard, such as damage to the cable or cord, plug, enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Manufacturer: HENTAI PLASTIC INDUSTRIAL CO., LTD.
MADE IN CHINA.**