



Location of labels

Safety labels are located in two places on the Optical Aligner:

- 1) On the Optical Aligner back plate

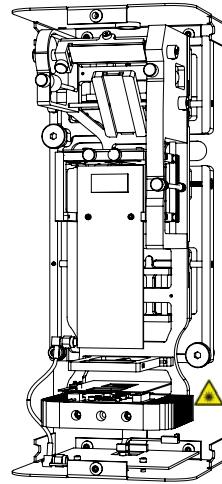

- 2) Bottom outside of housing

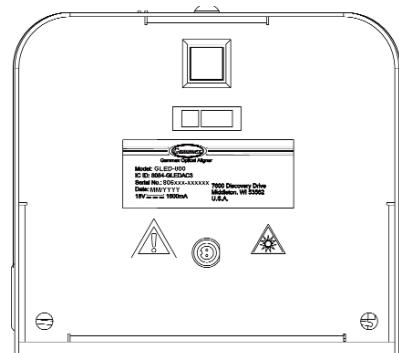

- 3) Back of remote control

Labels

Optical Radiation



Caution/Read Accompanying Material