

S13 USER MANUAL

VERSION:0.7.0

2008-11-27

Important Notice

COPYRIGHT NOTICE

Copyright © 2008, Shanghai Wingtech Electronics Technologies Co., Ltd. All rights reserved.

TRADEMARKS

Shanghai Wingtech Electronics Technologies Co, Ltd. And Wingtech logos are trademarks or registered trademarks of Wingtech Corporation. Other companies and product names mentioned herein may be trademarks or trade names of their respective owners, and the mention is subject to compulsory citation purpose.

WARRANTY DISCLAIMER

Shanghai Wingtech Electronics Technologies Co. ,Ltd. makes no representations or warranties, either expressed or implied, by or with respect to anything in this document, and shall not be liable for any implied warranties of merchantability or fitness for a particular purpose or for any indirect, special or consequential damages.

CONFIDENTIALITY STATEMENT

The contents of this document(including any accessory) are confidential. The receiver should be aware of the confidentiality of the document and will neither use it for any other purpose except for the purposes specified nor disclose the document to any third party.

Catalogue

1. Overview	6
2. Caution.....	7
3. Appearance	8
4. Keypad definitions	9
5. Icons in the standby screen	10
6. Getting started.....	11
6.1 SIM card installation	11
6.2 Install the battery	11
6.3 Charge the battery	11
6.4 Security codes	11
7. Your handset.....	12
7.1 Turn on.....	12
7.2 Making a call	12
7.3 Answer an incoming call.....	12
7.4 End a call	12
7.5 Emergency service	12
7.6 Missed/Dialed call	12
7.7 Call divert (Network service).....	13
7.8 Call waiting (Network service)	13
7.9 Call barring	13
7.10 Hold a call	13
7.11 Turn off.....	13
8. Standby screen.....	14
9. List of main menus and submenus	15
10 PB	17
10.1 Phonebook List.....	17
10.2 Quick search	17
10.3 Add	18
10.4 Groups.....	18
10.5 Speed key	18
10.6 Own number.....	18
10.7 Settings	18
10.8 Memory status.....	19
11. Message	20
11.1 SMS.....	20
11.2 Voicemail	21
11.3 Cell broadcast	21
12. Call log	22
12.1 All Calls	22
12.2 Missed Calls.....	22
12.3 Dialed Numbers.....	22
12.4 Received Calls.....	22

12.5 Rejected Calls	22
12.6 Delete All.....	22
12.7 Call timer	22
12.8 Call costs	22
13. Settings	23
13.1 Time and Date	23
13.2 Display Settings	23
13.3 Language.....	23
13.4 Call Settings.....	23
13.5 Network settings.....	24
13.6 Security settings	24
13.7 Auto Boardkey.....	25
13.8 Direction key.....	25
13.9 Auto power on	25
13.10 Auto power off	25
13.11 Restore factory settings.....	25
14. Multimedia.....	26
14.1 Music Player	26
14.2 Media Player.....	26
14.3 FM radio	26
14.4 Games.....	27
15. Profiles	28
16. Accessory.....	29
16.1 Alarm.....	29
16.2 Calculator	29
16.3 Calendar.....	29
16.4 Memo.....	29
16.5 World time	29
17. Service	30
17.1 STK.....	30
18.File Manager.....	31
19. Text entry	32
19.1 Letter entry mode	32
19.2 Number entry mode	32
20. Accessories	34
21. Care and maintenance	34
22. Technical information.....	37

SAR INFORMATION

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types S13(FCC ID: WY8Z6150CS13) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.244 W/kg and when properly worn on the body is 0.171 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Section 15.21 Information to user.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Section 15.105 Information to the User

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Section 15.19 Labelling requirements

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

1. Overview

Welcome to the world of the 6150C mobile phone.

2. Caution

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect their performance.

TURN OFF IN HOSPITALS

Follow any restrictions. Turn off the phone near medical equipment.

TURN OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

TURN OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use it near fuel or chemicals.

TURN OFF NEAR BLASTING

Follow any restrictions. Don't use the phone where blasting is in progress.

USE SENSIBLY

Only qualified personnel may install or repair this product.

QUALIFIED SERVICE

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all-important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

3. Appearance



4. Keypad definitions

Key	Definitions
	<p>Left Soft key/Right Soft key Execute functions the left-down/right-down corner indicator shows. In the standby mode, press Left Soft key to access Menu, and Right Soft key to Name.</p>
	<p>Navigation key In other modes, it is used as the navigation/direction key except for some special functions. In the standby mode, left key to access Message;right key to FM Radio;press up key to access Profiles;down key to access Music Player.</p>
	<p>End key Mainly used as power on/off. Press to return to the standby screen in any interface.</p>
	<p>Dial key Press the key to dial or receive an incoming call. When in the standby mode, press the key to access All.</p>
	<p>Numeric key Press these keys to input numbers or characters.</p>
	<p>Star key 1.After inputting the phone number, press and hold "*" key until the symbol "P" appears, and input the extension number. 2. In MP3 mode,press "*" key to turn down the volume.</p>
	<p># key 1.Press the "#" key to switch the Entry Mode in text edit interface. 2.In MP3 mode,press "#" key to turn up the volume.</p>

5. Icons in the standby screen

Icon	Functions introduction
	Signal strength Vertical bars show the strength of the network connection. The icon is displayed on the standby screen.
	Battery strength Filled area shows the battery level. The icon is displayed on the standby screen.
	Alarm The icon shows an alarm is on. When the alarm is off, it disappears. In addition, memorandum and schedule are also showed with it.
	Unread message The icon is displayed on the standby screen when there are unread messages in the inbox.
	General When the mode is set to general, the icon is not displayed on the standby screen.
	Meeting When the mode is setting to meeting, the icon displays in the standby screen.
	OutDoor When the mode is setting to OutDoor, the icon displays in the standby screen.
	InDoor When the mode is setting to InDoor, the icon displays in the standby screen.
	Headset When the mode is setting to Headset, the icon displays in the standby screen.

6. Getting started

6.1 SIM card installation

When you register as a subscriber with a network operator, you get a **SIM**(Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your phonebook information.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Put the no cut-angle end of the SIM card to the slot. And make sure the SIM card is placed under the metal clips.

6.2 Install the battery

Caution: Install according to the illustration above to avoid breaking the battery connectors.

6.3 Charge the battery

Insert the charger into the bottom of the phone, The flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen starts scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug to disconnect the charger from the phone.

- When the battery is not enough, one low battery message displays on the screen and the battery icon displays empty. If the battery level is very low, the phone turns off automatically. Do not use your phone under low battery state for a long time, or it may cause battery damage.

6.4 Security codes

—PIN code

PIN code (Personal identity number) prevents unauthorized use of your phone. The **PIN** code usually provided by your network operator with the **SIM** card.

If you enter the wrong code three times in a row, the **PIN** code is blocked. To unblock the **PIN** code, you need to enter your PUK. Your PUK is provided by your network operator.

—PIN2 code

Some functions, call costs for example, need input the **PIN2** code. The **PIN2** code provided by your network operator with some of the SIM card, and these functions are only available when the SIM card supports them.

If you enter the wrong PIN2 code three times in a row, the **PIN2** code is blocked. To unblock the PIN2 code, you need to enter your PUK2. Your PUK2 is provided by your network operator.

—Phone code

Activate/Modify/Deactivate Startup password (the length of the password is 4-8 digital numbers).

If you activate the “Startup password”, you need to enter the password each time you turn the phone on. If you want to modify the Startup password or deactivate “Startup password”, you can enter Modify/Deactivate option to set.

7. Your handset

7.1 Turn on

- Press and hold the power key to turn on your phone, the phone will light the backlight, and display power on animation.

You can only access some of the menu interfaces, which do not rely on the SIM card when no SIM card installed or the SIM card is not correctly installed.

- When the **PIN** code is activated, the phone will display "Please enter **PIN** code" before power on. Input the correct **PIN** code and press Left soft key to continue.
- If the PIN code is locked, the alert message for inputting **PUK** code will display in the screen before power on.
- The phone will search the network automatically after power on.

If your phone connects network correctly, the name of the network and signal strength will display; if your phone can't register or can't register correctly, you can only access emergency calls and other functions not relying on the network.

7.2 Making a call

In standby screen, enter the area code (if required) and phone number and then press the green key to make a call. Press the right soft key to delete a number if necessary, and press and hold the right soft key to delete all the numbers.

Press the left soft key to access Option menu, and use navigation key to select an item.

- Send message

Edit SMS and send it to the selected phone number.

- Add to Phone book

Add the phone number to Phone book, it will store in the SIM card or handset memory.

- Call

Call the number.

7.3 Answer an incoming call

When you have an incoming call, your phone rings and/or vibrates and displays an incoming call message.

Press the green key or left soft key to answer it.

7.4 End a call

Press the power key to end a call or cancel an outgoing call when it hasn't been received.

7.5 Emergency service

You can dial an emergency call without SIM card.

Contact your service provider to get the emergency call.

7.6 Missed/Dialed call

You have two ways to access the latest missed/dialed calls, and check the time and date related the numbers.

- When missed a call, the character "missed a call" and the number of missed calls displays in the

screen. Presses left soft key to access the latest missed call number list, and use the navigation key to select an item.

- In standby screen , presses the green key to view the list of the dialed number.

7.7 Call divert (Network service)

When the call divert is activated, the incoming call will be diverted to voice mail or other phone numbers according to the divert condition set.

7.8 Call waiting (Network service)

When the call waiting function is activated, the incoming call will be displayed on the screen if you are in another call. Contact your service provider to sign up call waiting.

If another call comes while you are in a call, the screen will display the following options:

- Hold & Answer

Hold the ongoing call and answer the second incoming call.

- Release & Answer.

Release the ongoing call and answer the second incoming call.

- Release

Release the ongoing call

7.9 Call barring

When the call barring is activated, some of the calls will be barred according to the call barring conditions set. Contact your service provider to sign up for call barring.

7.10 Hold a call

When in a call, press left soft key to access optional menu, Use the navigation key to select an item.

- To Hold
- Release
- New Call
- PB
- SMS
- Silent

7.11 Turn off

In the standby mode, press and hold the Red Key for a long time to turn off the phone.

8. Standby screen

Press power key to turn on your phone, the phone will light the backlight, and display power on animation. The first screen that appears is the standby screen.

In the screen, icons indicating the network name, signal strength, battery levels, time and date, and phone configure information will display. Refer to icons in the standby screen for icon information. The down-left corner indicates Menu, and the down-right corner indicates Name.

In standby screen ,press left soft key to enter Menu in default, and press right soft key to enter Name.

9. List of main menus and submenus

In standby screen, press left soft key to access main menu. The main menu includes items: (1)PB (2)Message (3) Call log (4) Settings (5) Multimedia (6) Profiles (7)Accessory (8) Service (9)File Manager, all together nine items.

List of main menus and sub menus as below:

PB

- Phonebook List
- Quick search
- Add
- Groups
- Speed key
- Own number
- Settings
- Memory status

Message

- SMS
- Voicemail
- Cell broadcast

Call log

- All Calls
- Missed Calls
- Dialed Numbers
- Received Calls
- Rejected Calls
- Delete All
- Call timer
- Call costs

Settings

- Time and Date
- Display Settings
- Language
- Call Settings
- Network settings
- Security settings
- Auto Boardkey
- Direction key
- Auto power on
- Auto power off

Restore factory settings

Mulitmedia

- Music Player
- Media Player
- FM radio
- Games

Profiles

- General
- Meeting
- OutDoor
- InDoor

Accessory

- Alarm
- Calculator
- Calendar
- Memo
- World time

Service

STK

File Manager

- Phone memory
- Memory Card

10 PB

The functions of browse, save, edit and delete items in phone and SIM card are provided. You can manage the phone book items easily with the function of grouping. The storage volume is different for different SIM cards.

10.1 Phonebook List

Access the phonebook list, press left soft key for details.

• View

View the number.

• Modify

Edit the phone book data of the record.

• Call

Call the number.

• Send message

Edit and send to the number a short message or MMS.

• Send Card

Send the name card to the sender

• Delete

Erase the phone book data of the number.

• Copy

Copy the phone book data of the number.

• Set as rejected

Set the number as rejected number.

10.2 Quick search

Access the record list, press left soft key for details.

• View

View the number.

• Modify

Edit the phone book data of the record.

• Call

Call the number.

• Send message

Edit and send to the number a short message or MMS.

• Send Card

Send the name card to the sender

• Delete

Erase the phone book data of the number.

• Copy

Copy the phone book data of the number.

• Set as rejected

Set the number as rejected number.

10.3 Add

Select to add to SIM or to phone using the navigation key.

—SIM

Edit the Name by pressing left soft key.

Edit the Private number by pressing right soft key.

—Phone

You can input Name, Private, Home, Office, Mail and group (default Family) in turn.

Press left soft key to save the data to pointed location, the number is stored successfully after “Done” appears.

10.4 Groups

You may assign any one in the contacts list(which saved in the handset) into any group, and setting up incoming ringtone for each groups. Total is 5 groups originally.

You can add new groups, then adding new members, setting incoming ringtone for them

10.5 Speed key

Set the speed key. Press the left soft key to show the list of keys, press the left soft key to edit and specify the number to the keys.

Afterwards, press and hold the numerical keys to call the set numbers. The single bond digit dialing may establish 8 corresponding numbers.

10.6 Own number

Save the own number, with a maximum of two.

10.7 Settings

10.7.1 Delete items

Delete items the records.

10.7.2 Delete all

—SIM all

Delete all the records in SIM card.

—Phone all

Delete all the records in phone.

10.7.3 Copy all

—SIM to phone

Copy all the records in SIM card to phone.

—Phone to SIM

Copy all the records in phone to SIM card. If there are more than one number in the same name, the record is converted to several records with the same name when copy to SIM card.

10.7.4 Copy items

Copy items the records.

10.7.5 Black list

—Block Number

- Block Group
- Open/Close

10.8 Memory status

Check the phone book memory status of SIM card or phone.

11. Message

Under this function, you can send, receive, and save short messages. The function needs your service provider's support; contact your service provider for further information.

11.1 SMS

This function can write the SMS information.

— Write

In this function, you can write a message.

Input the characters and press left soft key to access edit options:

Use the navigation key to select an item.

- Send

Press left soft key to access send, input a phone number, and press left soft key to send the SMS.

- Send and Save

Send the SMS and save it to sent box. If sent unsuccessfully, save the SMS to outbox.

- Add Word

You can select a word to insert to the message.

- Save to Draft

Save the SMS to draft box.

— Inbox

You can read all the SMS you received in inbox.

Mobile beeps when you receive a new SMS, and the icon for unread SMS appears on standby screen. You can read the new SMS by pressing left soft key and the information about the new SMS, such as receiving time, date, and sender will be showed on screen. The alternative way to read the new SMS is in inbox.

After reading the SMS, you can press left soft key to process the SMS.

- Reply SMS

Reply the sender of the SMS

- Edit number before call

You can edit number before call

- Call

Call the sender of the message

- Forward

You can forward the message to others.

- Extract number

Extract the number of the sender.

- Delete

Delete the message

- Delete all

Delete all the message.

— Outbox

You can read all the message(s) which haven't been sent successfully

- Resend

Resend the message.

- Edit

Edit the message.

- Delete

Delete the message.

- Delete all

Delete all the message.

— Draftbox

The message(s) to be sent is (are) stored in Draft.

— SMS settings

- Message validity period

Possible validity period: 1 hour/6 hours/24 hours/72 hours/1 week/Maximum

- Template settings

You can edit the template.

- Message center number

You can set message center.

CMCC in Shanghai : +8613800210500, China Union in Shanghai: +8613010314500,

Don't Change this setting randomly, or may cause sending message failure.

- Status report

Setting the condition report: Activate/Deactivate

- Save order

Set the status as: Handset/SIM

- Memory

Examine the capacity of information in the handset and SIM.

11.2 Voicemail

The mobile phone supports voice mail. Others can leave a message in your voicemail when they call you, meanwhile, you can check your voicemail when you receive message notification.

— Retrieve message

It enables you to call the voice mail number and listen to the message.

— Number settings

Edit the voice mail box number.

This function needs the support of network provider.

— Delete

Delete the voice mail number.

11.3 Cell broadcast

Cell information service broadcasts all kinds of SMS. This function enables you to change the settings of the service and read cell information.

— Read

Read the received information.

— Startup

You can turn on/off the service.

— Channel

You can set the channel you want to receive the information from.

— Language

The language of cell information can be: English.

12. Call log

12.1 All Calls

You can check and edit all calls of missed calls,dialed calls,received calls.

12.2 Missed Calls

Display the latest missed number list. Use the navigation key to select an item, and press the send key to call the number. Also you can press the left soft key to access detail information of the number. You can select Check /Edit number before call/Call/Save Number/Send message/Delete/Delete All/Sett as rejected number .

12.3 Dialed Numbers

Display the latest Dialed number list. The submenu is similar to Missed call.

12.4 Received Calls

Display the latest Received call number list. The submenu is similar to Missed call.

12.5 Rejected Calls

Display the latest rejected call number list, including the incoming call numbers in the MTFW list in phone book. The operation refer to Miss call.

12.6 Delete All

- Delete All

Delete all the call records

- Missed Calls

Delete all the Missed call records

- Received Calls

Delete all the Received call records

- Dialed Number

Delete all the Dialed call records.

- Rejected Calls

Delete all the Rejected call records.

12.7 Call timer

Display the information of last call, received call, dialed call, all the calls and reset the timer.

12.8 Call costs

Use the navigation key up/down to select All costs, Max costs, Cost rate and Cost reset.

Press the left soft key to access further settings or detail information.

This function needs your operator's support.

13. Settings

13.1 Time and Date

- Set time: This option can set your handset current time.
- Set date: This option can set your handset current date.
- Time Display Type: Select the time display type as: 12 hours/24 hours
- Date Format: Year-Month-Day/Month-Day-Year/Day-Month-Year

13.2 Display Settings

— Backlight

The possible duration for background light is: Always on/30S/20S/15S/10S/5S/.

— Contrast

You can adjust the brightness of main LCD with right/left navigation key.

— Keypad light

You can set keypad light: 20sec/10sec/5sec/Deactivate

13.3 Language

- English: This option can set your handset current language as English.
- Spanish: This option can set your handset current language as Spanish.

13.4 Call Settings

— Call waiting

Suppose this function is enabled: when you are calling, the call waiting information appears on the screen if another call comes. If you need this function please contact the network operator. You can choose from below:

- Activate

To activate the call waiting function.

- Deactivate

Deactivate the call waiting function.

- Check status

You can check the status of the service of call waiting.

— Call divert

If call divert is activated, the incoming call will be connected to voicemail or other phone numbers according to call divert condition.

- Unconditional

You can choose from below:

- ~~ Activate

Active unconditional call divert. You can choose which number or voice mail you want to connect to.

- ~~ Deactivate

Disable unconditional call divert.

- ~~ Check status

You can check the status of the service of unconditional divert.

- If busy

The operation is the same as “unconditional”.

- If no answer

The operation is the same as “unconditional”.

- If unreachable

The operation is the same as “unconditional”.

- Cancel all diverts

Cancel all the setting of the call diverts.

— Anykey to answer

You can set:Activate/Deactivate

— Minute Alert

Set minute alert ring tone:Activate/Deactivate

— Auto Redial

You can set:Activate/Deactivate

— Call barring

you can bar all the call of outgoing, incoming, when roaming, international outgoing, international incoming. The operation is the same as “unconditional” .

- All outgoing calls
- All incoming calls
- Incoming when roam
- All intl outgoing
- Outgoing intl roam
- Cancel all barring

You can cancel all call barring by selecting left soft key then inputting mobile password.

- Change Pass Word

Press left soft key to input phone pass word, and press left soft key to ensure.

13.5 Network settings

This function can let you select the network manually or automatically when the phone is in the roaming state. You can use this function only after you have made an effective roaming

— Auto select

Press the left key and Ok, the mobile phone will search various networks. This operation will let your phone registered to the most suitable network.

— Manual select

Press the left soft key and Ok, the mobile phone will search various networks. You can select the suitable network from the listed networks.

13.6 Security settings

You can use PIN code, PIN2 code, Phone code, and theft guard to protect the phone's various functions.

Activate/Modify/Deactivate PIN code

If you want to activate or deactivate PIN code, you must enter the correct PIN code.

If you set PIN code request to on, you need to enter the PIN code each time you turn the phone on.

If you enter the wrong code three times in a row, the SIM card is blocked. You need a PUK1 to unblock.

Before you modify PIN code, you must activate the PIN code request first. Enter the current PIN code, then enter the new PIN code.

PIN2 code

Refer to “PIN code”

—Startup password

Activate/Modify/Deactivate Startup password (the length of the password is 4-8 digital numbers).

If you activate the “Startup password”, you need to enter the password each time you turn the phone on. If you want to modify the Startup password or deactivate “Startup password”, you can enter into the Modify/Deactivate selection to set.

13.7 Auto Boardkey

—Activate

—Deactivate

13.8 Direction key

You can use this feature to change the shortcut mode of navigation keys when the phone is in the standby mode. The default shortcut mode of navigation keys is: up: Profiles; down: Music Player; left: Message; right :FM radio.

The shortcut mode of direction keys can be set to the following applications and functions:

Profiles, Alarm, Games, PB,PB Browse,Memo,Calculator,Message,

Music Player,FM radio, Media Player.

13.9 Auto power on

When the time you specify comes, the phone will power on/off automatically.

—Activate

Setting up automatic power on time:Once/Every day/Every week.

—Deactivate

Deactivate the function of power on

13.10 Auto power off

When the time you specify comes, the phone will power off automatically.

—Activate

Setting up automatic power off time: Once/Every day/Every week.

—Deactivate

Deactivate the function of power off

13.11 Restore factory settings

Reset all the settings to their original values.

14. Multimedia

14.1 Music Player

Enter the MP3 player screen.

Press the left key to get into the Play list:

—Play

Play the selected song.

—Add

Select e:/My Music (or a specific File) ->Add to a playlist.

If there are not any songs in the playlist, it will be added songs from T-Flash card.

—Update to My Music

Update your own play list.

—Delete from list

Remove a selected song from the playlist.

—Delete list

Remove all songs from the playlist.

From the MP3 player screen, press the OK key to get into:

—Play mode

Select the play mode: Repeat all/Track once

—Play background

Select the play background: Enable/Disable:

Enable: return to the standby mode and leave the player playing in the background.

Use navigation key: “Up” play/pause; “Down”: stop; “Left”: Preceding; “Right”: Next.

14.2 Media Player

Insert the T-Flash card, the phone will find “My Video” automatically. There is a default video:

Somebody to love.3gp

Media Player supports the downloaded videos formats as MP4 and 3GP.

Option:

—Play

Play the selected MP4.

—Delete

Delete the selected MP4.

—Change default dir

Switch the play dir.

Press "#"key to turn up the volume and press "*"key to turn down the volume.

14.3 FM radio

You need to insert earphone first. In the radio, press left/right key to chose channel manually,press up/down key to chose channels saved. Press left softkey to "option".

When you first time to use FM radio,you should save channel first and then you can listen to the FM radio.

14.3.1 Open/Close radio

Turn On/Off the radio

14.3.2 Play/Close in speaker

You can choose play in speaker or in earphone.

14.3.3 Start record

Take record of radio.

14.3.4 Turning

- Auto search
- Manual search
- Jump to appointed channel

14.3.5 FM channel list

The channel list saved

- Jump to appointed channel
- Modify
- Delete

14.4 Games

—Up Up Up

- New game

This item can start the game. Press left soft key to start the game, and press right soft key to finish the game.

- Help

Display the help message, and tell you how to play this game.

- Scores

Arrange by the scores.

- Exit

Exit game.

—BoxMan

- New game

This item can start the game. Press left soft key to start the game, and press right soft key to finish

- Continue

Continue the last game

- Select Stage

Select stage of game

- Help

Teach you how to play this game.

15. Profiles

In "Profiles", you can customize the ring according to scenes, environment and contact group.

There are five kinds of environments available, you can select by left soft key.

—Activate

Activate profiles, the handset applies this profile that each sounds setted up will be use.

—Edit

- Tone Setup

Setting up rings as Incoming ringtone / Message ringtone / Alarm ringtone / Keypad tones / PowerRing / Battery low alert.

- Ring Type

Choose ring type as Call alert/Message alert/Alarm remind.

- volume

The function enables you to set the volume of incoming :Incoming ringtone/Message ringtone/Alarm volume/Earpiece volume/power on/off tone.

—Rename

This function can let you modify the name of profiles.

Note:After you insert earphone, "Headset" will appear.

16. Accessory

Accessory includes some common features, such as alarm clock,calculator, games, calendar, memo, schedule, world time , area code search, area info search.

16.1 Alarm

The alarm clock feature sounds an alert or takes a vibrating alert at a time you specify.

- Activate/Deactive

You can set alarm activate or deactivate.

- Modify

Set alarm time.

16.2 Calculator

This feature let your phone become a calculator, and you can use it to do simple calculations.

Press digital keys to enter the corresponding numbers. Use following direction keys to calculate:

up/down/left/right keys: +, -, *, /

*key: decimal point

#key: clear all the numbers and symbols entered

Left soft key and ok key: Show the calculation result.

16.3 Calendar

You can use this feature to view the date easily. Use up/down/left/right direction key to navigator other date.

16.4 Memo

You can keep track of your schedule with the Memo function.

—Check

You can view the Memo content arranged by date under this item.

—Increasing

You can add a new note under this item.

Follow the following the steps to add a new note:

- Enter the time of the note, press left soft key and ok.
- Enter the date of the note, press left soft key and ok.
- Enter the content of the note. At last press soft key and ok.

—Delete all

You can delete all the notes under this item.

16.5 World time

You can view the local time of famous cities in the world. When you arrive at a city, you can set the city's time to be the local time.

Press left/right navigation key to view the time information of the cities. Press left soft key to enter. The phone will display the current time of local city you have specified as a default. Press left soft

key to set “Set As local” or “Set As DST”.

17. Service

17.1 STK

If your SIM card supports STK function, the phone can display different first level menu by different STK card.

This function needs the network operator's support. If the user finds the function of STK can't be operated normally when using, please contact the network operator. If the user can't use the functions because the network operator does not provide them, we do not take on the duty.

18.File Manager

In “File Manager”, you can browse, open and manage the file and document of T-flash card (ensure you had insert it to your phone).

—Phone memory

- Open

Open the file list.

- New Folder

Add new folder.

- Memory status

Check the capacity of file manager.

—Memory Card

- Open

Open the file list.

- New Folder

Add new folder.

- Format

Format the memory card

- Memory status

Check the capacity of file manager.

19. Text entry

You can select from many methods of entering text and numbers.

Selecting a Text Entry Mode

On any message screen, press the # key to switch input mode.

As you press the # key, the following icons (not the descriptions) appear in the upper right of the display.

When screen displays Text Entry menu you can see handwriting, pinyin, character, number, symbol, and you can select from the Text Entry Mode.

19.1 Letter entry mode

Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your phone awaits the next entry.

For example, press the “2” key continuously, it will appear “A”、“B”、“C”、“2” one by one.

Press “*” to shift between capital and minuscule.

The character can be input as in the following list:

Key	Character
1	. , ? ! 1 : ; ' - \ @ / % & () [] { } < > " \$ + = # * ^ _ ~ `
2	ABC2
3	DEF3
4	GHI4
5	JKL5
6	MNO6
7	PQRS7
8	TUV8
9	WXYZ9
0	Space

19.2 Number entry mode

Press the # key to switch the Entry Mode to Number Entry Mode, and then press the number key.

20. Accessories

Unpack

Make sure you have each item

- Phone
- Travel Adapter
- Battery
- User's Guide
- Earphone

You can obtain various accessories from your local dealer.

You can use accessories approved by our company, the other accessories can be provided by the seller.

Traveler charger

Super slight, useful charger, can charge the mobile phone very fast. Plug the charger in the electrical plug, and the other end connected to the bottom of the phone.

You can check the charging state in the screen of the phone. The mobile phone will not power on automatically in charging time, if the phone is in power off state.

21. Care and maintenance

Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifetime of the battery, run out the power of the battery before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifetime.
- Temperature extremes can affect the ability of your battery to charge. Battery need the fit temperature. If the temperature of the battery is over 40°C, the battery will not be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service. damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

- Battery performance is particularly limited in temperatures well below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain

minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices,

22. Technical information

Weight:

Networks:

Battery:

Size: Length × Width × Depth

Battery work times refer to the list below (Will no announce If the capacity of is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

- 1, The damage is due to the wrong operation.
- 2, The User has not followed the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will be no announced.

Note: The pictures in the manual are just for reference, please take the actual things as standard.

Remark:Sar Measurement Report