

KENWOOD

KWSA80K

USER MANUAL



JVCKENWOOD Corporation

CONTENTS

GENERAL INFORMATION.....	6
THIRD PARTY TRADEMARKS	6
DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT	6
DISPOSAL OF BATTERY	6
GUIDELINE FOR HEADPHONE AND EARPHONE	6
USE THE GUIDE EFFECTIVELY	7
SAFETY GUIDELINES.....	8
HEARING AID COMPATIBILITY (HAC) REGULATIONS FOR MOBILE PHONES	9
AVOID HIGH TEMPERATURES	10
PERSONAL MEDICAL DEVICES	10
CHILD SAFETY	11
EMERGENCY CALLS	11
BATTERY SAFETY WARNING FOR IEEE1725.....	12
CHARGING SAFETY WARNING	13
BATTERY USAGE	14
INSERTING THE BATTERY	14
INTRINSICALLY SAFE (IS)	16
CHARGING THE BATTERY	17
VERIFYING AND OPTIMIZING BATTERY USAGE	18
TIPS TO EXTEND THE BATTERY LIFE.....	18
YOUR SIM CARD	19
INSERTING THE SIM CARDS	19
INSERTING THE MEMORY CARD	20
GETTING STARTED.....	21
WHAT IS IN THE BOX?	21
SPECIFICATIONS	21
USING KWSA80K	23
SWITCHING ON KWSA80K.....	24
SETTING UP KWSA80K	24
MANAGING HOME SCREEN	25
BUTTON DESCRIPTION.....	25
STATUS BAR ICONS.....	26
PHONE OPERATIONS WITHOUT SIM CARD.....	27

SETTING UP AND USING LOCK SCREEN 28

CHANGING THE WALLPAPER 28

CAPTURING A SCREENSHOT 28

SUGGESTIONS..... 29

MANAGING WIRELESS & NETWORK SETTING 30

 Wi-Fi 30

 BLUETOOTH 31

 DATA USAGE..... 32

 MORE 32

MANAGING DEVICE SETTINGS..... 35

 DISPLAY 35

 NOTIFICATIONS..... 36

 SOUND..... 36

 APPS 38

 USB POWER SAVING..... 38

 STORAGE 39

 BATTERY 40

 MEMORY 40

 USERS 41

 TAP & PAY 42

 GESTURES..... 42

MANAGING PERSONAL SETTINGS 43

 LOCATION..... 43

 SECURITY..... 44

 ACCESSORIES..... 46

 PROGRAMMABLE BUTTONS 46

 ACCOUNTS..... 46

 GOOGLE 46

 LANGUAGES & INPUT 47

 BACKUP & RESET..... 48

MANAGING SYSTEM SETTINGS..... 50

 DATE & TIME 50

 ACCESSIBILITY 50

 PRINTING..... 52

 ABOUT PHONE..... 52

MANAGING CONTACTS..... 53

 ADDING NEW CONTACT FIRST TIME..... 53

 ADDING A NEW CONTACT 53

 VIEWING CONTACT DETAILS..... 53

 EDITING THE CONTACT DETAILS..... 53

 SENDING A MESSAGE FROM CONTACTS..... 53

 MENU OPTIONS..... 54

 SEARCHING A CONTACT 57

 DELETING A CONTACT..... 57

 SHARING A CONTACT 57

 ADDING FAVORITES 57

 ADDING GROUPS 58

MANAGING CALL SETTINGS..... 59

 MAKING A CALL 59

 DIALING A NUMBER VIA CONTACT 59

 ADDING CONTACT FROM HOME SCREEN..... 59

 CALL HISTORY SCREEN 59

 MANAGING CALL SETTINGS 60

SENDING MESSAGES AND EMAILS 64

 SENDING SMS/MMS MESSAGE 64

 MANAGING MESSAGE SETTINGS..... 65

 DELETING MESSAGES..... 67

 SETTING UP GMAIL ACCOUNTS..... 67

 SENDING AN E-MAIL FROM POP3/IMAP ACCOUNT..... 67

 READING GMAIL 68

SONIM SCOUT..... 69

 SETUP 69

 SUPPORT 70

APPLICATIONS..... 71

 CAMERA 71

 CALENDAR 72

 CLOCK 73

 CALCULATOR 74

 SOUND RECORDER 74

 FILE MANAGER 74

SIM TOOLKIT 75

DOWNLOADS 75

FM RADIO 76

REGULATORY INFORMATION - USA MARKET 78

RF EXPOSURE INFORMATION (SAR) 78

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT 78

FCC CAUTION 79

INDUSTRY CANADA STATEMENT (IC: 8090A-PG4032) 79

REGULATORY INFORMATION - EUROPEAN MARKET 82

EU REGULATORY CONFORMANCE 82

FREQUENCY BANDS 82

RF EXPOSURE 83

5G Wi-Fi..... 83

LVD LOGO..... 83

DIPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT LOGO 83

ADAPTER..... 83

DECLARATION OF CONFORMITY 84

GENERAL INFORMATION

THIRD PARTY TRADEMARKS

Google, Android, Google Calendar, Google Now, Google Play and other marks are trademarks of Google Inc.

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection at their end- of-life.

DISPOSAL OF BATTERY



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

GUIDELINE FOR HEADPHONE AND EARPHONE



To prevent possible hearing damage, please do not listen at high volume levels for long periods.

USE THE GUIDE EFFECTIVELY

Familiarize yourself with the terminology and symbols used in the guide to help you use KWSA80K effectively.

HOME SCREEN	This is the screen displayed when KWSA80K is in standby mode.
TOUCH & HOLD	Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs.
DRAG	Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position.
SWIPE OR SLIDE	Quickly move your finger across the surface of the screen, without pausing when you first touch. For example, you can slide a home screen left or right to view the other home screens.
DOUBLE TAP	Tap quickly twice on a webpage, map or other screen to zoom.
PINCH	In some applications, you can zoom in and out by placing two fingers on the screen at once and pinching them together or spreading them apart.

SAFETY GUIDELINES

Please read and understand the following safety guidelines before you use the cellular device. These guidelines provide details to enable you to operate the device safely and conform to any legal requirements regarding the use of cellular device.

	Do not use the cellular device at a refueling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.
	Electrical interference may obstruct the use of the cellular device. Observe restrictions in hospitals and near medical equipment.
	Switch off the cellular device when in an aircraft. Wireless devices can cause interference or danger to an aircraft. In an aircraft, the cellular device can be used in flight mode.
	Do not expose the cellular device to high temperatures (in excess of 55°C/ 131°F).
	Adhere to road safety laws. Do not hold/use a cellular device while you are driving; find a safe place to stop first. Use hands-free microphone while you are driving.
	Avoid using the cellular device in close proximity to personal medical devices, such as pacemakers and hearing aids.
	Use only KWSA80K approved charging equipment.
	Ensure that only qualified personnel install or repair the cellular device.
	• Do not use options not specified by KENWOOD. • Do not place KWSA80K on unstable surfaces. • Do not charge the transceiver and battery pack when they are wet. • Do not place the microphone cable around your neck while near machinery that may catch the cable.

	KWSA80K is water-proof and can be submerged to 2 m for 30 minutes. • Ensure that the audio connector and the SIM slot are properly closed. This will prevent the deposit of water droplets on the connectors, when the cellular device is immersed in water. • Water droplets may condense under the display cover if the cellular device is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets will disappear at room temperature. KWSA80K is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect KWSA80K from salt water, dust and strong impacts.
---	---

HEARING AID COMPATIBILITY (HAC) REGULATIONS FOR MOBILE PHONES

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M4/T4 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

AVOID HIGH TEMPERATURES

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. For the best results, try to use the device between -20°C and +55°C (-4°F and 131°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

PERSONAL MEDICAL DEVICES

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and airplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmosphere or when close to electro-explosive devices.

CHILD SAFETY

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

EMERGENCY CALLS

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

WARNING



It is not allowed to connect any external devices to all ports/interface in Hazardous area.

BATTERY SAFETY WARNING FOR IEEE1725



Do not disassemble or open crush, bend or deform, puncture or shred.



Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.



Only use the battery for the system for which it is specified.



Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.



Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.



Promptly dispose of used batteries in accordance with local regulations.



Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard. Only authorized service providers shall replace battery. (If the battery is non-user replaceable).



Battery usage by children should be supervised.



Avoid dropping KWSA80K or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.



Improper battery use may result in a fire, explosion or other hazard.

CHARGING SAFETY WARNING



The equipment shall only be charged when in the non-hazardous area using a charger specifically supplied for use with the unit USB cable and AC charger S42A02(US plug)/ S42A00(EU plug)/ S42A01(UK plug).



DC5V/2A pin recommend to use charger with SELV function.

BATTERY USAGE

KWSA80K comes with a removable battery.

- Use only a KWSA80K certified battery that is designed for this model.
- The use of other batteries may void the warranty terms of KWSA80K and cause damage.
- It is recommended to protect the battery from extreme temperature environments and moisture.
- Please keep the battery out of the reach of children.

INSERTING THE BATTERY

1 UNSCREW COVER

To open the battery cover, rotate the battery cover screws in a counter clockwise direction (as shown in the figure). Sometimes, the battery cover may be tight and some extra effort is required to open it.

You can use the supplied screwdriver tool to unscrew the screws.



2 LIFT THE COVER

Lift the battery cover, to reveal the battery slot.



3 INSERT BATTERY

Insert the battery and flush into the battery slot such that the three metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.



4 CLOSE COVER

Close the battery cover. Rotate the battery cover screws in clockwise direction. You can use the supplied screwdriver to tighten the screws. Ensure not to over-tighten the screws.

- Make sure there is no gap between the battery cover and the body.



WARNING



BATTERY CANNOT BE CHANGED IN HAZARDOUS LOCATIONS.

INTRINSICALLY SAFE (IS)

Part I: Ex Marking

ATEX	Sira 18 ATEX 2077X
	II 3 G Ex ic IIC T4 Gc IP64
	II 3 D Ex ic IIIC T135 Dc IP64
IECEEx	IECEEx SIR 18.0030X
	Ex ic IIC T4 Gc IP64
	Ex ic IIIC T135 Dc IP64
cCSAus	CSA certificate No.70166117
	Class I Division 2 Group A, B, C, D
	Class 2 Division 2 Group F, G

Part II: Applicable Environment

- The equipment may be used in zones 2 with flammable gases and vapours with apparatus groups IIC and with temperature classes T4.
- The equipment may be used in zones 22 with flammable dusts, fibres and flyings in groups IIIC, with a layer auto-ignition temperature of not less than 75 K above the maximum surface temperature marked in the dust coding.

Part III: Special conditions of use

- If the equipment is likely to come into contact with aggressive substances, e.g. acidic liquids or gases that may attack metals or solvents that may affect polymeric materials, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected thus ensuring that the type of protection is not compromised.
- The certificate number has an 'X' suffix which indicates that special conditions of installation and use apply. Those installing or inspecting this equipment must have access to the contents of the certificate or these instructions. The conditions listed in the certificate are reproduced below:
 - The equipment shall only be changed when in the non-hazardous area using a charger specifically supplied for use with the unit.
 - Using the equipment shall prevent exposure to the daylight or light.

KWSA80K was tested in accordance low risk of mechanical danger, hence to avoid mechanical impact in normal use.

CHARGING THE BATTERY

The battery delivered with KWSA80K is not fully charged. We recommend that you charge KWSA80K for 2.5 hours before you use KWSA80K for the first time.



Only the power supplies with outputs meet the SELV requirements can be used for charging. The maximum allowable input voltage for KWSA80K is 9V.



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.



If the battery is completely out of charge, it can take several minutes for the charging icon to appear when the charger is connected.

WARNING



ONLY THE BATTERY CAN BE REPLACED IN NON-HAZARDOUS LOCATION.

1 INSERT CHARGER

Insert the charger plug into a power outlet.

2 CONNECT TO KWSA80K

Insert the charger connector to the charging port.

3 CHARGING ANIMATION/ICON

- If the battery is being charged when KWSA80K is switched off, a battery charging animation with current battery level is displayed.
- If the battery is being charged while KWSA80K is switched on, the battery icon on the status bar shows the animation indicating that the battery is being charged.
- After the battery is fully charged the charging animation stops and you can disconnect the charger from KWSA80K.



VERIFYING AND OPTIMIZING BATTERY USAGE

You can check the battery usage status and also close some applications to save battery power. In the all application screen, select **Settings** (⚙️) > **Device** > **Battery** (🔋).

The current battery level (charging or not charging) is displayed on the top of the screen. The discharge graph on the top of the screen shows the battery level over time since you last charged the device, and how long you have been running on battery power.

The list at the bottom of the screen shows the breakdown of battery usage for individual apps and services. Touch any listed items for more details. The details screen for some apps includes buttons that allow you to adjust settings affecting power usage, or stop the application completely.



If you stop some apps or services, your device may not work correctly.

TIPS TO EXTEND THE BATTERY LIFE

Follow these tips to extend the battery life.

- If you are not using Wi-Fi, Bluetooth, or GPS, use the Settings to turn them off. The GPS setting is located in **Settings > Personal > Location**.
- Set screen brightness to Low and set a shorter Sleep timeout (15 seconds). The display settings are located in **Settings > Device > Display**.
- If you are travelling and do not have access to mobile data or Wi-Fi network, switch to Airplane mode. Select **Airplane mode** from **Quick Settings**.

YOUR SIM CARD

Purchase a SIM card from a mobile operator. The SIM card associates your network services (for example, phone number, data services, and so on) with KWSA80K.

INSERTING THE SIM CARDS

1 UNSCREW COVER

Use the supplied screwdriver to unscrew the battery cover screw on the back side.



 
2 LIFT THE COVER

Remove the battery cover and the battery.



3 INSERT SIM CARD 1/ 2

Open either SIM card tray, insert SIM card and lock SIM card tray into place.

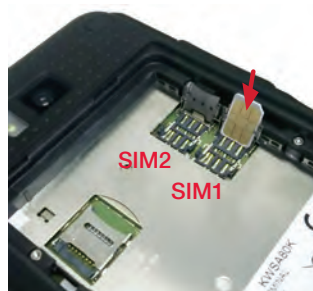

INSERTING THE MEMORY CARD

- Supports up to 128 GB MicroSD memory card.

1 SLIDE THE SILVER CLIP

Slide (push forward) and lift the silver clip over the designated slot.



2 PLACE THE MEMORY CARD

Place the memory card in the designated slot and close the silver clip.



GETTING STARTED

WHAT IS IN THE BOX?

The list of items in KWSA80K box are:

- KWSA80K
- Battery
- Wall Charger
- USB-C Cable
- Screwdriver
- Quick Start Guide

SPECIFICATIONS

FEATURE	DESCRIPTION
Chipset	Qualcomm SDM630, Octa core 64bits processor
Band	LTE: 1/2/3/4/5/7/8/12/13/14/20/25/26/27/28/29/30/38/39/40/41/B66 UMTS: B1/B2/B4/B5/B8 GSM: 850/900/1800/1900MHz
Antenna	2 x RX / 1 x TX antenna for LTE
Wi-Fi	Dual bands (2.4G/5G) 802.11 a/b/g/n/ac/e/k/r/h with hotspot Wi-Fi Direct (Miracast™)
Memory	4GB RAM/64GB ROM 45GB available user memory Supports up to 128GB MicroSD external memory
NFC	13.56 MHz
Location access	GPS/GLONASS/BDS
CONNECTIVITY	
Bluetooth	BT5.0/BLE (Low Energy)
Capacity(mAh)	4900 mAh, removable Li-ion
Battery Life	Standby: up to 653 hours Talk time: up to 22 hours Music playback: up to 11 hours Video playback: up to 16 hours Web browsing: up to 19 hours
PHYSICAL CHARACTERISTICS	
Ambient temperature	-20°C to +55°C (-4°F to +131°F)
Size W x H x D (Include protrusion)	160 x 83.6 x 21.1 mm (6.3 x 3.29 x 0.83 inches)
Weight (with Bat.tery)	approx. 348 gms (12.3 oz)

FEATURE	DESCRIPTION
Dedicated Buttons	Power/ PTT/ Volume (Up and Down)/ Emergency / Home/ Recent/ Back
Ports	Water-proof USB3.1 type-C, High Speed, OTG
DISPLAY	
Size	5" 1080p with outdoor visibility & low power consumption Glove touch
Outdoor Visibility	Yes
Capacity	16.7 M
Receiver	500 nits
AUDIO	
Microphone	3 Mics with noise cancellation
Speaker	Dual front-facing loud speakers; output 100dB+
Receiver	Receiver Compliant HAC; HD voice support
MULTIMEDIA	
Audio Formats	AMR-NB, AMR-WB, AAC, AAC+, AAC+V2, MP3
Video Formats	3GP,MP4, WMV, AVI, MOV, MPEG-2, MPEG-4,H.263, H.264, H.265
Image Formats	JPEG
Graphic Formats	JPEG, PNG, and BMP
FM Radio	Yes
Camera	12MP Auto focus with low light sensor 8MP camera with fix focus
LED Torch Light	Reuse with camera flash LED

BASIC OPERATIONS



1. Power ON Button
2. PTT Button
3. Volume Up / Down
4. Apps (applications) Tray
5. Speakers
6. Back Button
7. Home Button
8. Front Microphone
9. Recent Button
10. Display
11. Google Search Bar
12. Battery Level Indicator
13. Front Facing Camera
14. LED Notification
15. Receiver
16. Status Bar
17. SecureAudio Connector
18. Programmable Button
19. Emergency Button
20. Back Microphone
21. Torch/Flash Light
22. Rear Facing Camera
23. Battery Cover
24. Battery Cover Screw
25. USB-Type C



SWITCHING ON KWSA80K

Press and hold **Power** button for 2 seconds..

When KWSA80K is switched on, it tries to register with the network. After successful registration, the name of the service provider is displayed.



Ensure that a valid SIM card is inserted in KWSA80K.

SETTING UP KWSA80K

For instructions on using the buttons, charger, battery, and other hardware features, check the printed Quick Start Guide provided along with KWSA80K.

The first time you turn on your device, it will take you through the steps to get the set up. You will be prompted to do the following:

- 1 Choose the language you want KWSA80K to use.
- 2 Connect to a Wi-Fi network or your cellular data network.
- 3 Sign-in with your Google Account.

If you have Gmail account, use the same e-mail address and password to sign-in. By signing in, all your e-mail, contacts, calendar events, and other data associated with that account will be synced to KWSA80K. If you have more than one Google Account, you can add them later.

 
If you do not have a Google Account, you can create one during the setup process. You can also skip this step and create later.

MANAGING HOME SCREEN

After you complete KWSA80K setup, the home screen is displayed. The home screen is the beginning point to access all the device's features.



Device comes equipped with pre-installed screen protector for added protection.

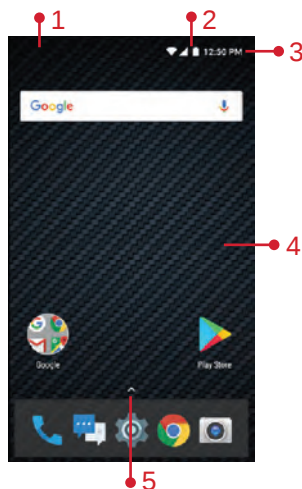

1. Message/Alert Notifications
2. Service Indicator and Signal Strength bar
3. Battery charge indicator and time
4. Home screen
5. Application Grid or Menu

BUTTON DESCRIPTION

The navigation buttons are located below the display screen.

ICONS	DESCRIPTION
	Back: Opens the previous screens in the working sequence till the home screen is displayed. Once the home screen is displayed it will remain there even when you press the back button.
	Home: Short press on any app: Shows the home screen. Long press: Google Assistant
	Recent: Short Press: Opens a list of thumbnail images of apps you have worked on recently. To open an app, touch it. To remove any application from this list, swipe the application to left or right. Double press: Launches the menu options of any application.

STATUS BAR ICONS

The icons displayed at the top of the screen provides information about the status of the device. The details such as date and time, battery charge status, and data service are displayed when KWSA80K is in standby mode. Other indicators such as Bluetooth connectivity status, airplane mode, alarm and call forward (only if Always forward is enabled) and Wi-Fi connectivity are displayed, if the feature is activated.

ICONS	DESCRIPTION
	Battery level indicator
	Battery charging in progress
	No signal
	Signal strength
	No SIM card
	Roaming
	4G LTE network connected
	HSPA or UMTS network connected
	GPRS network connected
	EDGE network connected
	Wi-Fi connected
	Bluetooth activated
	Call in progress
	Call forward (only if Always forward is enabled)
	New E-mail
	FM Radio

ICONS	DESCRIPTION
	Missed call
	New SMS or MMS
	Alarm activated
	Silent mode activated
	Vibration mode activated
	Flight mode activated
	Error/information notification - attention required
	Screenshot captured
	Music is played
	Device storage space is running out

PHONE OPERATIONS WITHOUT SIM CARD

You can perform the following operations without inserting a SIM card in KWSA80K.

- Make an emergency call.
- View and modify all settings except few data usage and mobile network related settings.
- Activate and share files through Bluetooth.
- Access the Internet using Wi-Fi connectivity.
- Access your phonebook, multimedia files, all tools and applications.
- View and modify your profile settings.

SETTING UP AND USING LOCK SCREEN

You must lock KWSA80K to protect it from unauthorized access.

- From Home screen, tap on **System settings** or select **Menu > Settings** ().
- Scroll down and select **Security** (), located under **Personal** settings.
- Select **Screen lock** and select one of the following options to configure KWSA80K:
 - **None:** Disables the screen lock.
 - **Swipe:** When the screen is locked, slide your finger from bottom to top to unlock it.
 - **Pattern:** When enabled, enter your own pattern. When KWSA80K is locked, unlock it using the pattern. When KWSA80K screen is locked, you can answer an incoming call, without unlocking the screen.
 - **PIN:** When enabled, enter your own PIN value. When KWSA80K is locked, unlock it using the PIN. When KWSA80K screen is locked, you can answer an incoming call, without unlocking the screen.
 - **Password:** When enabled, enter your own Password. When KWSA80K is locked, unlock it using the password. When KWSA80K screen is locked, you can answer an incoming call, without unlocking the screen.

CHANGING THE WALLPAPER

You can set an image or a photo stored in KWSA80K as your home screen wallpaper. To change the wallpaper, select from one of the following Wallpaper collections.

- Long tap on **Home screen > Wallpapers**. Select Wallpapers from the pop-up.
 - **My photos:** includes photos and screenshots taken using KWSA80K's camera.
 - **Wallpapers:** Tap on **System settings > Display > Wallpapers**. It includes images that are pre-loaded with KWSA80K.

CAPTURING A SCREENSHOT

You can take the screenshot of the current screen and it is stored in KWSA80K's gallery. To take a screenshot:

- 1 Ensure that the image to be captured is displayed on the current screen.
- 2 Press the **Power** and **Volume Down** button simultaneously. The screenshot is captured and stored in the gallery. A screen **Capture** () icon is also displayed on the status bar.

SUGGESTIONS

Your Android device offers suggestions and reminders about the features and you can easily remove them from the Settings.

PAY FASTER WITH GOOGLE

You can save payment information to your Google account for easier online checkout process.

SET DO NOT DISTURB SCHEDULE

You can set your device on Silent mode at certain. You can add a rule by tapping on **Add rule** ()

CHANGE WALLPAPER

You can choose the wallpaper from Live **Wallpapers**, **Photos** and **Wallpapers**.

USE FINGERPRINT

You can unlock your device using your fingerprint. You have to register your fingerprint to lock and unlock your device.

ONBODY DETECTION

Toggle **ON Onbody detection** to keep your device unlocked while it's on you. It uses accelerometer and other sensors to keep your device unlocked when it detects that the device is carried in your hand, pocket or bag.

MANAGING WIRELESS & NETWORK SETTING

Wi-Fi

Wi-Fi is a wireless network technology that can provide Internet access at distance up to 30 m/ 100 feet, depending on the Wi-Fi router and surroundings.

You can access Internet when you connect KWSA80K to a Wi-Fi network.

To connect to a Wi-Fi network;

- 1 From **Home** screen or **Apps** menu, tap on **Settings** ().
- 2 Select **Wi-Fi** ().
- 3 Set the **Wi-Fi** to **ON** position located under Wireless & networks settings.
A list of Wi-Fi access points present within KWSA80K's accessible range are displayed.
- 4 Select your preferred network. Enter the WEP/WPS/WPA key (if it is a secured network) and select **Connect**. To verify the password before connecting, enable **Show password**.



It is always recommended to make your Wi-Fi network connection secure and also to connect KWSA80K to a secure network.

CONNECT TO A NETWORK

- 1 Touch and hold the network from the list.
- 2 Enter the password on the prompted window.
- 3 Select **Connect to network** and get connected to the network.

MODIFY NETWORK

- 1 Press and hold the connected network.
- 2 Select **Modify network**. You can change the network password. The other network setting details such as **Advanced options**, **Proxy**, **IP settings** can be updated.
- 3 Select **Save** to save the changes.

FORGET A NETWORK

- 1 Touch and hold the connected network.
- 2 Select **Forget network**.

The selected network gets disconnected and displayed in the Wi-Fi list.

If you have to get connected to the same network, enter password.

ADVANCED

On the Wi-Fi screen, tap **Options** () > **Advanced**. The following options are displayed:

- **Install certificates:** You can browse a certificate for installation.
- **Passpoint on:** You can enable the option.
- **Wi-Fi Direct:** Select **Options key** > **Searching** to search for the peer devices and also select **Rename device** to rename the device.
- **WPS Push Button:** Press the **WPS Push Button** in your router, when prompted.
- **WPS Pin Entry:** Enter the given PIN number on your Wi-Fi router.

BLUETOOTH

Bluetooth is a short-range wireless communication technology used to communicate between the devices over a distance of about 8 m/ 26 feet.

Using Bluetooth, you can perform the following tasks:

- Transfer media files and contacts between mobile devices connected using Bluetooth.
- Access Internet through a Bluetooth device.
- Use Bluetooth connected headphones for playing media file.

PAIRING A BLUETOOTH DEVICE

To activate Bluetooth and pair KWSA80K with other Bluetooth devices:

- 1 From the **Home** screen or **Apps** Menu, tap on **Settings** ().
- 2 Enable **Bluetooth** located under **Wireless & networks** settings.
- 3 Tap on **Bluetooth** () and turn on **Bluetooth**.
Available devices are listed.
- 4 Tap on **Options** () > **Refresh** to view more available devices. A list of accessible Bluetooth devices are displayed.
- 5 Tap on your preferred device.
- 6 Select **Pair** in your device after comparing the pairing codes between your device and the other device.
The device is displayed in **Paired devices** list.

RENAME THIS DEVICE

- 1 From the Bluetooth screen, tap on **Options** () > **Rename this device** to rename the selected device.
- 2 Enter the name and tap on **RENAME**.

SHOW RECEIVED FILES

From the Bluetooth screen, tap on **Options** () > **Show received files** to view the received files.

The received files are listed.

CARKIT AUTO-PAIRING

- 1 From the Bluetooth screen, check **Option** () > **CarKit Auto-Pairing**.
- 2 Select **Yes** as KWSA80K automatically connects to the carkit on connecting to dock.

DATA USAGE

Data usage refers to the amount of data utilized by KWSA80K during data transfers through the Internet. The data usage charges are dependent of the wireless plan provided by your service provider.

To monitor your data usage, adjust your data usage settings.

- 1 From **Home** screen or **Apps** menu, tap on **Settings** ().
- 2 Tap on **Data usage** (), which is located under **Wireless & networks** settings.
- 3 Under **Usage**, you can view the data usage for a particular time frame.
- 4 Turn on **Data saver** to access unrestricted data.
- 5 Select **Wi-Fi > Wi-Fi data usage** to check the data usage for a particular time frame.
- 6 Tap on **Network restrictions** to view the metered networks listed.

MORE

AIRPLANE MODE

When KWSA80K is set in airplane mode, network connectivity or mobile data connectivity is disabled. But you can access your camera, media files and other features that do not require mobile data connectivity.

To activate airplane mode:

- 1 From **Home** screen or **App** menu , tap on **Settings** ().
- 2 Tap on **More** located under **Wireless & networks** settings.
- 3 Turn on **Airplane mode**.

NFC

When NFC (Near-Field Communication) is a set of communication protocols that enable two electronic devices one of which is usually a portable device such as a smartphone, to establish communication by bringing them within 4 cm/ of each other.

- 1 From **Home** screen or **App** menu , tap on **Settings** ().
- 2 Tap on **More** located under **Wireless & networks settings**. Turn on **NFC** to allow data exchange when KWSA80K touches another device.

ANDROID BEAM

- 1 From **Home** screen or **App** menu , tap on **Settings** ().
- 2 Tap on **More** located under **Wireless & networks** settings. Turn **ON** to beam app content to another NFC capable device by holding the devices close together.

TETHERING & PORTABLE HOTSPOT

Using tethering and portable hotspot, you can share your device's network connection with a computer or other devices, via USB, Wi-Fi, or Bluetooth.

To activate USB Tethering:

- 1 From **Home** screen or **App** menu, tap on **Settings** ().
- 2 Select **More** located under **Wireless & networks** settings.
- 3 Select **Tethering & portable hotspot**.
- 4 Turn on **USB tethering**.

Wi-Fi HOTSPOT

When you setup KWSA80K as a Wi-Fi hotspot, you can connect other devices to this phone through Wi-Fi and access the Internet.

- 1 From **Home** screen or **App** menu, tap on **Settings** ().
- 2 Select **More** located under **Wireless & networks** settings.
- 3 Select **Tethering & portable hotspot**.
- 4 Select **Portable Wi-Fi hotspot**.
- 5 Select **Set up Wi-Fi hotspot** to set up a mobile hotspot.
- 6 Enter **Network name**, **Security** details and **Password**. Select **Save**.

PORTABLE Wi-Fi HOTSPOT

- 1 From **Home** screen or **App** menu , tap on **Settings** ().
- 2 Select **More** located under **Wireless & networks** settings.
- 3 Select **Tethering & Portable hotspot**.
- 4 Enable **Portable Wi-Fi hotspot**.

BLUETOOTH TETHERING

When the Bluetooth Tethering is activated, you can share your phone's Internet connection with the other Bluetooth paired devices.

- 1 From **Home** screen or **App** menu, tap on **Settings** ().
- 2 Select **More** located under **Wireless & networks** settings.
- 3 Tap on **Tethering & Portable hotspot**.
- 4 Enable **Bluetooth Tethering**.

VPN

- 1 From **Home** screen or **App** menu, tap on **Settings** ().
- 2 Select **Wireless & Networks > More > VPN**.
- 3 Tap on the icon () to add a new VPN profile.
- 4 In **Edit VPN profile** screen, enter the **Name**, **Type** (select from the drop-down list), and the **server address**.
- 5 Enter **Username** and **password**.
- 6 Select **Save**.

CELLULAR NETWORKS

- 1 From **Home** screen or **App** menu, tap on **Settings** () > **Wireless & networks settings > More**.
 - Turn on **Cellular network > Standard Data**.
 - You can use mobile data services such as web browsing and other services over the cellular network.
 - Turn on **International Data Roaming** to have a network connectivity when you are in a roaming network out of your country.
 - Turn on **Enhanced 4G LTE Services**.
 - You can use advanced communication services where ever it is available.
 - **Access Point Names:** Tap on **Access Point Names** (APN) to view and edit the network access points. Tap **Add network** () to add a new access point.
 - **Network operators:** Tap on **Network operator** to view and modify your network operator from the list of available networks.

NETWORK SETTINGS RESET

- 1 From Home screen, select **Menu** () > **Settings** ().
- 2 Select **Wireless & Networks > More > Network settings reset**.
- 3 Select **RESET SETTINGS**.

It reset all the network settings including Wi-Fi, Cellular data, Bluetooth, and NFC.

DISPLAY

- 1 From **Home** screen or **App** menu, tap on **Settings** () > **Device** > **Display** ().
- 2 Set one of the following options to configure KWSA80K's display:
 - **Brightness level:**
 - **Adaptive brightness:** Set the brightness of KWSA80K display. This also optimizes the battery power consumed.
 - **Show network operator:** If enabled, shows network name on the status bar.
 - **Wallpaper:** Set the wallpaper for your home screen. You can select from one of the following wallpaper collections:
 - **Live Wallpapers:** Includes photos which are available online.
 - **Photos:** Includes photos and screenshots taken using KWSA80K's camera.
 - **Wallpapers:** Includes images that are pre-loaded with KWSA80K.
 - **Sleep:** Set the sleep time so that the screen brightness is turned down after specified time of KWSA80K inactivity. This setting also optimizes the battery power.
 - **Screen saver:** You can set any of the application as a screen saver.
 - **Ambient Display:** If enabled, the screen display will be active when you receive a notification.
 - **Font size:** Set the font size of the text displayed in the screen.
 - **Display size:** You can set the items on your screen smaller or larger. Some apps on your screen might change position.
 - **One handed operation:** If enabled, you can use one hand to dial a number or unlock the device.
 - **When device is rotated:** You can either **rotate the contents of the screen** or **stay in current orientation**.
 - **Cast:** You can cast your screen from your device. Connect your device to the same Wi-Fi network as your Miracast™ or TV. Tap on **Options** () > check the box next to **Enable wireless display**.

NOTIFICATIONS

- 1 From **Home** screen or **App** menu, tap on **Settings** () > **Device** > **Notifications** ().
- 2 Tap on **All apps** drop-down list.
- 3 You can set the notification on the following rules:
 - All apps
 - Blocked
 - Shown silently
 - No sensitive content on lock screen
 - Never shown on lock screen
 - Overrides Do Not Disturb
- 4 Tap on **Settings**. The following options are displayed:
 - Pulse LED light
 - Flash notification alert
 - On the lock screen

SOUND

- 1 From **Home** screen or **App** menu, tap on **Settings** () > **Device** > **Sound** ().
- 2 **Media volume:** Adjust the volume as per your requirement.
- 3 **Alarm volume:** Adjust the alarm volume as per your requirement.
- 4 **Ring volume:** Adjust the ring volume as per your requirement.
- 5 **Also vibrate for calls:** Enable this option to set the device on vibrate during calls.
- 6 **Increase ringtone:** Enable this option to increase the ringtone.
- 7 **Hac mode:** Enable this option to make your device hearing aid compatible.
- 8 **FENS:** Enable this option to reduce the noise cancellation.
- 9 **Do not disturb:**
 - **Priority only allows:**
 - **Alarms:** Enable alarms.
 - **Reminders:** Enable this option to set the reminders.
 - **Events:** Enable this option to pop-up the events.
 - **Messages:** You can set the priority for the messages based on **From anyone**, **From contacts only**, **From starred contacts only**, and **None**.
 - **Calls:** You can set the priority for the calls based on **From anyone**, **From contacts only**, **From starred contacts only**, and **None**.
 - **Repeat callers:** Enable this option allow a person to call for the second time within a 15 minutes period.
 - **Automatic rules:** You can add a new rule for **Event** or **Time**.

- **Block visual disturbances:**
 - **Block when screen is on:** Prevents notification from popping on the screen.
 - **Block when screen is off:** Prevents notifications from turning on the screen or pulsing the notification light.
- 10 Phone ringtone:** Select the required ringtone from the list and tap on **OK** to set as the ringtone.
- 11 Default notification ringtone:** Select the required notification ringtone from the list and tap on **OK** to set as the ringtone.
- 12 Default alarm ringtone:** Select the required alarm ringtone from the list and tap on **OK** to set as the ringtone.
- 13 Emergency broadcasts:**
 - **Wireless emergency alert settings:**
 - **Show presidential alerts:** Check this option to get an emergency alert system which allows the US president to address the country in the event of national emergency.
 - **Show extreme threats:** Check this option to display alerts for extreme threats to life and property.
 - **Show severe threats:** Check this option to get the severe threats to life and property displayed.
 - **Show AMBER alerts:** Check this option to get the child abduction emergency bulletins.
 - **Turn on notifications:** When checked, emergency alert broadcast are displayed.
 - **Alert reminder:** You can set the alert reminder for the following time frame: **Once**, **Every 2 minutes**, **Every 15 minutes**, and **Off**.
 - **Vibrate:** Check this option to set the device on vibrate during alert.
 - **Speak alert message:** Check this option to use text-to-speech to speak emergency alert messages.
 - **Developer options:** Check the option **Show CMAS test broadcasts** to display test broadcasts for commercial mobile alert system. Check the option **Show opt-out dialog** to show an opt-out dialog after displaying the first CMAS alert (other than Presidential alert).
 - **Additional Language Alert:** Check this option to get the alerts in additional languages.
 - **Settings for Brazil (Show channel 50 broadcasts):** Channel 50 is used in Brazil for area update information when this option is checked.
 - **Settings for India (Show channel 60 broadcast):** Channel 60 is used in India for operator specific information when this option is checked.
- 14 Other sounds:** Turn **ON** the following options to get the sound:
 - Keypad sounds
 - Dial pad tones

- Screen locking sounds
- Touch sounds
- Vibrate on tap

15 Cast: You can cast your screen from your device. Connect your device to the same Wi-Fi network as your Miracast™ or TV. Tap on **Options** () > check the box next to **Enable wireless display**.

APPS

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device** > **Apps** ().
- 2 Select **All apps** drop-down list. You can select any of the following options:
 - All apps
 - Enabled
 - Disabled
- 3 Select the required app from the list. You can open the app and select **FORCE STOP**.
- 4 On the **Apps** screen, tap on **Options** (). The following options are displayed:
 - Show system
 - Reset app preferences
- 5 Tap the icon () on **Apps** screen. **Configure apps** window is displayed. The following options are displayed:
 - **App permissions:** The list of apps with the permissions are displayed.
 - **Default:** The assigned default apps are displayed.
 - **Advanced:** Displays the list of Special access.

USB POWER SAVING

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device** > **USB Power Saving** ().
- 2 **Automatic Power ON:** If enabled, the device gets automatically power ON when the USB is connected.
- 3 **Automatic Power OFF:**
 - **Automatic Power OFF:** If enabled, the device gets automatically power OFF at the set time.
 - **Power off device at:** If you enable Automatic power off, this option will be active. You can set the time for the device to be power off.
 - **Automatic power OFF:** If this is enabled, upon USB disconnection, the device is power off after the set hours.
 - **On USB disconnect, power off:** You can set the hours for the device to be powered off once the USB is disconnected.

STORAGE

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device** > **Storage** ().
- 2 On **Internal shared storage**, the following options are displayed with memory used for each app:
 - Shows the used memory
 - Apps
 - Images
 - Videos
 - Audio
 - System
 - Other
 - Cached data
 - Explore
- 3 Tap on **More** () > **Storage Cleanup**. You can clean the following junk files:
 - Cache junk
 - Residual junk files
 - Obsolete apksSelect the above files and tap on **CLEAN JUNK**.

BATTERY

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device** > **Battery** ().
- 2 Set the **Battery saver** **ON** by selecting the option given for Turn on automatically:
 - Never
 - at 5% battery
 - at 15% battery



Battery saver turns off automatically when your device is charging.

You can also view the battery usage data.

- 3 Enable **Show battery percentage** to view the battery level percentage inside the status bar.
- 4 Tap on **Use since last full charge** > **Screen**. The following options are displayed:
 - **Adjust power use:** You can adjust the screen brightness and screen timeout.
 - **Use details:** The details such as **Time on** and **Computed power use** are displayed.
- 5 On the **Battery** screen, tap on **Refresh** icon () to refresh the battery level percentage.
- 6 On the **Battery** screen, tap on **Options** () > **Battery optimization**. From the drop-down list, you can select **All apps** or **Not optimized** apps.
- 7 On the **Battery optimization** screen, tap on **Options** () > **Reset app preferences**.

MEMORY

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device** > **Memory** ().
- 2 Go to **Memory** and select the time from the drop-down list. You can view the applications usage based on the set time frame.
- 3 Select **Memory used by apps** to check the memory used for each application for the set time frame.

USERS

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device > Users** ().
- 2 Tap on **You (owner)**. Change the **Profile info** and tap on **OK**.
- 3 Tap on **Guest > Settings** () and enable **Turn on phone calls**.
- 4 Tap on **Add user** (). You can set up a new user. You have three users listed: **You** (owner of the device), **New user**, and **Guest**.
- 5 Tap on **Lock screen settings**.

Add users: Turn on this option to add user when the device is locked.

- **Emergency information:** Tap on **Info** tab and enter the following details. These details belongs to the owner of the device:
 - Name
 - Address
 - Blood type
 - Allergies
 - Medications
 - Organ donor
 - Medical notes
- Tap on **Contacts > Add contact** (). Choose a contact from the phonebook to set as a emergency contact. Tap on **Options** () **Clear all** to clear all the data.

TAP & PAY

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Device** > **Tap & pay** ().
- 2 Tap on **Payment default** and select **Google Pay**.
- 3 Tap on **Use default** and select either one of the options as per your requirement:
 - Except when another payment app is open
 - Always
- 4 Tap on **Options** () > **How it works** to know more about the feature's functionality.

GESTURES

- 1 From **Home** screen or Apps screen, tap on **Settings** () > **Device** > **Gestures** ().
- 2 Turn on **Jump to Camera** to quickly open camera. Press the power button twice. This works from any screen.
- 3 Enable **Toggle Torch** to quickly toggle torch, double-shake the device twice.

LOCATION

You can enable and configure the Location settings.

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Personal**.
- 2 Select **Location** (). Enable and modify required location settings.
- 3 Set the **Mode** to one of the following options:
 - **High accuracy:** uses AGPS, Wi-Fi, mobile networks, and other sensors to get the highest-accuracy location for your device. It uses location help to estimate your location faster and more accurately.
 - **Battery saving:** allows your device to estimate your location using low battery-intensive location sources, such as Wi-Fi and mobile networks. It uses location help to estimate your location faster and more accurately.
 - **Device only:** allows your device to estimate your location using GPS only. It uses the satellite information to provide location information. This mode may use more battery power and take longer time to determine your location.
- 4 Under **Location services**, the following options are displayed:
 - **Accelerated Location:** Tap on **Agree** to improve location performance and battery saving.
 - **Google Location History:** Turn **ON** the location history:
 - **This device:** Turn on to view the last reported location date.
 - **Other devices on this account:** The other devices which are connected via Bluetooth are listed here and the date of the last location is also reported.
 - Tap on **Manage Timeline** to manage the time based on your location history.
 - Tap on **More** () and the following options are displayed: **View/Manage** and **Help**
 - **Google Location Sharing:** To share your real-time location, open the **Google Maps** and sign in. Tap on **Menu** () > **Location Sharing** (). Tap on **GET STARTED** or on the icon () and you can share your real-time location in the following ways:
 - **For 1 hour:** You can increase or decrease the time using + and - signs to share your real-time location. The minimum time is 15 minutes and the maximum is three days.
 - **Until you turn this off:** If you enable this option, until you turn it **ON**, you cannot share your real-time location.
 - **Select People:** Turn **ON** this option to share your real-time location details to the selected people from your contacts.
 - **Messaging:** Turn **ON** this option to share your real-time location details. A link is created and new message window is displayed. You can select the recipient and send the message.

- **More:** You can share your real-time location details through the following ways: Messaging, Bluetooth, Copy to clipboard, Save to Drive, Gmail, Facebook, Messenger and SMS.
 - On **Location Sharing** screen, tap on **More** () and the following options are displayed: **Location Settings**, **About** and **Help**.
- 5 Check the option **Use assisted GPS** to use server to assist GPS. Uncheck to reduce the network usage.
 - 6 You can view the apps which have requested location recently under **Recent location requests**.
 - 7 On **Location** screen, tap on **More** () > **Scanning**. The following options are displayed:
 - **Wi-Fi scanning:** Turn **ON** this option to improve location by allowing system apps and services to detect Wi-Fi networks at any time.
 - **Bluetooth scanning:** Turn **ON** this option to improve location by allowing system apps and services to detect Bluetooth devices at any time.

SECURITY

You can activate and protect KWSA80K from unauthorized access by configuring the security settings.

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Personal** > **Security** ().
- 2 Select **Device security** > **Screen lock** and select one of the following options to configure KWSA80K:
 - **None:** Disables KWSA80K lock.
 - **Swipe:** When KWSA80K is locked, swipe the screen upwards to unlock it.
 - **Pattern:** You can unlock the device using the pattern.
 - **PIN:** When enabled, enter you own PIN value. When KWSA80K is locked, unlock it using the PIN.
 - **Password:** When enabled, enter your own password. When KWSA80K is locked, unlock it using the password.

When KWSA80K is locked, you can answer an incoming call, without unlocking KWSA80K.

Tap on **Settings** () and the following options are displayed:

- **Make pattern visible:** You can toggle this option to make the pattern visible.
- **Automatically lock:** When the security is set to pattern/PIN/password, you can set any of the following time frame to lock the device automatically: Immediately, 5 seconds, 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, and 30 minutes
- **Power button instantly locks:** Power button instantly locked when this option is toggled.
- **Lock screen message:** You can enter the message and the same is

displayed on the screen when KWSA80K is locked.

- **Fingerprint:** User can set **Fingerprint** to secure the device.
- **Smart Lock:** Keep your device unlocked in the following scenarios:
 - On-body detection
 - Trusted places
 - Trusted devices
 - Trusted face
 - Voice Match

On **Smart Lock** screen, tap on **Options** () > **How it works**. The information on Smart lock is displayed.

Tap on **Help** and the Google support window is displayed. You can check for the required information.

- 3 Encryption:** By default, KWSA80K is already encrypted.
- 4 SIM card lock:** Select **Set up SIM card lock** to view the SIM settings.
 - **Lock SIM card:** You can set required PIN to use the phone.
 - **Change SIM PIN:** You can change the SIM PIN.
- 5 Enable Make password visible** option to view the password characters.
- 6 Device administration:**
 - **Device administrators:** You can view or deactivate the device administrator.
 - **Unknown sources:** When enabled, it allows installing the apps from unknown sources.
- 7 Credential storage:**
 - **Storage type:** Displays the storage type.
 - **Trusted credentials:** You can view and verify the system and user certificates.
 - **User credentials:** You can view and modify stored credentials.
 - **Install from SD card:** You can view and install new user certificates from SD card.
 - **Clear credentials:** You can remove all certificates.
- 8 Advanced:**
 - **Trust agents:** To use this option, a screen lock should be set.
 - **Screen pinning:** Turn on to use screen pinning to keep the current screen in view until you unpin.
 - **Apps with usage access:** Select the app and select center key to enable/disable the **Permit usage access**.

ACCESSORIES

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Personal** > **Accessories** ().
- 2 Tap on **CSM Settings**.
- 3 Turn on **CSM settings** to select any application to get CSM events.
- 4 You can also register CSM application.

PROGRAMMABLE BUTTONS

You can assign any application to the programmable button.

- 1 From **Home** screen or App screen, tap on **Settings** () > **Personal** > **Programmable keys** ().
- 2 You can program any application for the following buttons:
 - Select PTT Button app
 - Select Programmable Button app
 - Select Emergency Button app

ACCOUNTS

- 1 From **Home** screen or App screen, tap on **Settings** () > **Personal** > **Accounts** ().
- 2 Tap on **Add account** ().
- 3 You can add different accounts to your account.
- 4 Tap on **Options** () and check **Auto-sync data** to sync the data automatically.

GOOGLE

- 1 From **Home** screen or App screen, tap on **Settings** () > **Personal** > **Google** ().
- 2 Under **My Account**, the following options are displayed:
 - **Sign-in & security:** You can sign-in to your Google account and perform security check.
 - **Personal info & privacy:** Your personal information such as **name**, **photo**, **Email**, and **Phone number** are displayed. You can do the privacy check.
 - **Account preferences:**
 - **Payments:** You can review your purchase history and the payment methods used are stored in your account in **Google payments center**.
 - **Subscription:** Manage subscriptions you pay for or access through Google.
 - **Other preferences:** You can set the **Language**. You can view the **Google Drive storage** usage. You can also delete individual Google services like Gmail from your account in **Delete Google services**. You can also delete your Google account like **Delete Your Google Account** and all the data.

- 3 You can view different services under **Services**.
- 4 Tap on **Options** () and the following options are displayed:
 - Clear app data
 - Usage & diagnostics
 - Open source licenses
 - Show debug items
 - Help & feedback

LANGUAGES & INPUT

You can set KWSA80K's language to any of the languages displayed in the language list.

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Personal > Languages & input** ().
- 2 Tap on **Languages** and select any language from the list as your preferred language.
 - **Default language:** You can set English as a default language.
 - **Add a language:** The following languages can be set as a **Suggested** language:
 - English (India)
 - English (XA)
 - Español (Estados Unidos)
 - Français (France)
 - Chinese -Simple
 - Chinese -Traditional

All the menu items and user feedback messages will get displayed in the set language.

- **All languages:** All the languages are listed. You can select any of the required language and it is added to the list.
 - **Search:** Tap on **Search** icon () to search a language.
- 3 Tap on **Spell checker**. Turn On the **Spell checker**.
 - **Languages:** Set English as System languages or select any other language from the list.
 - **Default spell checker:** You can select either **Indic English spell checker** or **Google spell checker** for spell checking.

Tap on **Settings** () and enable **Look up contact names** so that the **Spell checker** uses entries from your contact list.

- 4 **Personal Dictionary:** The default keyboard input language is set to English (US)/Latin Spanish. This cannot be modified. Tap on + to add a custom word in **Type a word** field and **Shortcut** also to the personal dictionary.
- 5 The following options are displayed under **Keyboard & input methods**.
 - **Virtual keyboard:**

- **Google keyboard:** You can use **Google keyboard** which is multilingual typing.
 - **Google voice typing:** You can use Google voice typing for entering the text instead of using the keyboard.
 - **Manage keyboard:** You can enable different keyboards.
 - **Physical keyboard:**
 - **Show virtual keyboard:** Enable this option to keep it on screen while physical keyboard is active.
 - **Keyboard shortcuts helper:** Displays available shortcuts.
- 6 The following options are displayed under **Speech**.
- **Text-to-speech output:** The **Preferred engine** is set to **Google Text-to-speech engine**. To change the Google Text-to-speech engine settings, tap on **Settings** () provided next to the engine.
 - **General:**
 - Tap on **Speech rate** to set the speech input rate to a comfortable speed.
 - Tap on **Pitch** to set the pitch rate.
 - **Reset speech rate:** Reset the speed at which the text is spoken to normal.
 - **Reset speech pitch:** Reset the pitch at which the text is spoken to default.
 - **Listen to an example:** Play a short demonstration of speech synthesis.
 - **Default language status:** Displays the language set for speech output.
- 7 Under **Mouse/trackpad**, the following option is displayed:
- Minimize or Maximize the **Pointer speed** as per comfort level.

BACKUP & RESET

If you need to replace your device or erase its data, you can restore your data for any accounts that were previously backed up.

To backup your data,

- 1 From **Home** screen or **App** screen, tap on **Settings** () > **Backup & reset** ().
- 2 Tap on **Back up my data**. Turn ON to automatically back up device data and app data remotely.



Without SD card, the user cannot take device back-up.

- 3 Tap on **Backup account**. You can set a backup account. Tap on **Add account** () to add a new account.
- 4 Turn on **Automatic restore** to reinstalling an application, restore backed up setting and data.
- 5 **Factory data reset:** Tap on **Factory data reset** to erase all data from KWSA80K's internal storage, including

- Your Google account
- System and app data and settings
- Downloaded apps
- Music
- Photos
- Other user data

You are currently signed into the following accounts:

- **Personal:**
 - Google account
 - Other Third party applications
- Tap on **RESET PHONE** to reset the device.

A message is displayed; **Erase all your personal information and downloaded apps? You can't undo this action.**

- Tap on **ERASE EVERYTHING** to erase all the data.

MANAGING SYSTEM SETTINGS

DATE & TIME

You can set and display the date and time on KWSA80K. You can also select the display format.

- 1 From **Home** screen or **App screen**, tap on **Settings** () > **System** > **Date & time** ().
- 2 Select the following options to configure KWSA80K:
 - To synchronize the date and time with the network provided time, enable **Automatic date & time**.
 - To synchronize the time zone with the network provided time zone, enable **Automatic time zone**.
 - To set the date manually, select **Set date**. Scroll and select the date, month and year. Tap on **OK**.
 - To set the time manually, select **Set time**. Scroll and select the hour and minute. Tap on **OK**.
 - To set the time zone, select **Select time zone**. Scroll and select your time zone.
 - To set the clock to 24-hour format enable **Use 24-hour format**. By default, KWSA80K is set to **12-hour format**.

ACCESSIBILITY

You can make websites and applications more accessible to people with disabilities when they are using mobile phones and other devices.

- 1 From **Home** screen or **App screen**, tap on **Settings** () > **System** > **Accessibility** ().
- 2 The following options are displayed under **Services**:
 - **Device Help: Enable the guide ME feature by moving the toggle to ON.**
 - **SCOUT by AetherPal:** Enable the privacy feature of Remote Management Service by moving the toggle to **ON**.
 - **Talkback:** When **Talkback** is enabled, it helps vision-impaired users interact with their devices. It uses spoken word, vibration and other audible feedback to let you know what is on your screen.
 - **Select to Speak:** When **Select to Speak** is on, you can tap specific items on your screen to hear them read aloud.
 - **Switch Access:** Turn on to let people with motor impairments control phones and tablets using one or more switches. Use switches to select items, scroll, enter text, and more. Tap on **SETTING** and the following options are displayed:
 - Help & feedback
 - Assign switches
 - Customize scanning

- Privacy policy

3 Select **System**.

- **Captions:** When Captions is **ON**, you can set the following options under **Standard options**:
 - Language
 - Text size
 - Caption style
- **Magnification gesture:** You can set to **ON** to perform these gestures on the device screen: **Zoom, Drag and Pinch**
- **Font size:** You can set the font size from smaller to bigger and see the preview of the same.
- **Display size:** You can set the items on your screen smaller or larger.
- **Click after pointer stops moving:** Turn on to set the delay before click.
- **High contrast text:** If this option is enabled, you can see the text changes into the contrast colors.
- **Power button ends call:** Turn on to enable the call ending using the power button.
- **Press Home wake up:** Turn on to make the home screen wake up on press.
- **Auto-rotate screen:** Turn on to set auto-rotate screen **ON**.
- **Speak passwords:** Turn on to unlock the device using the speaking password.
- **Large mouse pointer:**
- **Mono Audio:** Enable **Mono audio** to combine the channels when playing audio.
- **Accessibility shortcut:** Turn on to quickly activate accessibility features.
- **Text-to-speech output:**
- **Preferred engine:** The preferred engine is set.
- **General:** You can adjust the **Speech rate** and **Pitch**. Reset the speech rate and speech pitch. You can demonstrate a speech synthesis. English is set as default language status.
- **Touch & hold delay:** You can set the delay time as **Short, Medium, and Long**.
- **Gesture support:** Turn on and waive your hand to accept or reject a call. Swipe down for bringing down status bar and vice versa.

4 Select **Display**.

- **Color inversion:** If this is enabled, displayed colors are inverted and may affect the performance.
- **Color correction:** Turn on make the color correction.

PRINTING

- 1 From **Home** screen, tap on **Settings** () > **System** > **Printing** ().
- 2 You can install the printer and print the required photo or document.

ABOUT PHONE

- 1 From **Home** screen, tap on **Settings** () > **System** > **About phone** ().
- 2 Go to **Check for Updates**. If there is any updates, it starts updating.
- 3 The following information is displayed:
 - Status
 - Legal Information
 - Model
 - Processor info
 - Android version
 - Android security patch level
 - Baseband version
 - Kernel version
 - Hardware version
 - Build number

MANAGING CONTACTS

You can use the phonebook to maintain phone numbers of your contacts. This feature enables you to add, dial phone numbers and send SMS and MMS messages.

To access the contacts, from **Home** screen or **App** screen, select **Contacts** (). The contacts saved in the phonebook are displayed.

ADDING NEW CONTACT FIRST TIME

After inserting the SIM, when you switch **ON** the device for the first time and there are no contacts added in the device or SIM.

Add New contact:

- Tap on **Set up my profile** on **Contact display** window. Add the device owner's profile details. Enter all the details and tap on the **tick mark** (). It is displayed as **ME**.
- Tap on **Add New Contact** (). Enter all the details and tap on the **tick mark** ().

ADDING A NEW CONTACT

- 1 From **Home** screen or **App** menu, tap on **Contacts** ().
- 2 Tap on **Create new contact** () and **Add to a contact** screen is displayed. Enter all the details and tap on **tick mark** (). The contact is added to the phonebook.
- 3 To add a new contact, tap on **Phone** () on the home screen, tap on **Dial pad** () and dial the required number.

VIEWING CONTACT DETAILS

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap on the required contact to view the contact details.

EDITING THE CONTACT DETAILS

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Scroll to the required contact and tap on the contact to view details.
- 3 Tap on the **Edit** () which is present on top right corner
- 4 Edit the required details. Tap on **Tick mark** () to save the details.

SENDING A MESSAGE FROM CONTACTS

You can send SMS and MMS messages to the contacts.

- 1 From **Home** screen or **App** menu, tap on **Contacts** ().
- 2 Scroll to the required contact and tap and open it.
- 3 Tap on **Message** ().
- 4 The **Messaging** screen is displayed. Enter the message and tap on **Add**

contact () to add more recipients. Tap on the required contact.

5 Tap on Attach () to attach any of the following:

- Pictures
- Capture picture
- Videos
- Capture video
- Audio
- Record audio
- Slideshow
- Insert contact info
- Contact vCard
- Import Template

6 Tap on SMS () to send the message.



If you attach a media file or a contact to your SMS message it is converted to an MMS message automatically.

MENU OPTIONS

On the **Contacts** screen, tap on **Options** () to view the menu options. Following are the menu options:

CONTACT TO DISPLAY:

You can display the contacts in one of the following ways:

- **All contacts:** When this option is selected, all the contacts are displayed.
- **Phone:** Select **Phone** from the list. The contacts which are stored in the Phone are displayed.
- **SIM Card:** Select SIM Card from the list. All the contacts which are saved in SIM are displayed in contact application.
- **Google:** The contacts which are synced with your gmail ID are displayed.
- **Customize:** You can customize the contacts to be displayed.

IMPORT/EXPORT:

IMPORT FROM .VCF FILE

- 1** From **Home** screen or **App** screen, tap on **Contacts** ().
- 2** Select **Options** () > **Import/export**.
- 3** Select **Import from .vcf file**.
- 4** Tap on the **Options** and you can view different destinations to save the imported .vcf files.
- 5** **Select the destination.**
The contact is imported to the list.



If the device has only one vcf file, it is imported without any selection window.

IMPORT FROM SIM CARD

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Select **Options** () > **Import/export**.
- 3 Select **Import from SIM card**.
- 4 Tap on the **Options** and you can view different destinations to save the imported contacts window.
The list of contacts stored in your SIM card are displayed.
- 5 Tap on the contact to be moved to KWSA80K.
- 6 A confirmation message is displayed. Tap on **tick mark** () to confirm.
The contact is imported to the Particular selected option

EXPORT TO SIM CARD

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap on **Options** () > **Import/export**.
- 3 Select **Export to SIM card**.
- 4 Tap on the contact to be exported from KWSA80K to SIM card.
- 5 Tap and select the contacts to be exported. Tap on **OK**.

EXPORT TO .VCF FILE

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap on **Options** () > **Import/export**.
- 3 Select **Export to .vcf file**.
- 4 Tap and select the contacts to be exported. Tap on **OK**.
A message is displayed for the location, where the .vcf file to be saved.
- 5 Tap on **SAVE**.
The .vcf file is exported to the selected destination.

SHARE ALL CONTACTS

You can send contact information in two ways:

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Select **Options** () > **Import/export** > **Share all contacts**.
- 3 Phonebook screen is displayed. Tap on the contact to select it.
- 4 Tap on **OK**.
- 5 You can use one of the following options to share the required contact:
 - **Gmail:** You can share the contact via your Gmail account.
 - **Bluetooth:** Send the contact details to a Bluetooth device paired with your phone. Select the Bluetooth device to share the contact.

- **Android Beam:** You can share the contact via Android Beam by selecting another device which is listed in your device.
- **Messaging:** Send the contact details as a multimedia message to any mobile phone.
- **Save to Drive:** You can share the contact and save it in the Drive in a selected folder which is synced with your PC.

Tap on **Save** to save the contact in the Drive.

BLOCKED NUMBER

You will not receive any calls or text messages from the blocked numbers.

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap on **Options** () > **Blocked numbers**.
- 3 Tap on **ADD A NUMBER**.
- 4 Enter the number to be blocked and tap on **Block**.
- 5 The number is blocked and you do not receive any call or message from that number.

MANAGE ACCOUNTS

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap on **Options** () > **Manage accounts**.
- 3 Tap on **Add account** () to add a new account.
- 4 Tap on **Options** () **Check Auto-sync data**.

SETTINGS

You can set the sort list to view the contacts and also the first or last name of the contact to be displayed first.

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Select **Options** () > **Settings**. The following options are displayed:
 - **Sort by:** Sort the contact names by first name or last name.
 - **Name format:** Set the contact display name to **First name first** or **last name first**.
 - **Default account for new contacts:** You can select your phone or mail id and SIM as a default account whenever a new contact is added.
 - **About Contacts:** The following information is displayed:
 - Build version
 - Open source licenses
 - Privacy policy
 - Terms of service

MERGE CONTACTS

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Select **Options** () > **Merge contacts**.
Contacts are merged.

SEARCHING A CONTACT

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap **Search** () and enter the first few letters/ numbers of the contact name/ phone number to be searched.
All the contacts containing the searched text/numbers are displayed.

DELETING A CONTACT

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Scroll to the required contact and long tap on the contact.
- 3 Check the box next to the contact which has to be deleted.
- 4 Select **Options** () > **Delete**.
- 5 Tap on **OK**.
The contact is deleted.

SHARING A CONTACT

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Scroll to the required contact and long tap on the contact.
- 3 Check the box next to the contact which has to be shared.
- 4 Tap on **Options** () > **Share**.
- 5 **Share with** options is displayed with different applications.

ADDING FAVORITES

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 On the **Favorites** tab (), add a new contact by tapping on **Add contact** (). You can add a new contact or select the contact from **Frequently Contacted** list as Favorite by tapping on star icon which is present on top corner of any contact.
The selected contacts gets added as a favorite and is displayed under the **Favorites** tab.

SHARE FAVORITE CONTACTS

You can share the favorite contacts.

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Tap on **Favorites** tab ().
- 3 Tap on **Options** () > **Import/export**.
- 4 Tap on **Share favorite contacts**.

5 You can share the favorite contact using following apps:

- Messaging
- Android Beam
- Bluetooth
- Gmail
- Save to Drive

ADDING GROUPS

1 From **Home** screen or **App** screen, tap on **Contacts** ().

2 On **Groups** tab, you can add a contact by tapping on **Add contact** (), while adding you can select more fields. You can select **Group name** on existing groups or create new group.

3 You can add the contacts under different groups:

- Coworkers
- Family
- Friends

MANAGING CALL SETTINGS

MAKING A CALL

From **Home** screen or **Apps** Menu, tap on the **Phone** ().

The Phone screen with **Call history** (), **Dial pad** (), and **Call Options** () are displayed.

To dial a number use one of the following options:

- **Call history:** Tap on the **Call History** icon (). Tap on the **Phone** icon () beside the contact or tap on the contact, and tap on the number.
- **Dial pad:** Tap on the dial pad or when you dial a number for the first time, tap on **MAKE A CALL** to open the dialer. The numeric touch keypad is displayed. Enter the phone number and tap the phone icon () to make a call.
- To dial an international number, prefix the phone number with the respective country code.
- **Frequently called contacts/numbers:** Tap the specific contact/number from the frequently called/Received/Missed numbers list to make a call.

DIALING A NUMBER VIA CONTACT

- 1 From **Home** screen or **App** screen, tap on **Contacts** ().
- 2 Scroll to the contact and tap on the contact. The contact details are displayed.
- 3 Tap on the **phone** icon () and a call is initiated.

ADDING CONTACT FROM HOME SCREEN

- 1 From **Home** screen or **App** screen, tap on the **Phone** (). Enter the required number to be dialed.
- 2 Select **Add to a contact** ().
- 3 Select **Create new contact** ().
- 4 In the **Add new contact** screen, add the name and other details for the contact.
- 5 Tap on **Tick mark** () to save the contact details.

CALL HISTORY SCREEN

- 1 From **Home** screen or **App** screen, tap on **Phone** ().
- 2 Tap on **Options** () > **Call History**.
- 3 The following options are displayed:
 - **ALL tab:** The call log for today, yesterday and older period of time are displayed. The call log includes missed calls, received calls, and dialed calls.
 - **MISSED tab:** The missed call log for today, Yesterday, and older period of time are displayed.
 - Tap on **Options** (). The following options are displayed:
 - **Search call log:** You can search for the required call log from the **Search** tab.

- **Clear call history:** Tap on **Clear call history** and select the required call log from the list. Selected call logs are marked with **tick mark** (✓). Tap on **CLEAR**. A confirmation message is displayed. Tap on OK to clear the call log.

MANAGING CALL SETTINGS

You can change the incoming call ring tone, set KWSA80K to vibrate while ringing and also activate voicemail and other settings in **Call settings** screen.

KWSA80K uses sounds and vibration to communicate with you, including ringtones, notifications, alarms, and navigation feedback. You can customize any of these sounds, as well as controlling their volume and the volume for music, videos, games and other media.

The following settings are displayed:

DISPLAY OPTIONS

- 1 From **Home** screen or **App** screen, tap on **Phone** (☎).
- 2 Tap on **Options** (☰) > **Settings** > **Display options**.
 - **Sort by:** You can sort the contacts by **First name** or **Last name**.
 - **Name format:** You have two options to display the contact name:
 - First name first
 - Last name first

SOUNDS AND VIBRATION

- **Phone Ringtone:** To change the phone ringtone,
 - 1 From the **Home** screen or **Apps** Menu, tap on **Settings** (⚙).
 - 2 Tap on **Device settings** > **Sound** (🔊) > **Phone ringtone**.
 - 3 Select the **required ringtone** from the list and tap on **OK**.
 - 4 The ringtone is changed.

OR

- 1 From **Home** screen or **Apps** menu, select **Phone** (☎).
- 2 Tap on **Options** (☰) > **Settings** > **Sounds and vibration**.
- 3 Tap on **Phone ringtone**.
- 4 Select the required ringtone from the list and tap on **OK**.

The ringtone is changed.

- **Also vibrate for calls:** If this option is checked, device is set to vibrate mode when a call is received.
- **Dialpad tones:** Check this option to set the tone for the dialpad when numbers are dialed.
- **Dialpad tone length:** You can set the dialpad tone length to **Normal** or **Long**.
- **Call end tone:** Check this option to set a tone for call ending.

QUICK RESPONSES

The quick responses are the messages that can be used to reject the call with a message.

- 1 From **Home** screen or **Apps** menu, select **Phone** ().
- 2 Tap on **Options** () > **Settings** > **Quick responses**.
- 3 The list of quick responses are displayed.
- 4 Tap on the required quick response from the list to edit that particular message and tap on **OK** to save the message to the list.
- 5 While an incoming call arrives, swipe up to touch the message icon to open a list of quick responses or the option to write your own message. Touch one of the messages to send it to the caller immediately and the call gets disconnected.
- 6 Tap on **Options** () > **Restore defaults**.

SPEED DIAL SETTINGS

With this option, the user can assign a contact to each key present in the keypad (2 to 9). Long press the keypad to initiate a call to the assigned contact.

To set the speed dial,

- 1 From **Home** screen or **Apps** menu, select **Phone** ().
- 2 From **Call History** screen, tap on **Options** () > **Settings** > **Speed dial settings**.
- 3 Assign a contact for each key present in the keypad (2 to 9). Key 1 is assigned for voicemail.
- 4 Long press a particular keypad to initiate a call to the assigned contact.
- 5 You can always replace the contact number for the assigned key number.

CALLING ACCOUNTS

- 6 From **Home** screen or **Apps** menu, select **Phone** ().
- 7 From **Call History** screen, tap on **Options** () > **Settings** > **Calling accounts**.

SETTINGS:

- Tap on the Operator (if SIM card is inserted only) and the following options are displayed:
 - Voicemail
 - Fixed Dialing Numbers
 - IMS Settings
 - Call forwarding
 - Additional settings
 - Call barring
- **All calling accounts:** You can select from which account calls can be dialed.
- **Display duration:** If this option is checked, you can view the call duration in call history.

- **Vibrating after connected:** Check this option to set the device on vibrate when the call is answered.
- **Turn on proximity sensor:** If this option is checked, during a call, the screen will be turned off to save the power.

SIP SETTINGS

SIP accounts

To add a SIP account and configure your incoming and outgoing preferences:

- 1 Tap on **Calling accounts > SIP settings > SIP accounts**.
- 2 On **SIP accounts** screen, tap on **Add SIP account** () to configure a new SIP account.
- 3 Enter the following details and tap on **Save** to save the account:
 - **Username:** Username to login to SIP account.
 - **Password:** Password to login to SIP account.
 - **Server:** SIP server details.
 - **Optional Settings:** Select to view/modify or hide optional details such as **Authentication username**, **Display name**, **Outbound proxy address**, **Port number**, **Transport type** and **Send keep-alive** options.

Use SIP Calling

A dialog is open with the following options:

- **For all calls:** If this option is selected and when KWSA80K is connected to Wi-Fi network or mobile Internet, each dialed call becomes an Internet call.
- **Only for SIP calls:** If this option is selected, only SIP call can be dialed.

Receive Incoming Calls

Enable **Receive incoming calls** to answer incoming Internet calls.

This might reduce KWSA80K's battery life.

CALL SCREENING

- 1 From **Home** screen or **Apps** menu, select **Phone** ().
- 2 From Call History screen, tap on **Options** () > **Settings > Call screening**
- 3 Tap on **Screening incoming calls**.
 - **Screening incoming calls:** Check this option to enable screening of incoming calls.
 - **Screening incoming call setting:** You can set a rule by selecting any of the following options:
 - Allow only contacts
 - Block black list
 - Allow white list
- 4 Tap on **Screening outgoing calls**.
 - **Screening outgoing calls:** check this option to enable screening of outgoing calls. Only calls to contacts are allowed.

5 Tap on **Manage list**.

- **Manage black list:** Add a contact number to be blocked as a black list
- **Manage white list:** Add a contact number to be blocked as a white list.

ACCESSIBILITY

TTY MODE

If you enable TTY mode, hearing-impaired individuals can send and receive phone calls as text over the phone.

- 1** In the call settings screen, tap on **TTY mode** to view and modify TTY mode settings.
- 2** Set one of the following options:
 - **TTY Off:** disables TTY mode.
 - **TTY Full:** enables TTY mode for both incoming and outgoing calls.
 - **TTY HCO:** enables TTY mode only for incoming calls.
 - **TTY VCO:** enables TTY mode only for outgoing calls.

SENDING MESSAGES AND EMAILS

SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files and so on.

You can use the Messaging in KWSA80K to send an SMS and MMS message to other mobile phones or any other equipment that can receive SMS and MMS.



The MMS feature will be available only if subscribed from your network operator.

To access the message function, from **Home** screen or **App** screen, select **Messaging** ().

SENDING SMS/MMS MESSAGE

You can send SMS and MMS messages to contacts in your phonebook and to new numbers that are not present in the phonebook.

- 1 To create a SMS message, from **Home** screen or **App** screen, tap on **Messaging** ().
- 2 Tap on **New message** ().
- 3 Enter the contact name or the phone number in **To** field. On entering an alphabet, contacts starting and containing the entered alphabet is displayed. Scroll down to select the required contact.
- 4 Enter the message. When you add an attachment, the message gets automatically converted to a multimedia message. MMS charges are applied based on the operator.
- 5 You can add any multimedia attachment up to the size of 1 MB. To add an attachment, tap on **Attach** (). Select the attachment type from the options in the next step.
- 6 Browse to a specific folder and select the multimedia file to be attached.

ATTACHMENT TYPE	DESCRIPTION
Smileys	Attach a smiley from the phone memory.
Stickers	Attach a sticker from mobile gallery.
Camera	Attach a video file from the phone memory.
Location	Attach your location details using the Location mode.
Audio	Attach an audio file from the phone memory.

MANAGING MESSAGE SETTINGS

You can customize the way you want to view and filter the messages. You can also set the default messaging application.

To view and modify the message settings,

- 1 To edit message settings, from **Home** screen or **App** screen, select **Messaging** ().
- 2 Tap on **Options** () > **Settings**.
- 3 View and edit the following settings:

SETTINGS	DESCRIPTION
Default message app	You can set the Messenger as a default message app.
NOTIFICATION	
Notifications	Enable to view Sound and Vibrate options.
Sound	Select the ringtone from the list.
Vibrate	Enable vibrate alert for incoming messages.
DISPLAY	
Group notification message	Enable this notification message to auto combine the notification into one group.
Enable gesture	Enable to adjust the font size by pinching open or close.
STORAGE	
Delete old messages	Delete old messages automatically when the storage limit is reached.
Text message limit	Set the maximum number of SMS messages to be stored.
Multimedia message limit	Set the maximum number of MMS messages to be stored.
Memory status	Shows the memory used for SMS, MMS and the total memory used.
STORAGE DAYS	
Delete old messages by days	Enable this option to delete the old messages as days are reached.

SETTINGS	DESCRIPTION
Message expiry days	If the Delete old messages by days is enabled, this option gets activated. You can set the expiry days for the messages to be deleted.
ADVANCED SETTINGS	
Text (SMS) messages settings	
Message template	Edit the quick message template.
SMS signature	Enable to add a SMS signature
Edit SMS signature	Edit the SMS signature
Manage SIM card messages	Manages the messages in the SIM card located under Text Messages .
Message center number	Displays the message center number.
Enable WAP PUSH Service	Enable to receive service message.
Multimedia (MMS) messages settings	
Group messaging	Enable and use MMS to send a single message when there are multiple recipients.
MMS validity period	You can set the validity period as maximum or for two days.
OTHER SETTINGS	
Wireless Emergency Alerts	Displays the active alerts in your area.

- 4** Tap on **Options** () > **Restore default settings**. The default settings are restored.

DELETING MESSAGES

To delete all the messages,

- 1 From **Home** screen or **App** screen, tap on **Messaging** ().
- 2 Long tap on the message and the message gets selected. You can also select all the messages by tapping on **Select All**. Tap on **Delete** ().
- 3 A confirmation message is displayed. Tap on **Delete** to delete the message.
OR
- 4 Tap and open the message to be deleted.
- 5 Tap on **Options** () > **Delete thread**.
- 6 A confirmation message is displayed. Tap on **Delete** to delete the message thread.
- 7 To delete a single message, select a particular message and tap on **Delete** ().

SETTING UP GMAIL ACCOUNTS

You have to configure your e-mail account to access your e-mail box and e-mail services.

SENDING AN E-MAIL FROM POP3/IMAP ACCOUNT

- 1 Tap on **new Email** ().
- 2 Enter the mail recipient in **To** field and subject in the **Subject** line in the **Compose** screen.
- 3 To access other options, tap on **Options** (). The following options are displayed:

OPTION	DESCRIPTION
Add from Contacts	Add a contact from the phonebook.
Save to Draft	Save composed mail as draft.
Discard	Delete the selected email.
Settings	Set the general settings.
Help & feedback	You can take the help about the mail and give feedback.

- 4 Tap on **Attach** () icon and the following options are displayed:
 - Attach file
 - Insert from DriveThe message is sent to the recipient.
- 5 Enter the message and tap on **Send** ().

READING GMAIL

- 1 Select Gmail account and tap on the Gmail to retrieve.
- 2 To manually retrieve a new mail from Gmail account, select **System/General Settings** (⚙) > **Accounts** > **select a particular account**, go to **Options** (⋮) and tap on **Sync now** (↻) option.
- 3 Tap a message to read. The following options are available when a message is opened:
 - Reply
 - Reply all
 - Forward
 - Add to star/Add star
 - Print
 - Delete
 - Archived
- 4 Tap on **More** (⋮) option on the message window and the following options are displayed:
 - Reply all
 - Forward
 - Add star
 - Print
- 5 On the same message window, tap on **More** (⋮) option which is present on the top right corner of the screen. The following options are displayed:
 - Move to
 - Change labels
 - Mark important
 - Mute
 - Print
 - Report spam

SONIM SCOUT

Sonim Scout is a solution that allows the user to register with Sonim and use a number of key enterprise features.

Sonim Cloud account required to fully utilize SCOUT capabilities. For more information, visit <http://www.sonimcloud.com>.

 
To access Sonim Scout,

On the **App** screen, tap on **Sonim Scout** ().

SETUP


Setup tab consists of the following features:

- SonimSetupWizard
- SafeGuard

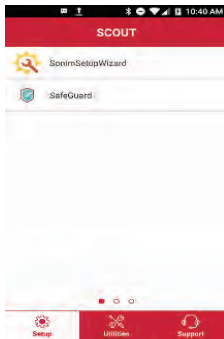

Utilities tab consists of the following features:

 
- Contact Transfer
- Sonim BLE Connect

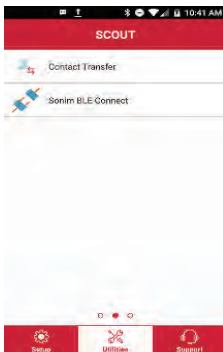

SUPPORT

Support tab consists of the following features:

 - Chat
- Remote Support
- SonimCare
- Warranty Registration
- Device Information
- Terms of Use
- Contact Sonim Support

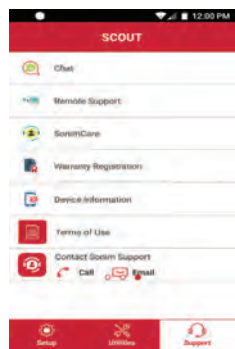

CAMERA

KWSA80K has a rear camera with 12MP fixed focus for taking pictures. The saved pictures can be accessed/viewed from **Photos** ()

1 From **Home screen** or **App screen**, tap on **Camera** ()

2 Select Camera mode to set the following modes:

- **Normal** (): To shoot a picture in normal mode, tap on soft key to capture the picture. Use **Volume Up** and **Down** button or pinch with fingers to **Zoom in** and **Zoom out**.
- **Video** (): Tap on **Video** button to enable the video mode and start the recording. You can pause the recording in the middle by using Pause soft key () symbol.
- Tap on **camera soft key** () for capture image and tap on Camcorder mode to record the video ()
 - On the **Camera** screen, tap on **Options** () > **Settings** () . The following options are displayed:
- **General:**
 - **Store location:** You can enable/disable this option to store the photos in a selected location.
 - **Face Detection:** You can enable/disable this option that detects human faces so that the camera can set the focus.
 - **Storage:** You can choose the storage location either KWSA80K memory or SD card to store the captured pictures/Videos.
 - **Record Date & Time:** The date and time are displayed on the recorded video or the photos.
- **Still Camera:**
 - **Countdown timer:** You can set the countdown timer for the following options: off, 2 seconds, 5 seconds and 10 seconds.
 - **Continuous Shot:** You can enable/disable this option to set the camera on continuous shot.
 - **Picture size:** The following picture sizes are displayed. Select the required size from the following options: **12M** pixels, **8M** pixels, **5M** pixels, **3M** pixels, **2M** pixels, **1M** pixels, **VGA**
 - **Picture quality:** The following options are displayed: **Low**, **Standard** and **High**
 - **Redeye Reduction:** Enable/disable this option to reduce having a red-eye effect in photography. You can get the appearance of red pupil in color photographs.
 - **Exposure:** The following options re displayed: **-2**, **-1.5**, **-1**, **-0.5**, **0**, **+0.5**, **+1**, **+1.5**, **+2**
 - **White balance:** This option will change the color balance in your

pictures. The following options are displayed: **Auto**, **Incandescent**, **Fluorescent**, **Daylight** and **Cloudy**

- **Shutter Sound:** You can enable/disable this option.
- **ZSL: Zero Shutter Delay (ZSD)** is a feature that synchronises your shutter with capture icon. ZSD **ON** will capture images at the instant when you press the capture icon. ZSD **Off** will capture the images with delay of 3 frames (or more depending on ISP).
- **Video Camera:**
 - **Video quality:** You can choose any of the following option to set the video quality: 4k UHD, HD 1080p, HD 720p, SD 480p, VGA, CIF and QVGA
 - **Video duration:** You can set the duration for the video capturing. The following are the options: 30 seconds (MMS), 10 minutes, 30 minutes and no limit
 - **Image Stabilization:** Enable/disable this option to stabilize the recorded image by varying the optical path to the sensor.
 - **Noise Reduction:** This option is used to reduce or get rid of noise in their digital images. The following are the options: **Off**, **Fast** and **High Quality**
 - **Video Encoder:** A video encoder connects to an analog video camera via a coaxial cable and converts video signals into digital video streams that can be sent over a wireless IP-based network. The following formats are supported: **H264** and **H265**.
 - **Video Rotation:** You can rotate the recorded video in the following angles: **0, 90, 180** and **270**.
 - **Time lapse:** It is a video recording mode that captures video at a very low frame rate. Following are the options: **off**, **Seconds** - 0.5, 1, 1.5, 2, 2.5, 3, 4, 5, 6, 10, 12, 15, 24. **Minutes** - 0.5, 1, 1.5, 2, 2.5, 3, 4, 5, 6, 10, 12, 15, 24; **Hours** - 0.5, 1, 1.5, 2, 2.5, 3, 4, 5, 6, 10, 12, 15, 24
 - **Video high FrameRate:** If the video quality option is set to 4k UHD, the video high framerate is disabled and you can select the option as per your requirement.
- **System:**
 - **Restore defaults:** The camera default settings are restored.
 - **Version Info:** The camera version details are displayed.

CALENDAR

The Calendar helps you to set appointments, schedule reminders and alerts and repeat them if required. You can also view your saved tasks on a daily or weekly basis.

To access calendar;

- 1 From **App** screen, tap on **Calendar** ().
- 2 To change the calendar view, tap on **Option** menu () and you can view the calendar in **Day**, **3 Day**, **Week** and **Month** format.
- 3 Tap on **Add** () icon to add the following in your calendar:

- **Goal:** You can choose a goal and the calendar schedules sessions for your goals.
 - **Reminder:** You can set a reminder to call, email, text, checkin, reservation.
 - **Event:** You can add an event in the calendar and tap on **Save** to save the event.
- 4 Tap on **Options** (☰) > **Settings** (⚙️) to view the settings. The options are: **General, Events from Gmail, Events, Reminders, Birthdays** and **Holidays** which are synced with your Email account.
 - 5 Tap on **Options** (☰) > **Refresh** to sync the calendar.

CLOCK

You can view the time of major cities in different time zones using this function. You also have the option to use **Daylight Saving Time (DST)**.

- 1 From **App** screen, tap on **Clock** (🕒).
- 2 Tap on **Clock** (🕒).
- 3 Select **World clock** icon (🌐) located at the bottom of the screen. To view the list of cities and the current time, enter the first few alphabets to get the list of cities. Tap on the city name and the selected city and the current time is added to the Clock.
 - The local time in the home city is displayed in the upper half of the screen.
 - To set the home city, select the required city from the list. It is added to the selected cities list. The selected city is set as the home city.

ALARM

You can set an alarm for a particular time.

- 1 From **App** screen, tap on **Clock** (🕒).
- 2 Tap on **Alarm** icon (🕒) on the top of the screen.
- 3 Tap on **Add** (⊕) to add a new alarm and tap on **OK**.
- 4 Set the following items: Check the box down to **Repeat** to set the alarm on all the days in a week.
 - Tap on **Default ringtone** and select the required ringtone.
 - You can enable the device to **Vibrate** when the alarm is set.
 - You can name the **Label**.
 - You can **Delete** the selected alarm.



The alarm will work even when KWSA80K is set in silent mode.

TIMER

- 1 From **App** screen, tap on **Clock** () > **Timer** ().
- 2 The following actions can be performed:
 - RESET, START, STOP, DELETE, ADD TIMER and Label

STOPWATCH

- 1 From **App** screen, tap on **Clock** () > **Stopwatch** ().
- 2 Select **START** and **STOP** to run the stop watch.
- 3 Tap on **RESET** to reset the stopwatch time.
- 4 Tap on **SHARE** to share the file via any of the media.
- 5 Tap on **LAP** to count the time duration for each lap.

CALCULATOR

The default calculator in this KWSA80K is designed to perform simple mathematical calculations.

- 1 From **App** screen, tap on **Calculator** ().
- 2 Tap/swipe on the **left arrow mark** to go to the **Advanced panel**.
- 3 To enter the numbers, tap the numeric soft keys.
- 4 To use mathematical operators, touch the respective operation soft keys on the keypad.
- 5 After performing the calculations, tap = for the final result.

SOUND RECORDER

You can record voice memos using the sound recorder. To access the sound recorder,

- 1 From **App** screen, tap on **Sound Recorder** ().
 - To record an audio file, tap on **Record** ().
 - To stop the recording, select **Stop** ().
 - To save the voice memo, tap on **Save**.
 - To exit without saving, tap on **Discard**.
 - To play the recorded file instantly, on the **Sound Recorder** home screen, tap on **Option** () and the Recording list is opened. Tap on the required recording.

FILE MANAGER

You can view/edit/delete/share the files stored in KWSA80K through File Manager.

- 1 From **App** screen, tap on **File Manager** ().
- 2 On the **File manager** screen, tap on **Options** () to view the following Actions:
 - **Properties:** View the properties of the folder.
 - **Refresh:** Refresh the folder.
 - **New folder:** Create a new folder.

- **New file:** Create a new file.
- **Select all:** Selects all the folders.
- **Deselect all:** Deselects the folder when they are selected.
- **Add to bookmarks:** Bookmarks are added.
- Copy selection here: You can copy the folder to same or different folder and the copied files/folders are saved.
- **Move selection here:** You can move the folder to selected destination.
- **Delete selection:** Selected folder is deleted and you cannot undo this action.
- **Set as home:** You can set the selected folder as home folder.
- **Add shortcut:** Shortcut is created for selected folder on the home screen.

SIM TOOLKIT

SIM Toolkit commonly known as STK is a standard of the GSM system which enables the SIM to initiate actions which can be used for various value added services.

It displays the Operator specific services.

To access the SIM Toolkit,

- From **App** screen, tap on **SIM Toolkit** ().
- It displays the SIM provider and the respective services details.

DOWNLOADS

You can download and install/view your android applications/media files, when KWSA80K is connected to the Internet through Wi-Fi or mobile data connection. You can also download files from Gmail or other sources.

- 1 To manage application downloads, tap on **Downloads** () on **App** screen.
- 2 Use the **Downloads** app to view, open, or delete the downloaded files.
- 3 At the top of the screen, tap on the icon () to sort your downloads by name, by date modified, or by size.

FM RADIO

You can listen to the radio through FM radio. A wired headset should be connected to enable FM radio.

- 1 From **App** screen, tap on **FM Radio** ().
- 2 A message **Please plug in a Headset to use FM Radio** is displayed. Connect a wired Headset with the side connector to enable FM Radio. **FM radio** icon () and **headset** icon () are displayed on the **Status bar**.
 - **Side Connector:** As KWSA80K device does not support the jack, side connector is used to plug-in the jack and listen to FM radio over the headset.
- 3 Tap on **Options** () > **Scan** to scan all the stations. Available channels are displayed.
- 4 Tap on **Start Recording** to record the audio which is broadcasted on the radio to listen to the same later.
- 5 Tap on **Stop Recording** to stop the audio recording.
- 6 Tap on **Options** () > **Setting** and the following options are displayed:
 - **Regional Band:** The regional band with frequency range is displayed.
 - Channel Spacing:
 - Lower Freq Limit (in Mhz)
 - Higher Freq Limit (in Mhz)
 - **Audio Output Mode:** Select any of the following options as a output mode: **Stereo** or **Mono**
 - **Alternate Frequency:** Check this option to enable/disable the auto selection of alternate frequency.
 - **Record Duration:** You can set the time duration for recording in the following time frame:
 - 5 minutes
 - 15 minutes
 - 30 minutes
 - Until stopped
 - **Revert to Factory Defaults:** This option deletes all the settings including Presets. Select **OK** to confirm.
- 7 Tap on **Sleep**. You can turn off the radio after a selected time frame:
 - 15 minutes
 - 30 minutes
 - 45 minutes
 - 1 Hour
- 8 Tap on **All Channels**. The available channels/stations are displayed with the station serial number. For example, first station in the list is displayed as **Station:1**.
 - Long tap on the required station/channel and the following options are displayed:

- **Station #:** Each station/channel is given a serial number in the list.
- **Rename:** You can rename the station/channel name.
- **Delete:** A confirmation message is displayed to delete the selected channel/station. Tap on **Delete** and the channel/station is deleted from the list.

RF EXPOSURE INFORMATION (SAR)

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

when tested for use at the ear is 1.11 W/kg, and

when worn on the body, as described in this user guide, is 1.47 W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.), and

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC: WYPPG4032.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and be positioned a minimum of 0 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1 cm from your body when the device is switched on.

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed

to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all Wi-Fi product marketed in US must fixed to US operation channels only.

INDUSTRY CANADA STATEMENT (IC: 8090A-PG4032)

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- This device may not cause interference, and
- This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- l'appareil ne doit pas produire de brouillage, et
- l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

- This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference. Cet appareil est conforme à la norme RSS-310 d'Industrie Canada. L'opération est soumise à la condition que cet appareil ne provoque aucune interférence nuisible.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios.

- Cet appareil et son antenne ne doivent pas être situés ou fonctionner en conjonction avec une autre antenne ou un autre émetteur, exception faites des radios intégrées qui ont été testées.
- The Country Code Selection feature is disabled for products marketed in the US/ Canada.
- La fonction de sélection de l'indicatif du pays est désactivée pour les produits commercialisés aux États-Unis et au Canada.

Radiation Exposure Statement:

The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Additional statement for phones:

This device has been tested for compliance with IC SAR values at a typical operating near the body. To ensure that RF exposure levels below the levels tested, use accessories with this equipment to maintain a minimum separation distance of 1.0 cm between the body of the user and the device. These accessories should not contain metallic components. It is possible that the accessories used close to the body that do not meet these requirements are not consistent with the SAR limits and it is advisable to avoid using them.

Déclaration d'exposition aux radiations:

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

Additional statement for phones:

Ce dispositif a été testé pour la conformité avec les valeurs SAR à un fonctionnement typique près du corps . Pour assurer que les niveaux d'exposition aux radiofréquences en deçà des niveaux testés , utiliser des accessoires avec cet équipement pour maintenir une distance de séparation minimale de 1.0 cm entre le corps de l'utilisateur et l'appareil. Ces accessoires ne doivent pas contenir des composants métalliques . Il est possible que les accessoires utilisés près du corps qui ne répondent pas à ces exigences ne sont pas compatibles avec les limites SAR et il est conseillé d'éviter de les utiliser.

Caution :

- 1) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- 2) the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall comply with the e.i.r.p. limit; and

- 3) the maximum antenna gain permitted for devices in the band 5725-5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate.
- 4) Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

- 1) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- 2) le gain maximal d'antenne permis pour les dispositifs utilisant les bandes 5250-5350 MHz et 5470-5725 MHz doit se conformer à la limite de p.i.r.e.;
- 3) le gain maximal d'antenne permis (pour les dispositifs utilisant la bande 5725-5825 MHz) doit se conformer à la limite de p.i.r.e. spécifiée pour l'exploitation point à point et non point à point, selon le cas.
- 4) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

REGULATORY INFORMATION - EUROPEAN MARKET

EU REGULATORY CONFORMANCE

Here by, We, Sonim Technologies (Shenzhen) Ltd., declares that the radio equipment type KWSA80K is in compliance with the Directive 2014/53/EU.

FREQUENCY BANDS

FREQUENCY BANDS	MAXIMUM OUTPUT POWER (UNIT:DBM)
GSM900	32.7
GSM1800	29.56
WCDMA Band I	24.33
WCDMA Band VIII	24.28
LTE Band 1	22.69
LTE Band 3	22.94
LTE Band 7	23.11
LTE Band 8	22.98
LTE Band 20	22.99
LTE Band 28	22.97
LTE Band 38	22.65
LTE Band 40	22.8
802.11b	16.76
802.11g	14.22
802.11n (HT20, 2.4 GHZ)	14.05
802.11n (HT40, 2.4 GHZ)	14.04
802.11n (HT20, 5 GHZ)	16.08
802.11n (HT40, 5 GHZ)	16.10
802.11a	15.95
802.11ac (HT80)	15.96
BT (BDR+EDR)	8.87
BT LE	-1.47
NFC	12.72 dBμA/m

Manufacture: Sonim Technologies (Shenzhen) Ltd.
Address: Block B, 2nd Floor, Building #2, Daqian Industrial Park,
Longchang Road, 67 District Baoan, Shenzhen, Guangdong,
P.R. China

Importer: JVCKENWOOD Europe B.V.

RF EXPOSURE

A minimum separation distance of 0.5 cm must be maintained between the user's body and the device, including the antenna during body-worn operation to comply with the RF exposure requirements in Europe.

The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device:

- when tested for use at the head was 0.51 W/kg
- when tested for use at the body was 1.54 W/kg.

5G Wi-Fi

Operations in the 5.15-5.35GHz band are restricted to indoor usage only in EEA countries.

LVD LOGO

EN50332 acoustic pressure sign:



To prevent possible hearing damage, do not listen at high volume levels for long periods.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

DIPOSA OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT LOGO



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end- of-life.

ADAPTER

Please make sure the temperature for adapter will not be higher than 45°C/ 113°F.



Adapter shall be installed near the equipment and shall be easily accessible.

DECLARATION OF CONFORMITY

Sonim Technologies, Inc.

1825 S. Grant St., Suite 200., San Mateo, CA, 94402

EU Declaration of Conformity (DoC)

Hereby,

Name of manufacturer:

Sonim Technologies (Shenzhen) Ltd.

Address:

Block B, 2nd Floor, Building #2, Daqian Industrial Park, Longchang Road, 67 District Baoan

City:

Shenzhen

Country:

China

declares that the DoC is issued under its sole responsibility and that this product:

Product description:

Mobile Phone

Type designation(s):

KWSA80K

Trademark:

KENWOOD

is in conformity with the relevant Union harmonization legislation:

Radio Equipment Directive: 2014 / 53 / EU.

with reference to the following standards applied:

1. Health (Article 3.1(a) of Directive 2014/53/EU)

Applied Standard(s):

■ EN 50566: 2017

■ EN 50360: 2017

■ EN 62209-1 : 2016 / -2 : 2010

■ EN 62479 : 2010

2. Safety (Article 3.1(a) of Directive 2014/53/EU)

Applied Standard(s):

■ EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

■ EN 50332-2: 2013

3. Electromagnetic compatibility (Article 3.1 (b) of Directive 2014/53/EU)

Applied Standard(s):

■ Draft EN 301 489-1 V2.2.0 / -17 V3.2.0 / -19 V2.1.0/ -52 V1.1.0 / Final Draft EN301489-3 V2.1.1

4. Radio frequency spectrum usage (Article 3.2 of Directive 2014/53/EU)

Applied Standard(s):

■ EN 300 328 V2.1.1

■ EN 301 893 V2.1.1

■ EN 301 511 V12.5.1

■ EN 301 908-1 V11.1.1 / -2 V11.1.2 / -13 V11.1.2

■ EN 303 413 V1.1.1

■ Final Draft EN 303 345 V1.1.7

■ EN 300 330 V2.1.1

The Notified Body Telefication B.V., with Notified Body number 0560 performed:

Modules: B+C and issued the EU-type examination certificate.

Signed for and on behalf of:

Date:

July 4, 2018

City:

Shenzhen

Name:

Avena Xu

Title:

Type approval Manager

Signature:



84

KENWOOD

© 2018 JVC KENWOOD Corporation