ELECRONIC BALLAST USER MANUAL

MODEL NO.: YC-322515E-1, YC-322515E-2

- 1. The ballast electrify, high-voltage electricity exists, when fix or maintain the lamp, cut off power and provide good grounding, non-professionals do not operate.
- 2. This ballast applied to the indoor or dry outdoor environment.
- 3. Input voltage of this ballast is 120V 60Hz \pm 10V, not for use with dimmers.
- 4. This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.