

USER MANUAL


(WIRELESS CONTROLLER PLUS)

Thank you for purchasing NITHO™ Wireless controller plus which is designed to match Wii™ Remote and enhance the convenience of controlling of Wii™.

INSTRUCTION

PRODUCT FEATURES:

- 2.4 GHz wireless technology with auto battery save function. You can play within 5 meters range from Wii™ Remote.
- Compatible with Wii™ Remote and all the Wii™ consoles, also compatible with Motion Plus™.
- This product is with built-in Lithium rechargeable battery. USB recharge cable provided.
- FC function
- ISM Frequency: 2405-2478MHz

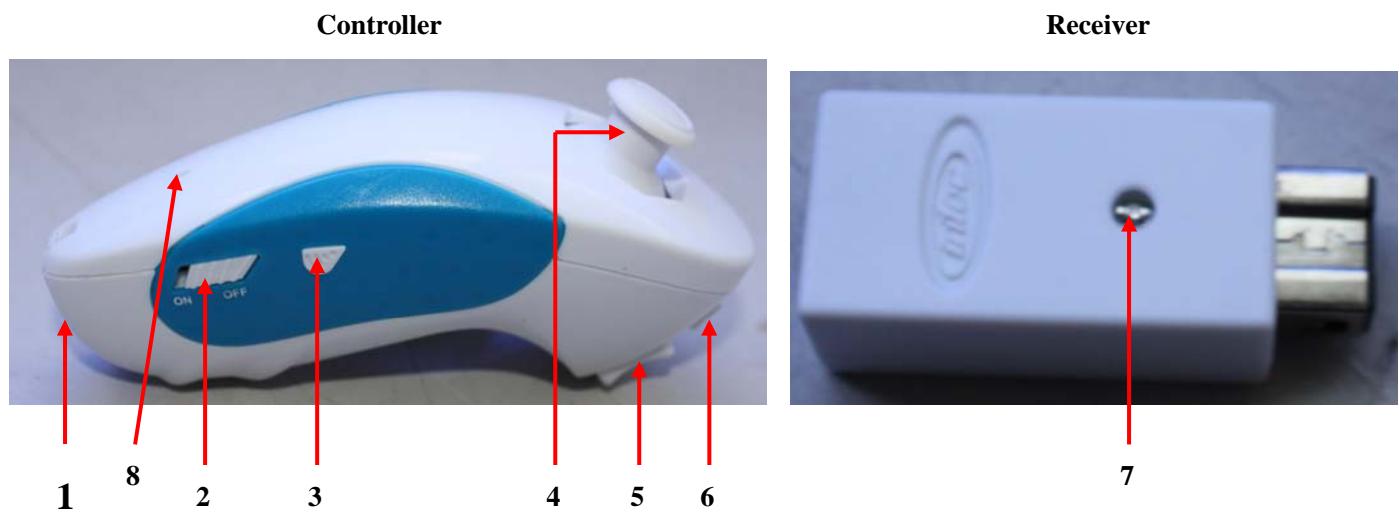

- 1: Charging plug : DC 5V
- 2: Power ON/OFF
- 3: SYNC button
- 4: 3D joy stick
- 5: Z button
- 6: C button
- 7: Reception indicated LED
- 8: Charging and receipting indicator

SPECIFICATIONS:

1. Rated voltage of the controller: 3V
2. Rated current of the controller: 15MA

3. Rated voltage of the receiver: 3V
4. Rated current of the receiver: 12MA
5. Available up to 5 meters straightaway range
6. Input of charging current: 100-200MA, charging time: About 2 hours.

HOW TO USE:

1. Turn on your Wii™ Console and synchronize Wii™ Remote with your Wii™ console.
2. Connect the receiver of Wireless controller plus into Wii™ Remote. The RX LED indicator flashes.
3. Turn on power switch of the controller to ON position. The LED indicator flashes blue. Press SYNC button of the controller. When the receiver receives the signal from the controller, the LED indicator of the controller indicates flicker-free blue light.
4. You are ready to play.

POWER SAVE (SLEEP MODE)

1. In order to save power and prolong batteries life, the Wireless controller plus features a Power Save mode:
 - A. Press SYNC button for 3 seconds in any case, the Wireless controller plus will enter sleep mode.
 - B. When the receiver receives the signal from the controller but the If the wireless controller is left to idle for 5 minutes, the controller will enter sleep mode.
 - C. If the receiver cannot receive the signal from the controller for more than 1 minutes, Wireless controller plus will enter sleep mode.
2. To exit the Sleep mode you can press SYNC button, Z button or C button. Then you can continue your gaming control.

HOW TO RECHARGE

When the power of the Wireless controller plus is low, the LED on the controller will be obviously darker than normal. This indicates the controller needs to be recharged.

1. To recharge the controller, please output DC5V/500MA through the included USB cable into the controller or use any other power adapter of the same standard.
2. Connect the USB recharge cable with the charging plug of the controller. The LED indicates flicker-free red light.
3. When the recharge is finished, the flicker-free red light will be extinguished.

When recharging, you must stop gaming and power button of the controller must be OFF.

WARNING:

1. Please read the user manual before use.
2. Don't strongly throw it.
3. Avoid any liquid or metal access the inner part of this product.
4. Don't use or store it in humid environment or under high temperature.
5. If the receiver can not receive the signal of the controller, please turn off the power of the product and turn on again. Press SYNC button to search the signal.
6. Pull up the charging cable when the recharge is finished.
7. Turn off the power when unuse.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.
SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE
EQUIPMENT.**