






WKVD Battery Pack 1

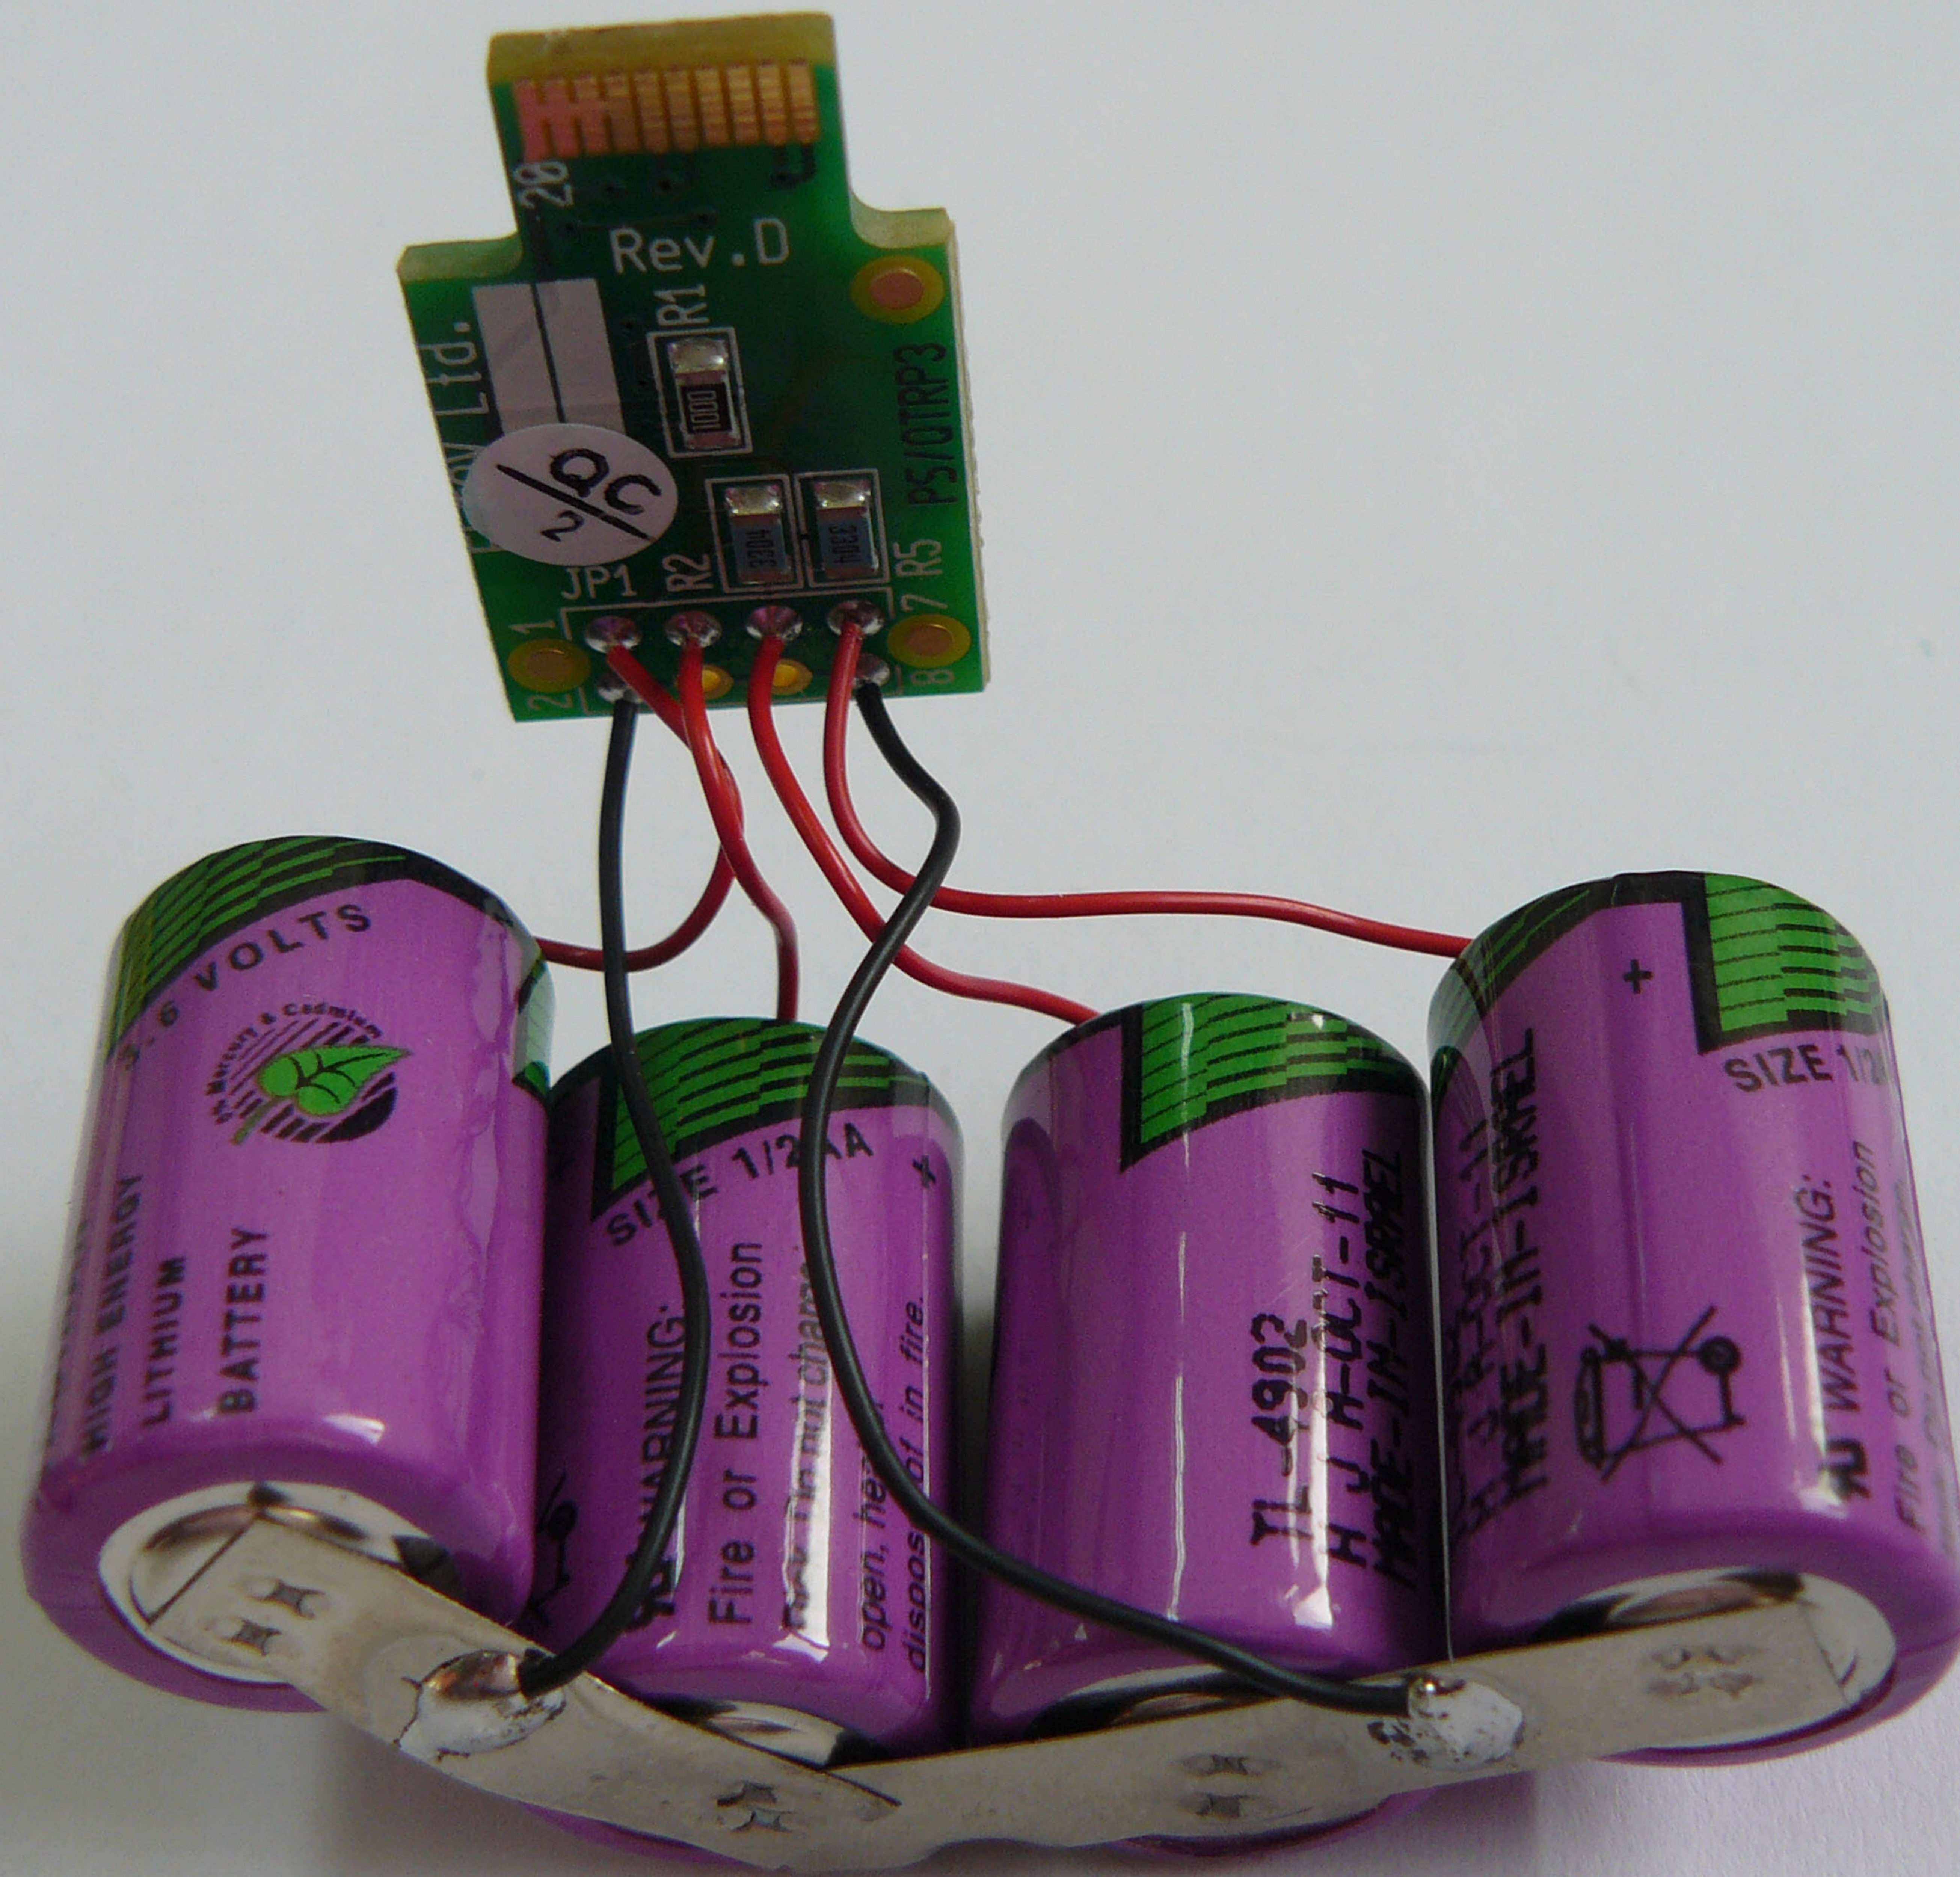

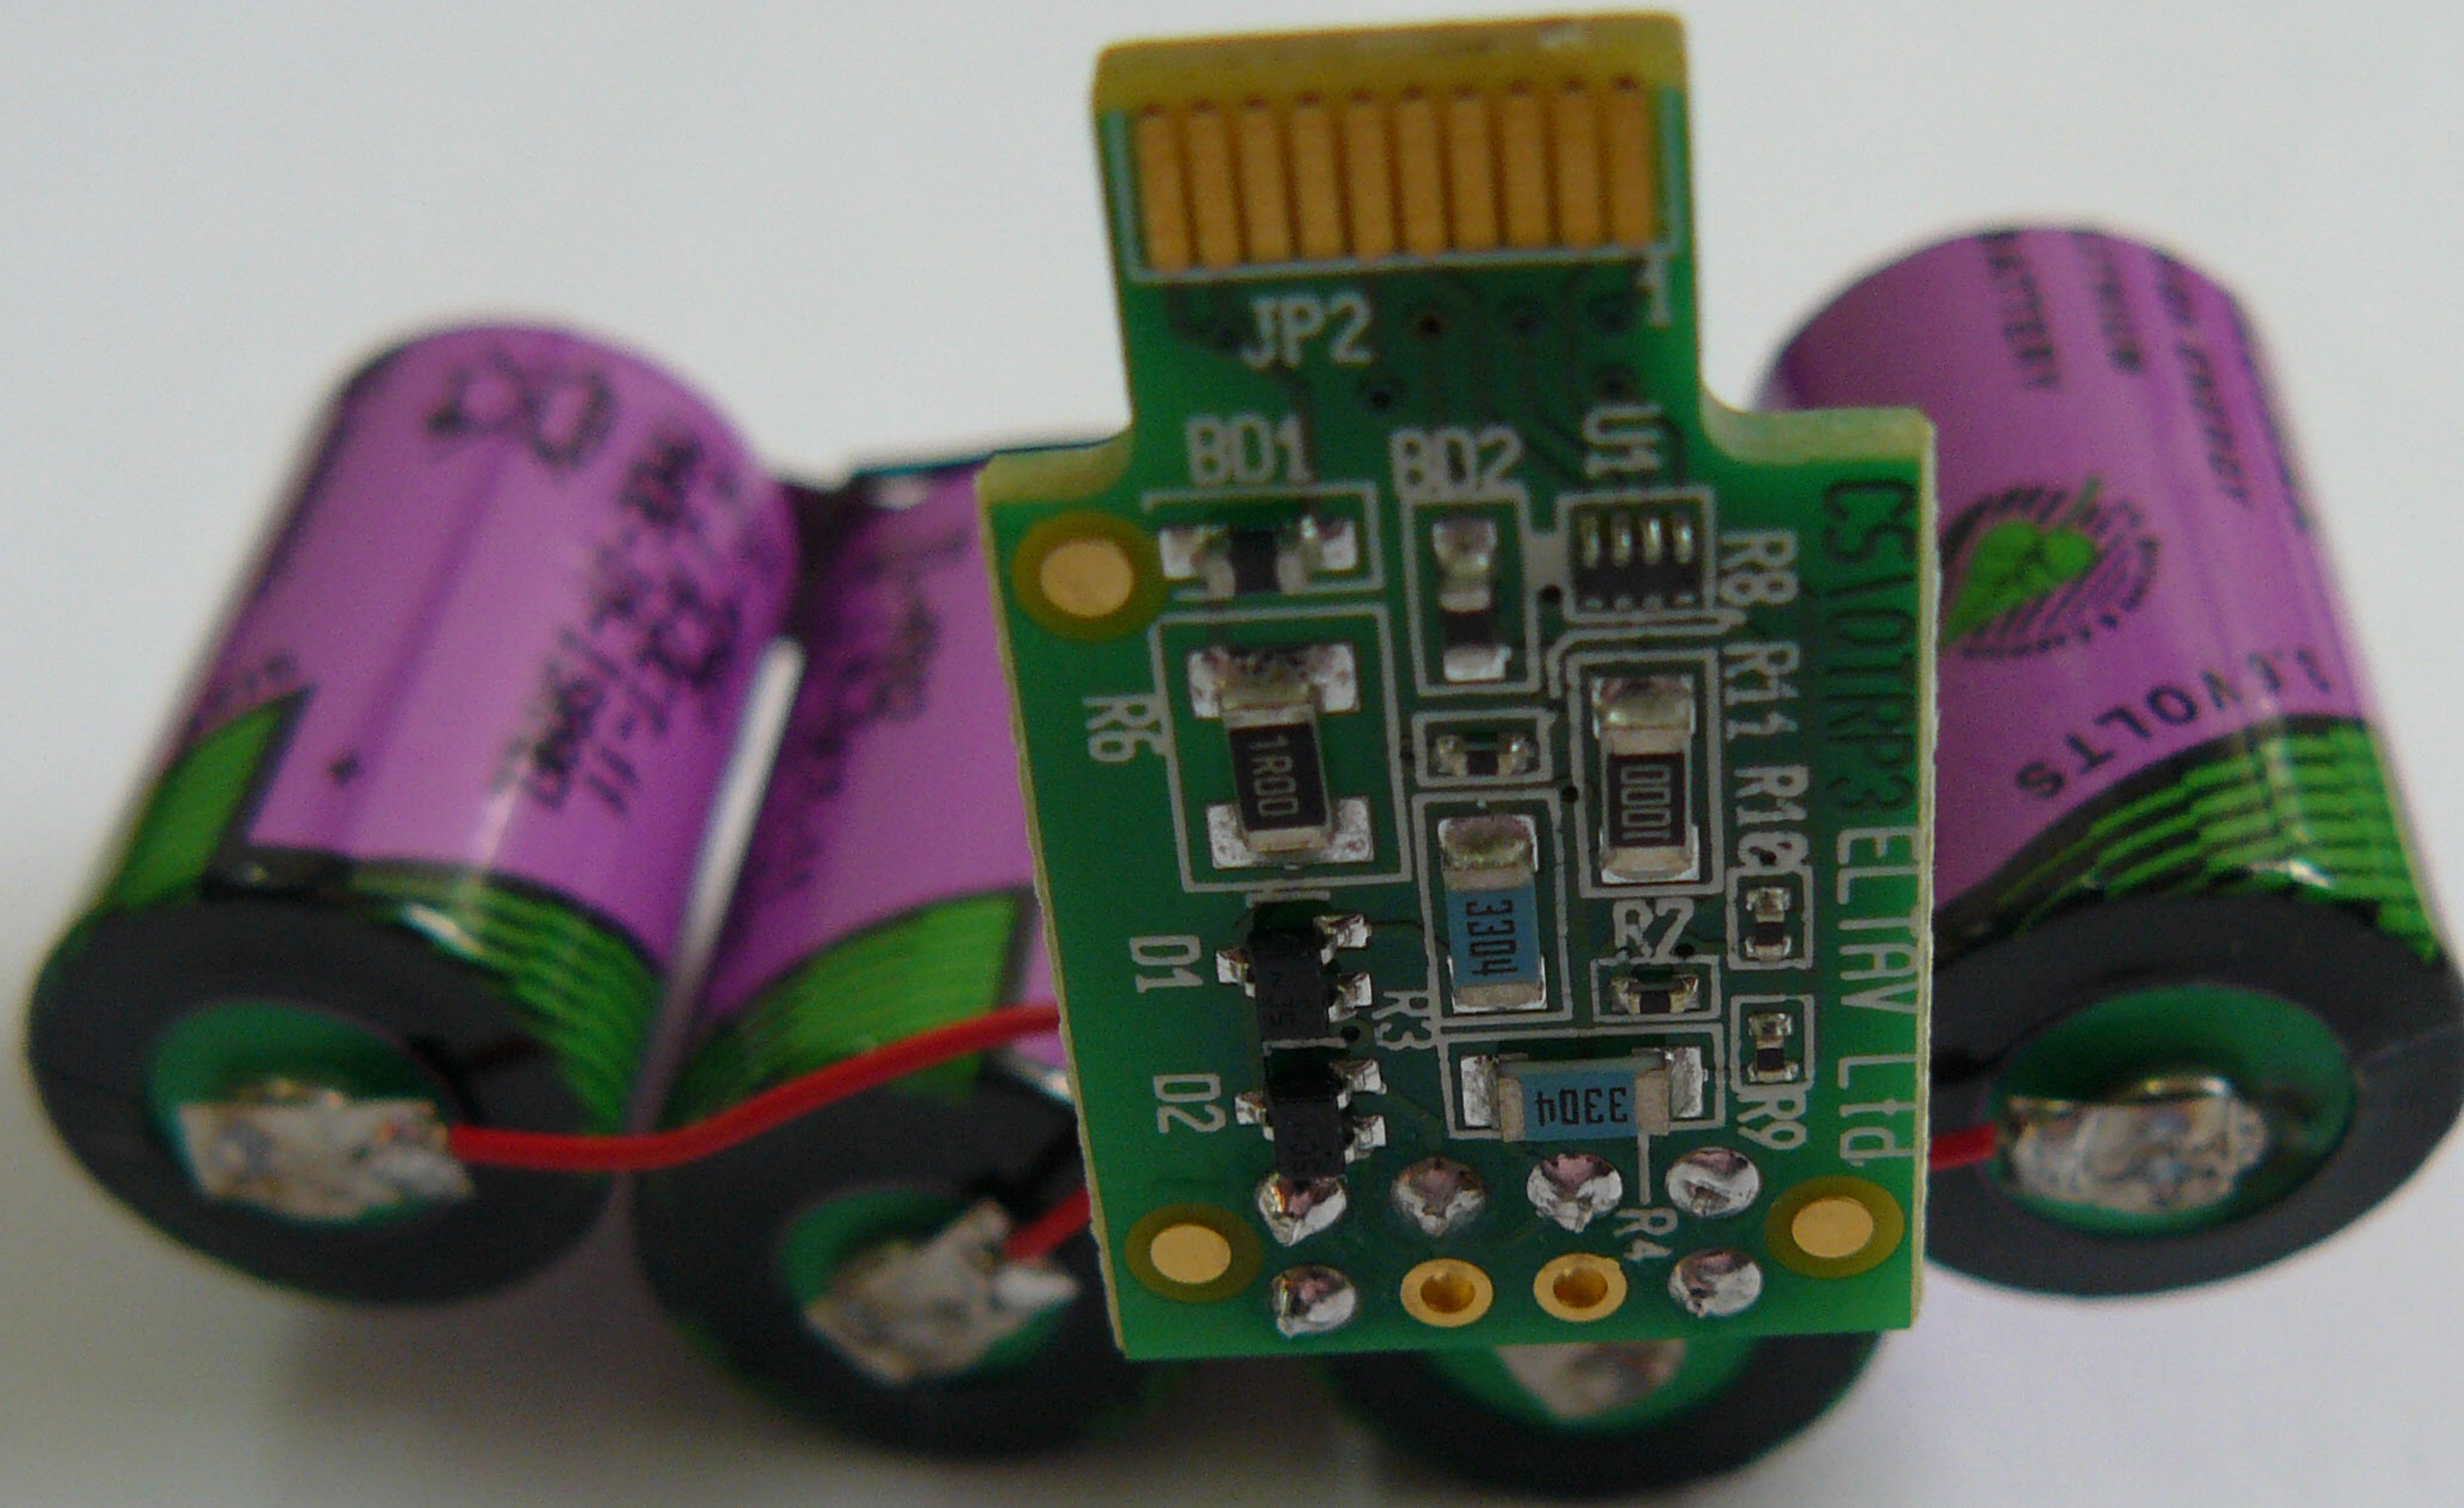


WKVD Battery Pack 2



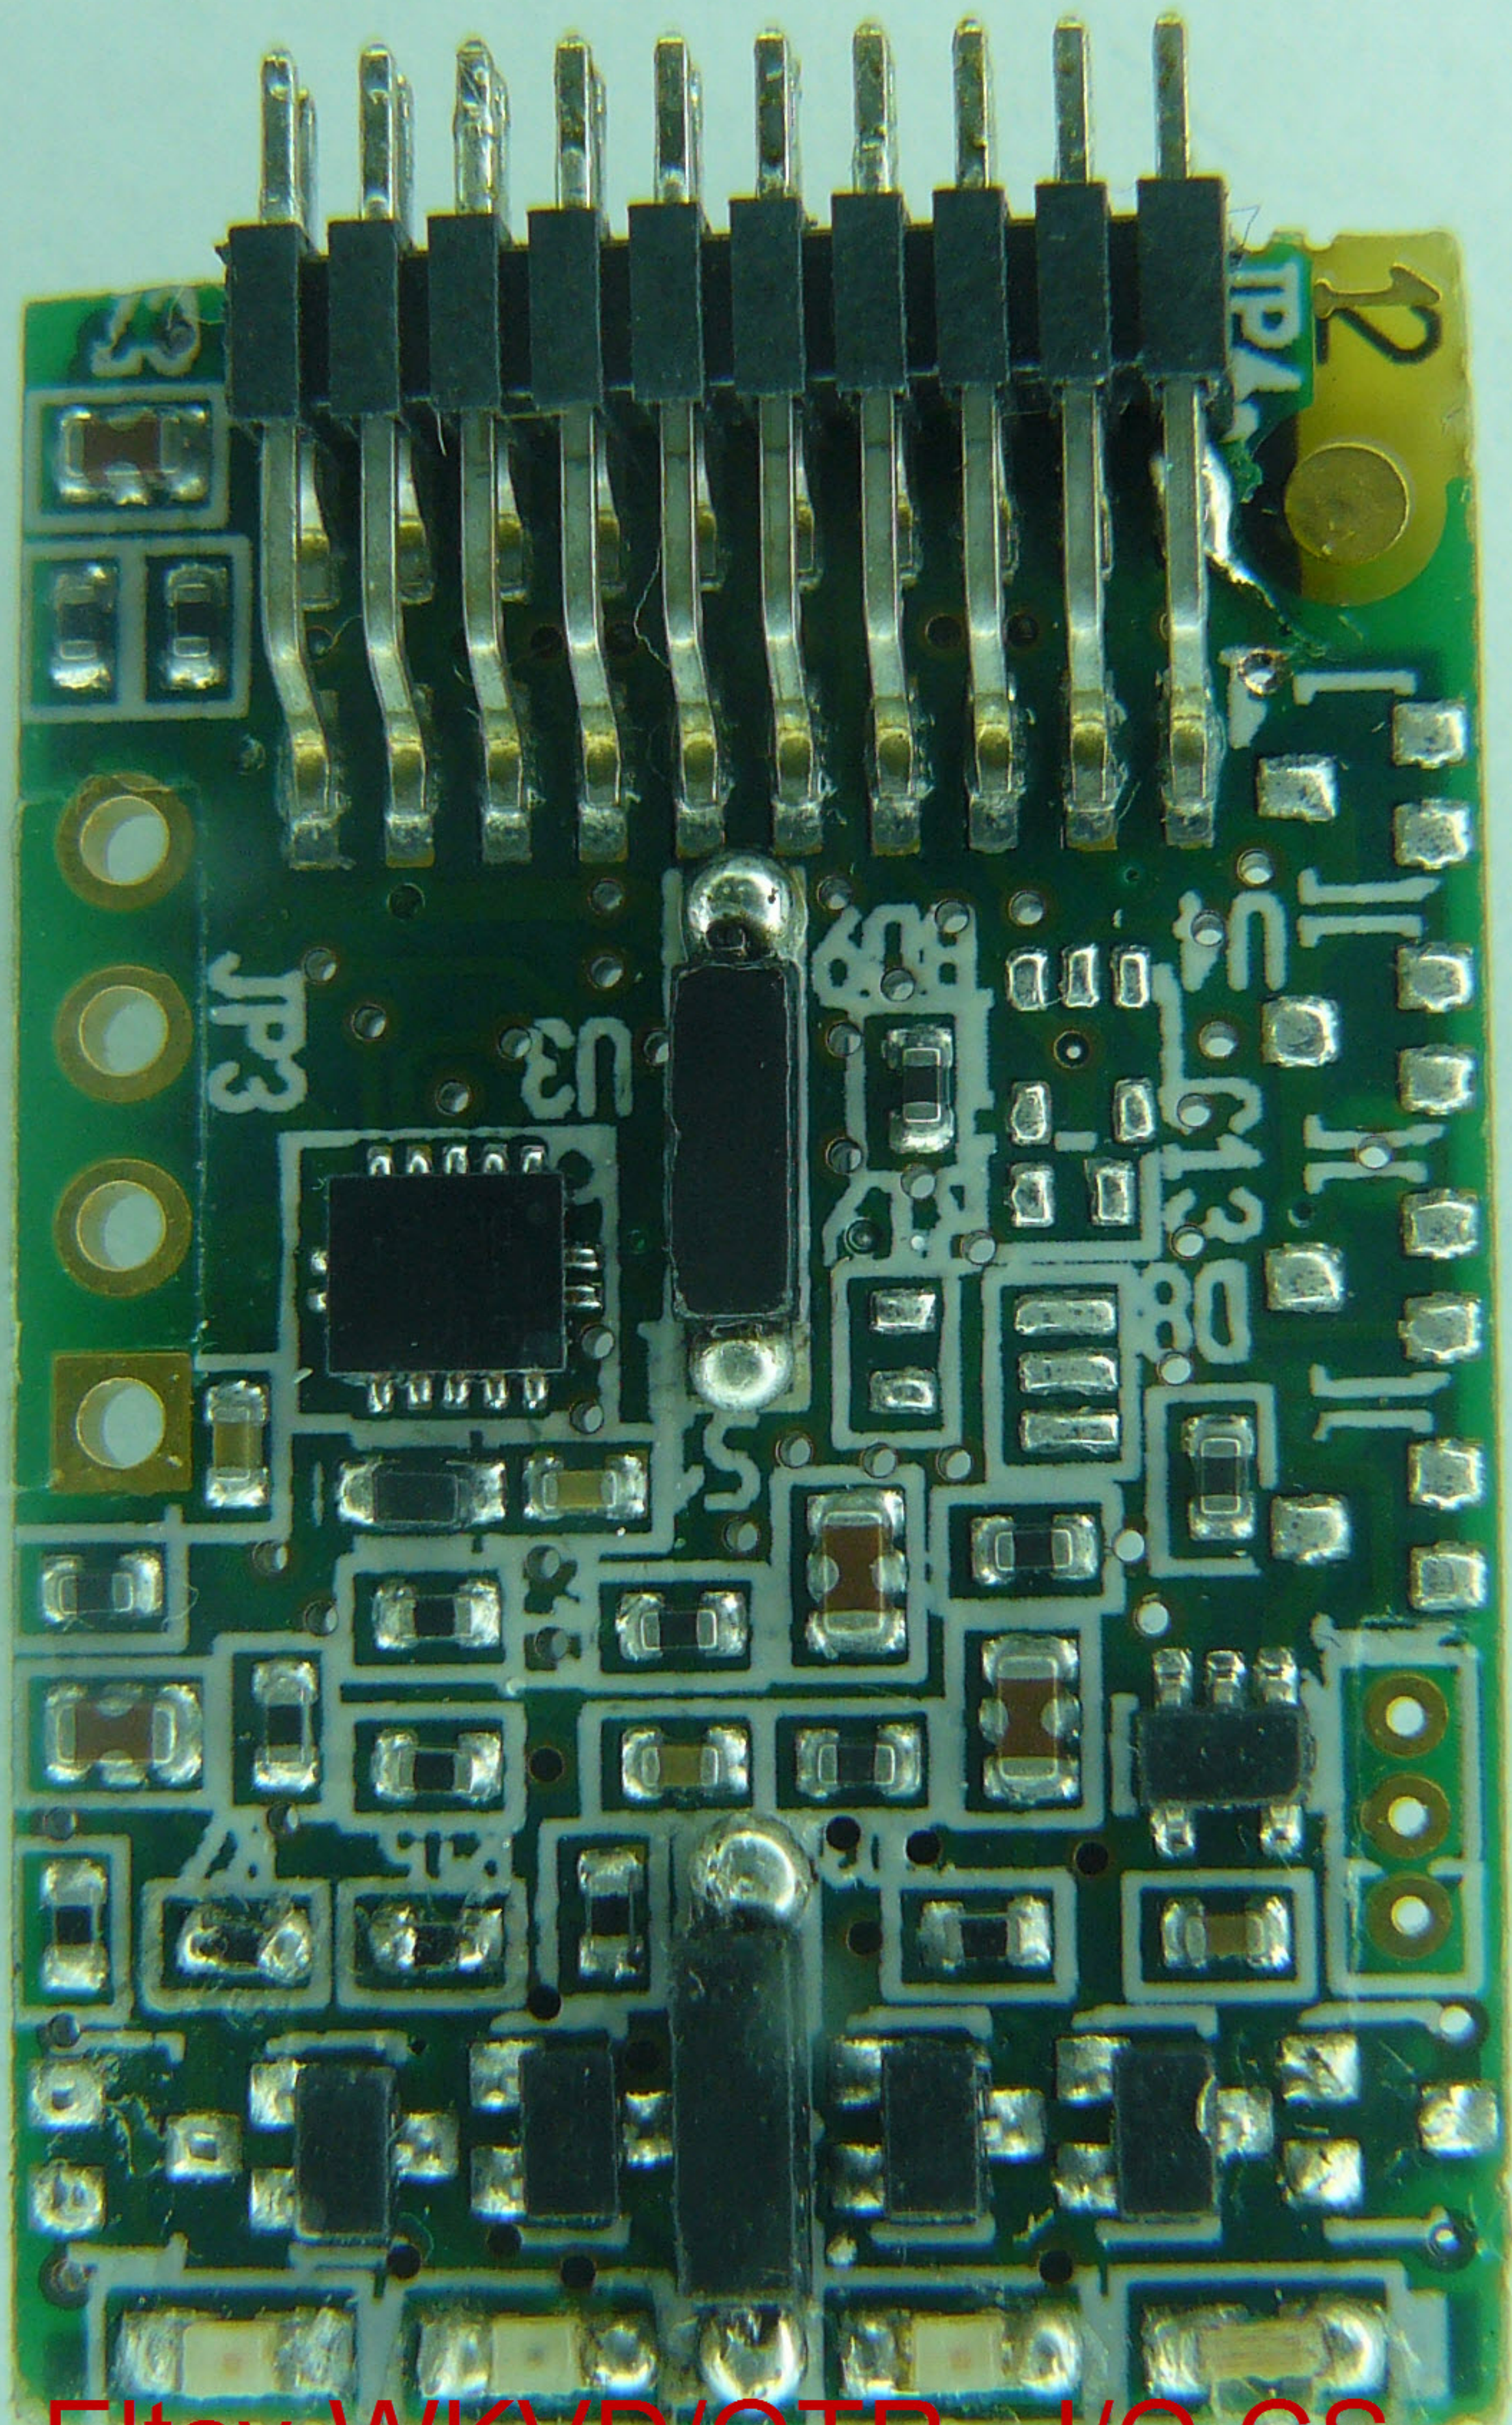

Eltav WKVD/QTR - I/O CS



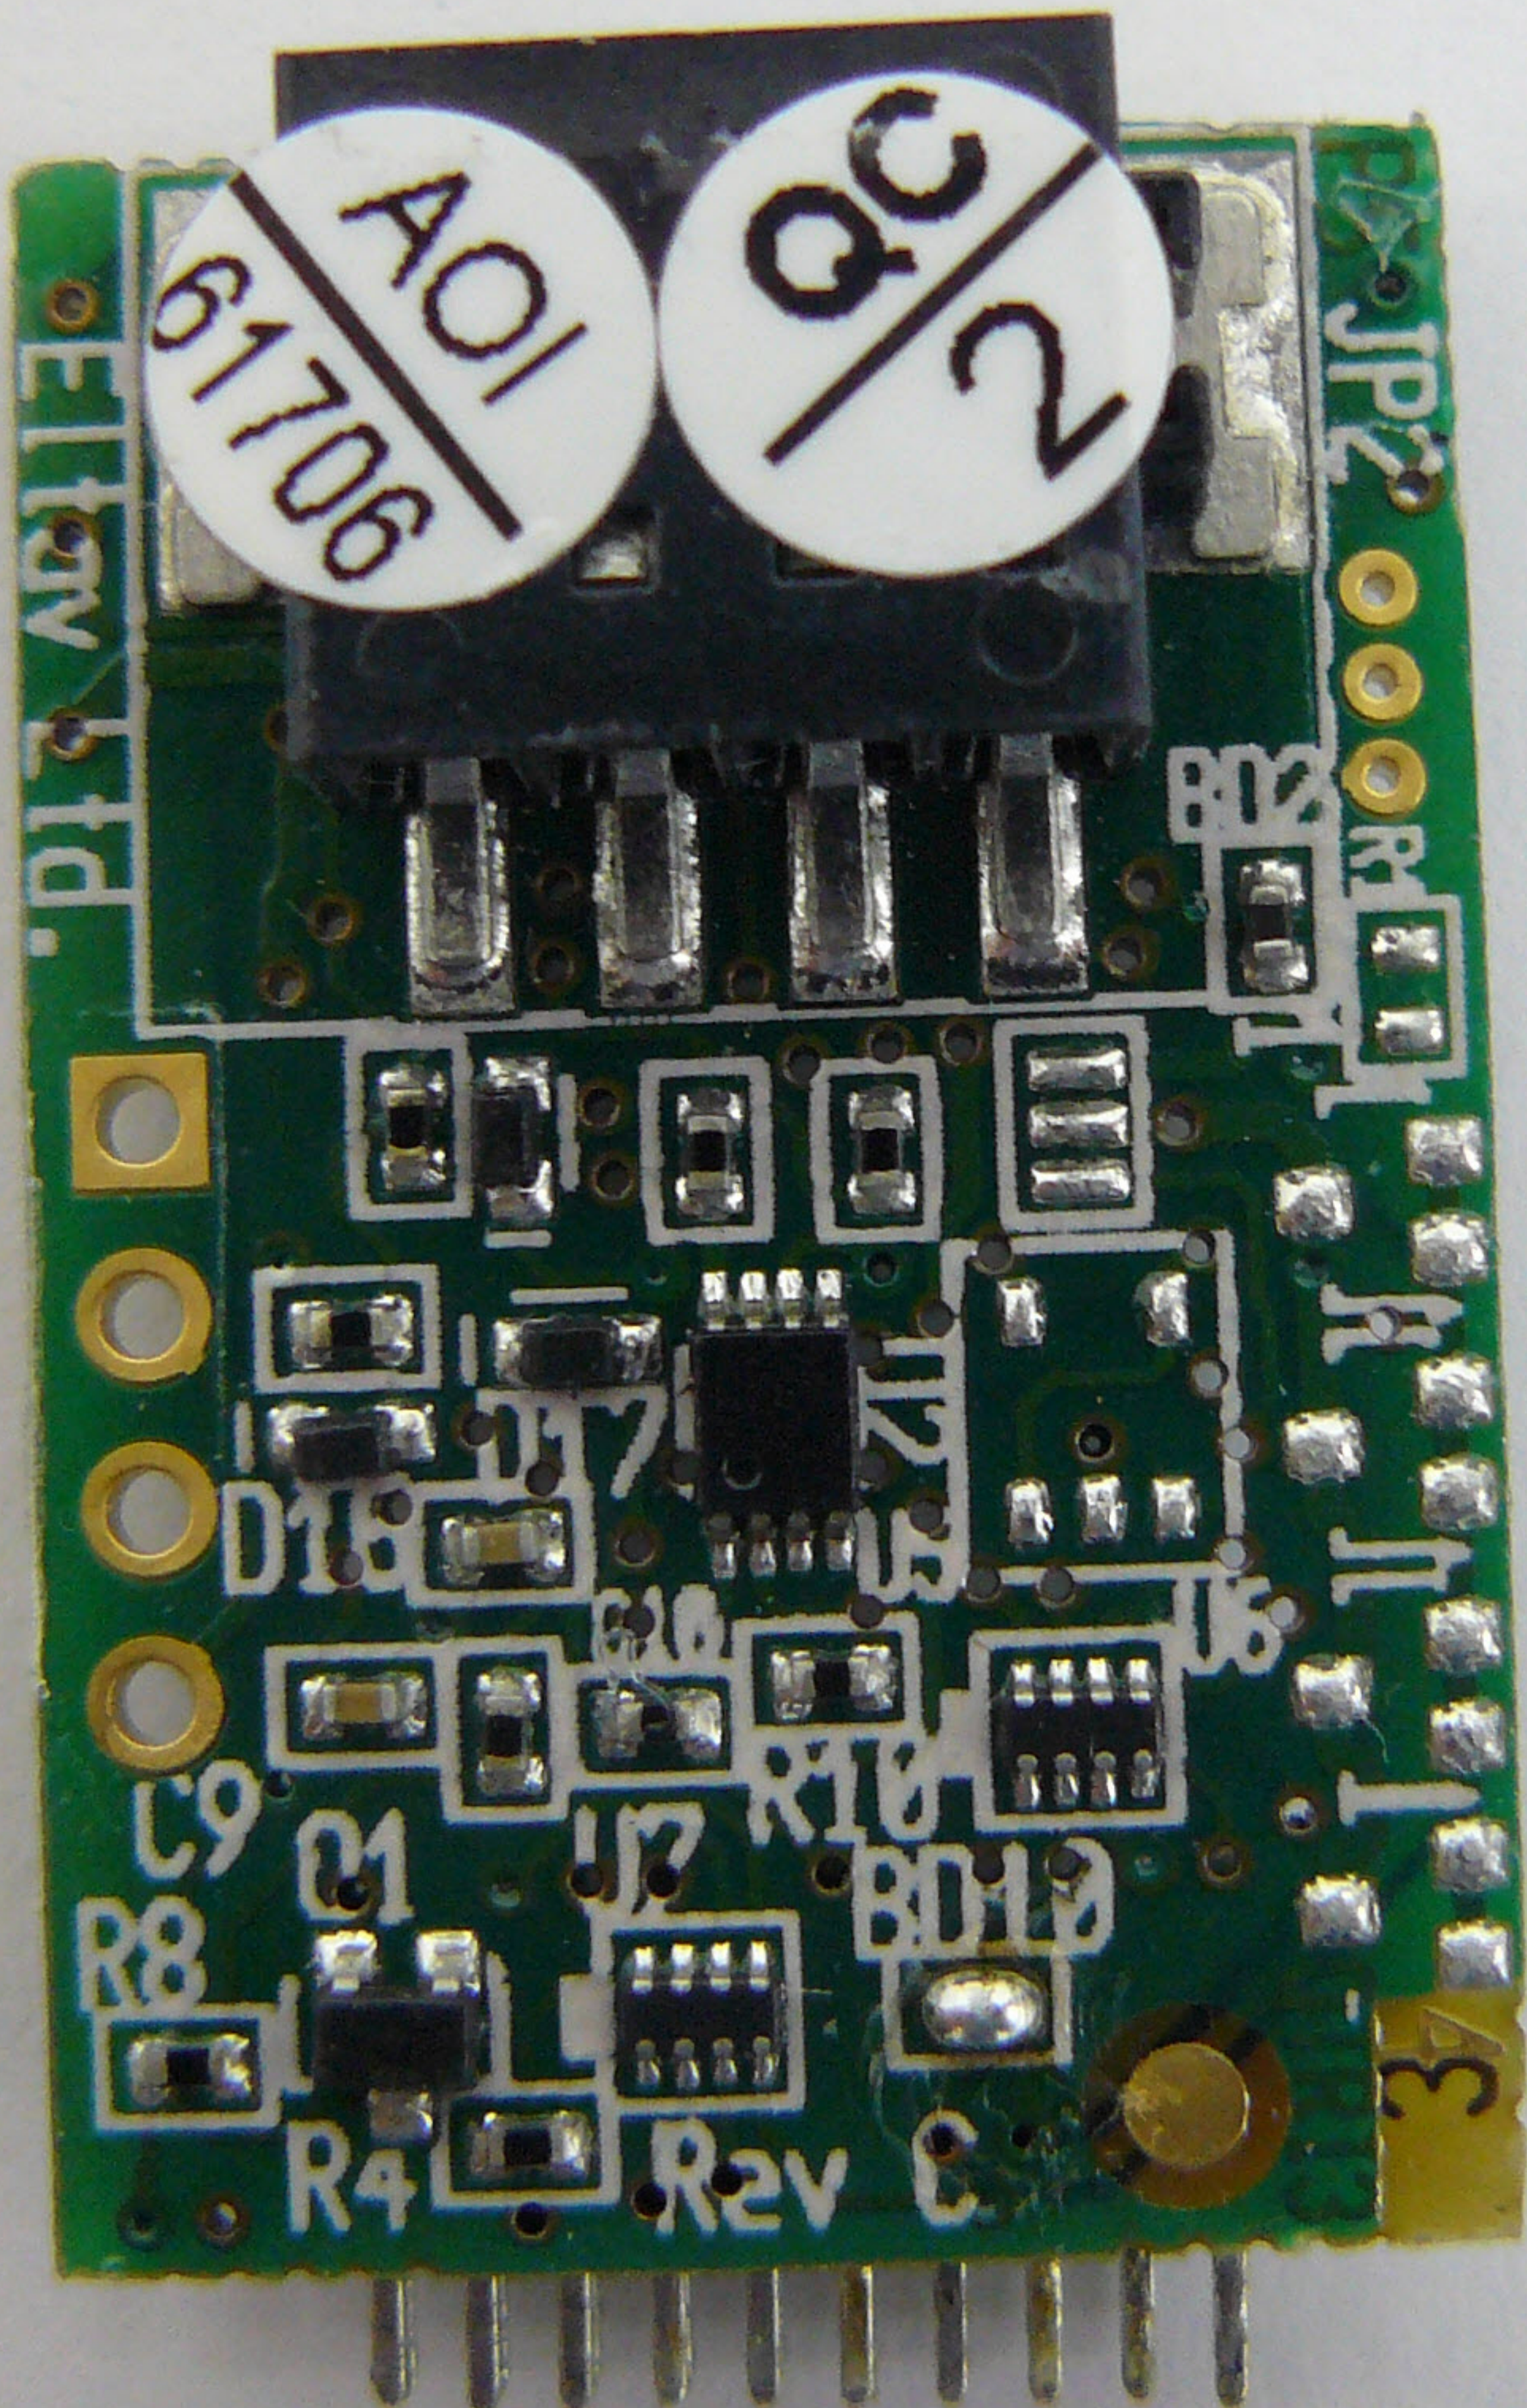


Eltav WKVD/QTR - I/O PS







Eltav WKVD/QTR - MAIN CS

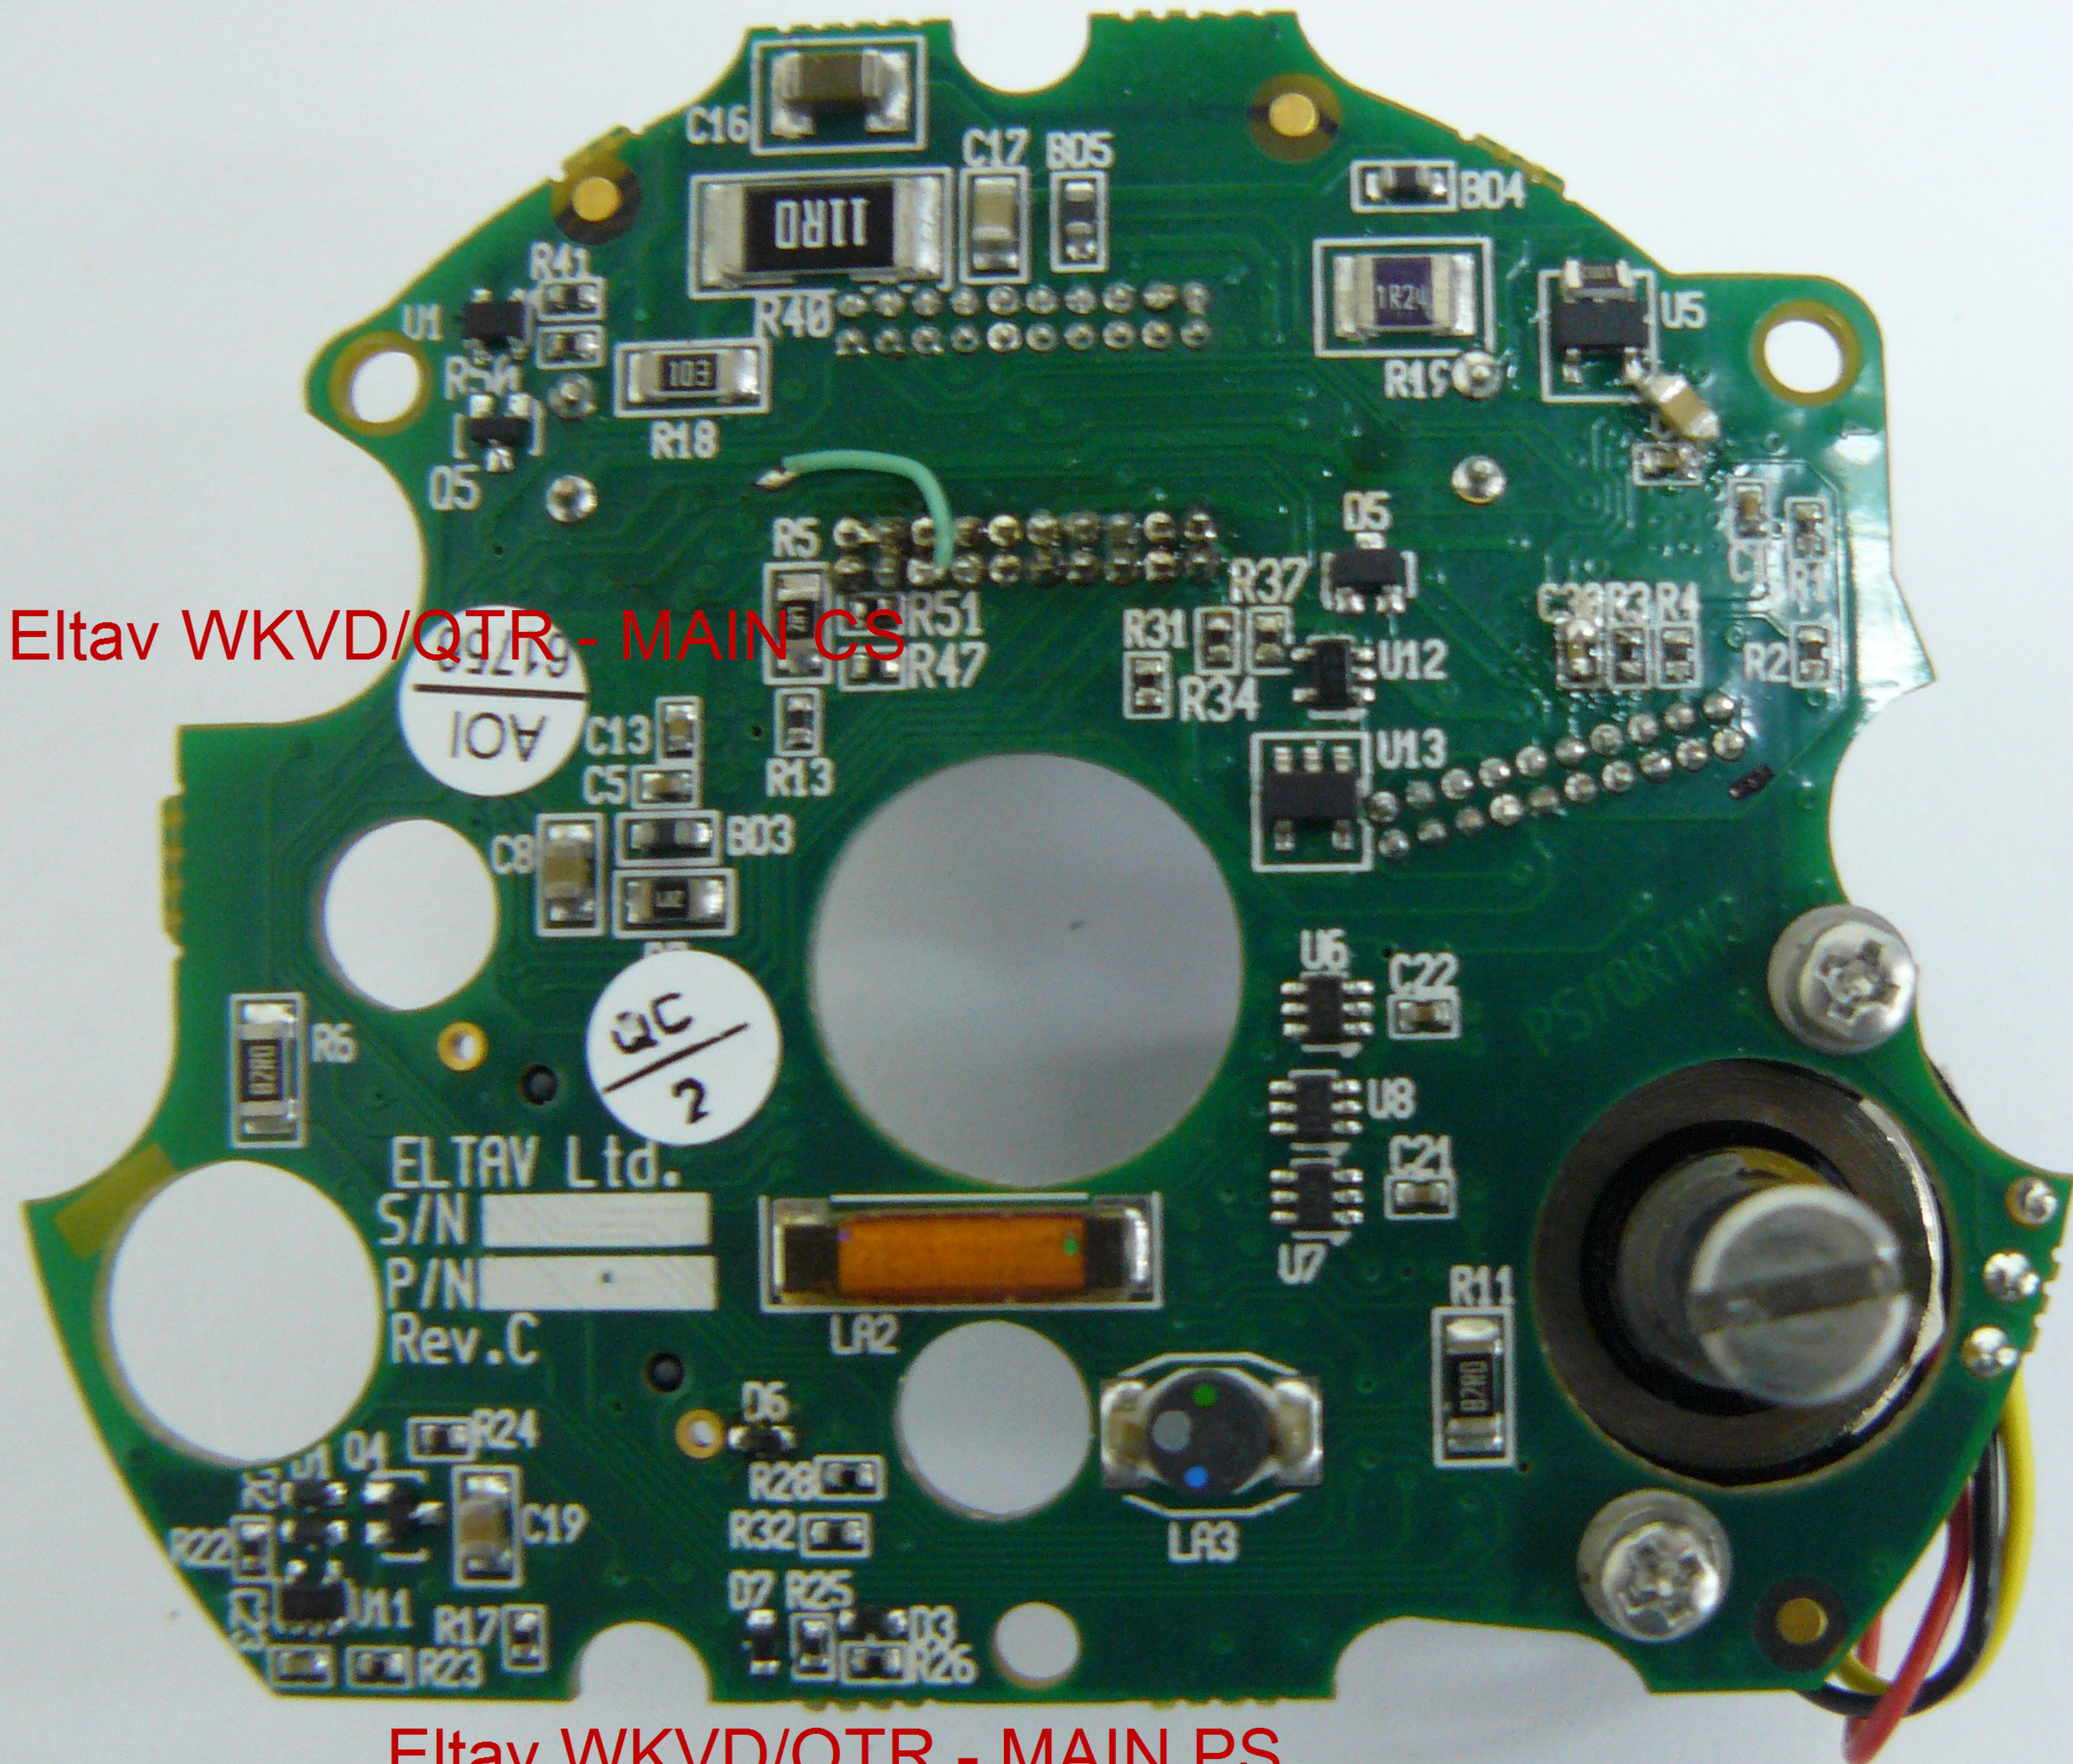

Eltav WKVD/QTR - MAIN PS