

USEER GUIDE

E3-AK remote controller shall match E3-AK receiver.

Function instruction of E3-AK remote controller

To control the receiver installed at Power Grader series. The controller sends out action instructions via E3-AK receiver, to order the electric handspike moving forward or backward, in turn, to make the harrow ascend or descend via relative organ, to meet the requirements of furrowing depth.

Manipulation:

1. In the remote controller's 3-meter working range, Press (but do not release) the UP or Down bottom, to check the action of the harrow. Release the bottom while its position meets your grading requirement.
2. Bottom Up is for lifting the harrow

While the Bottom Down is for lowering

NOTE

- 1 Please change the battery in time
- 2 Using in rain is prohibited
- 3 Keep off from fire and water

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.