

INSERT CARD 1

INSERT 1 /FRONT

INSERT1 /BACK

13,8 mm

8,3 mm



Bolt AC1200

Router
NCM-C1200



nexxtsolutions.com/connectivity

Setup Guide

Guía de Configuración

Package content

Wireless mesh node	(1)
Power adapter	(1)
CAT 6 Ethernet cable	(1)
Quick setup guide	(1)

Contenido del empaque

Nodo de malla inalámbrico	(1)
Adaptador de corriente	(1)
Cable de ethernet CAT 6	(1)
Guía de configuración rápida	(1)

Setup guide

1 Download the **Nexxt Home App** from the App Store or Google Play



Or scan this code with your smartphone:
<https://www.nexxtsolutions.com/Bolt/>



2 Install the Nexxt Home application



3 Scan the code or visit the website to download the manual to complete setup



Guía de configuración

1 Descargue la aplicación móvil **Nexxt Home App** en el App Store o en Google Play



O escanee este código con su teléfono inteligente:
<https://www.nexxtsolutions.com/Bolt/>



2 Instale la aplicación móvil Nexxt Home



3 Escanee el código o descargue el manual para completar la configuración



INSERT CARD 2

INSERT/FRONT

INSERT/BACK

13,8 cm

8,3 cm



Bolt AC1200

 
Router
NCM-C1200

How to connect the main node

Cómo conectar el nodo principal


1 Connect the main node to power and the network cable from the LAN port on the Modem to the WAN port on the node

Conecta el nodo principal a la alimentación eléctrica y el cable de red del puerto LAN del Modem al puerto WAN en el nodo

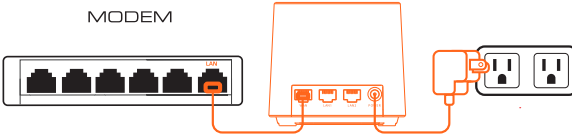

2 Click "Add device"

Haz clic en "Añadir dispositivo"

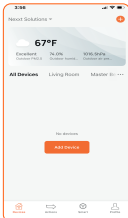

3 Tap the "Smart Router" icon

Selecciona el icono "Smart Router"



4 Follow onscreen instructions

Sigue las instrucciones en pantalla



Bolt AC1200

 
Router
NCM-C1200

How to connect a second node

Cómo conectar un segundo nodo

5 Place the second node at a maximum distance of 32 ft from the main node and connect it to the power supply.

Coloca el segundo nodo a una distancia máxima de 10 m del nodo principal y conéctalo a la alimentación eléctrica.

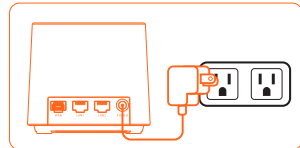


6 Wait approximately 4 minutes until the red light turns solid blue

Espere aproximadamente 4 minutos hasta que la luz roja cambie a color azul sólido



7 At this moment the light indicators on both nodes will be solid blue, meaning they are already connected to each other.

En este momento los indicadores luminosos de ambos nodos estarán en color azul sólido, indicando que ya están conectados entre sí.

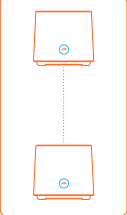

To connect additional nodes please refer to the "Adding an extra node" section in the user manual

Para conectar nodos adicionales por favor refiérase a la sección "Cómo agregar un nodo adicional" en el manual del usuario

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.