




You selected IC7800 addr.6AH and 19200 Bd. Press **SET** to write to the memory, then press **EXIT** to go back to the SETTINGS possibilities.

“SET OTHER ADDRESS” means that you must add here a new type of used ICOM TCVR which is not defined in the table (its address plus bitrate in Bd) to have possibility to communicate with it.



Touch **ANTENNA SETTINGS**. First select **ANTENNA SWITCH** (No switch, Standard). Use left or right arrows. If you select some switch, 10 ports for different antennas displays. Generally all of antennas are allowed in every band (green squares). To disable some square select port (up/down), touch **SET** for antenna name and then select band (left/right). Touch **SET**.

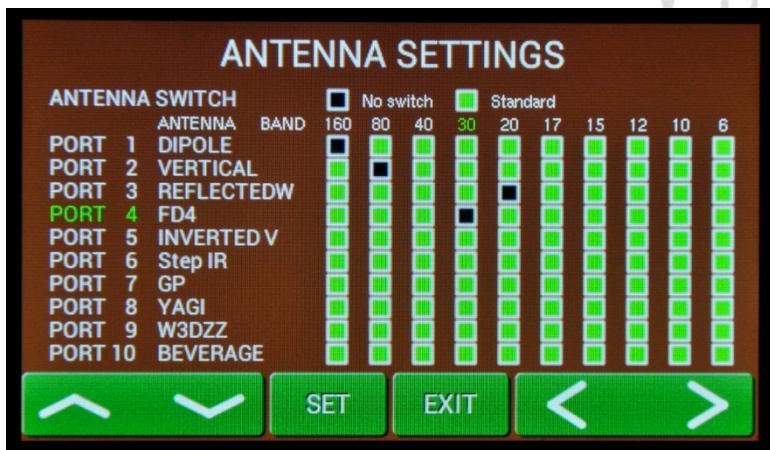

Four types of antenna for four different bands were disabled.

Black square means disabled combination.

Press **EXIT** to go back to **SETTINGS** menu.



BCD code (4 bits) is using for automatic antenna and BPF switching (see Antenna/BPF connector on the Control panel (rear side of the PA)).



Next **SETTINGS** position is for display parameters. First choose the background color. Scroll on it and choose the color (left/right).

Press **SAVE** twice, then scroll to **OWN CALL**.



Press **SET** for your callsign edit. The keyboard displays.



Type your callsign and press ENT.