

Menu display allows to go deeper to the SETTINGS mode, MEASuring mode or to SERVICE mode.

Press **SETTING** button.



We are in the settings mode again, but with little difference in **INFO** part.

Scroll to **INFO** and press **SET**.



New button is visible – **SET Umain**. Press it.




Type proper value of the primary voltage and press **ENT**.


Press **EXIT** twice to go back to the **Menu display**.



This means not programmable setting of the primary voltage. It is just information for the processor, which protects the permitted limits (up or down) for a given value of the primary voltage (protection circuit).

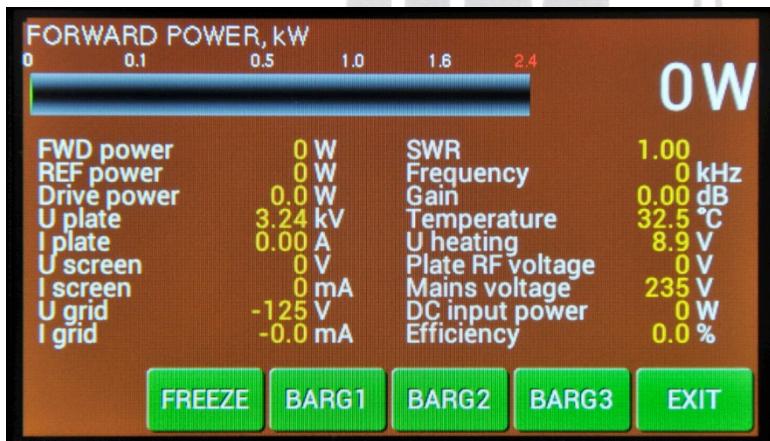

MEAS pressing shows this screen. Instantaneous values of the basic parameters are displayed. You can **FREEZE** the screen and measure **AGAIN**.

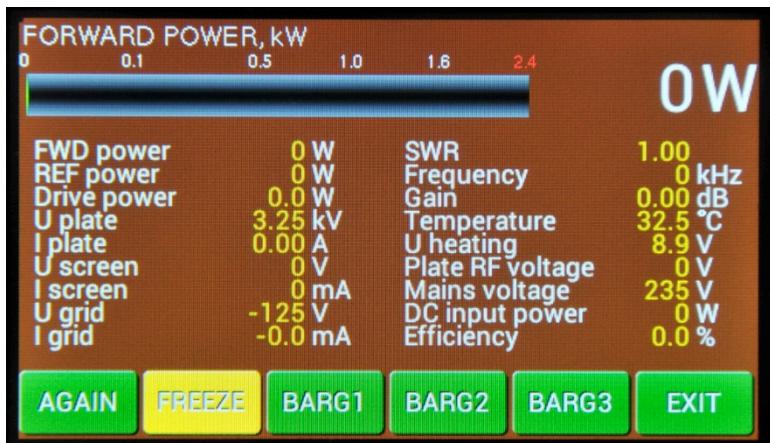

Three different bar graphs can be defined using **BARG1**, **BARG2** or **BARG3** button.

Press **BARG1**.