


# User Manual

Package contents  
Wireless Laser Mouse  
USB Nano receiver  
2 AAA alkaline batteries  
User manual

## Installing the battery (Diagram 1)

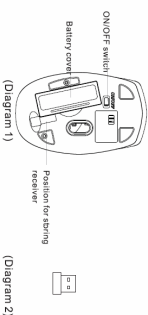


Whenever new batteries are installed, make sure that they are fresh 1.5V AAA batteries.  
A) Remove the battery cover.  
B) Insert two AAA batteries into the battery compartment, make sure to properly orient the positive (+) and negative (-) ends as specified by the marks in the battery compartment. Replace the battery cover and make sure it is locked.  
C) Switch on the mouse, the LED in bottom of mouse will blink.

## Installing the receiver (Diagram 2)

The codes of receiver and mouse were successfully connected in factory. User can directly use the complete set of products, no worry about the code connecting.  
A) Insert the receiver into USB port of PC, the computer system will automatically detect it and prepare it for full operation.  
B) The mouse may use then.  
If the user wrongly operates, please redo the above operating procedures.  
ON/OFF switch (Diagram 1)  
Without using the mouse, user may turn off it by ON/OFF switch for saving battery power.

## Description of keys and DPI adjusting

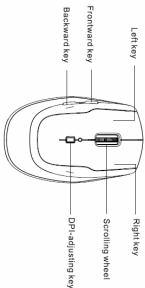

Adjusting "DPI-adjusting key", the resolution of mouse can be switched between 800DPI and 1600DPI in turn. That LED light in "DPI-adjusting key" blinks slowly indicates 800DPI and fast 1600DPI.  
B) Backward and Forward keys for your easily navigating forward and backward on the internet.

## The function description for mouse shift key

The original function for DPI shift key can be changed to play/pause key by pressing the DPI shift key for 3 seconds in such condition. It is play key for the first time; it will change to pause key if you press twice next programme by forward key, last programme by back button. Pressing the DPI shift key for 3 seconds, the function will be returned to original function.

## Low-voltage alarming function

When batteries have been used for some time and discover the LED light in "DPI-adjusting key" blinks automatically, which reminds you that batteries' voltage is becoming low, suggested you replace the batteries with new ones.

## System requirements

Windows ME, 2000, XP or Vista, 7

## Specifications and functions

1. Super mini receiver can be stored at bottom for easy carrying
2. 2.4GHz, freely operating within 10 meters
3. Wireless carrier frequency: 2,405MHz-2,476 MHz
4. 16 wireless working channels, automatic frequency jumping
5. On/Off key
6. Low-voltage alarming function
7. Resolution: 800DPI and 1600DPI adjustable

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(1) 15.21 statement:  
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.