

Tournament Bridge Scorer


Model number: TBS

Instruction Manual

Jannersten Forlag AB

Inserting Batteries

Your Tournament Bridge Scorer uses 3 pieces of AA batteries. For replacing used batteries, slide open the battery door and insert batteries following the “+ / -“ polarity indicators. Do not mix used batteries with new batteries. Close the battery door securely.

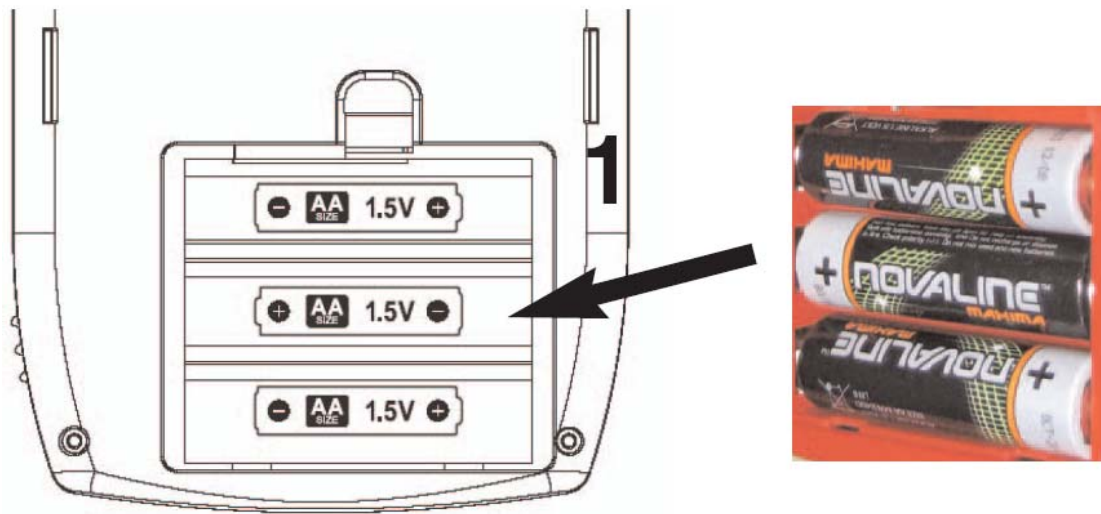

Turn on / Turn off the unit

To turn on the unit, simply press the [ON] key once. The unit will revert to sleep mode automatically after not receiving an input for 1minute (You can also select the time interval of sleep mode from 15seconds to 10mins). Alternatively, you can press the [ON] key again to go to the sleep mode immediately.

The unit will resume the current screen when you turn it on later by pressing the [ON] key.



Stylus Pen

The STYLUS is located on the right-hand side of the unit. To access, pull up the ridged part of the STYLUS. Only the provided STYLUS is to be used on the touch screen keyboard.



Stack the unit after use

Your Tournament Bridge Scorer was designed to be stacked after use for earlier storage.

FCC STATEMENT:

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.