

User manual

INSTRUCTIONS FOR RADIO CONTROL OPERATOR SINGLE BUTTON ENTRY TRANSMITTER

MODEL NO.: U220S5-1

Read the following instructions thoroughly before using transmitter.


Match the transmitter to receiver

- Press and hold a button on transmitter for transmission.
- Then press the Learn button on your receiver.The adjacent indicator light will flash.Release the button of transmitter.The receiver will now operate when you press the button of transmitter.

Detail for add/remove a transmitter,please check with the instruction of your receiver.

NOTE:If the red light on the transmitter is dim or flickers when the transmitter button is pushed,the transmitter battery may be weak. Replace when necessary with a CR2032 3 Volt battery.

Remove the access cover from the front of the transmitter by sliding the cover for battery replacement (Figure C).

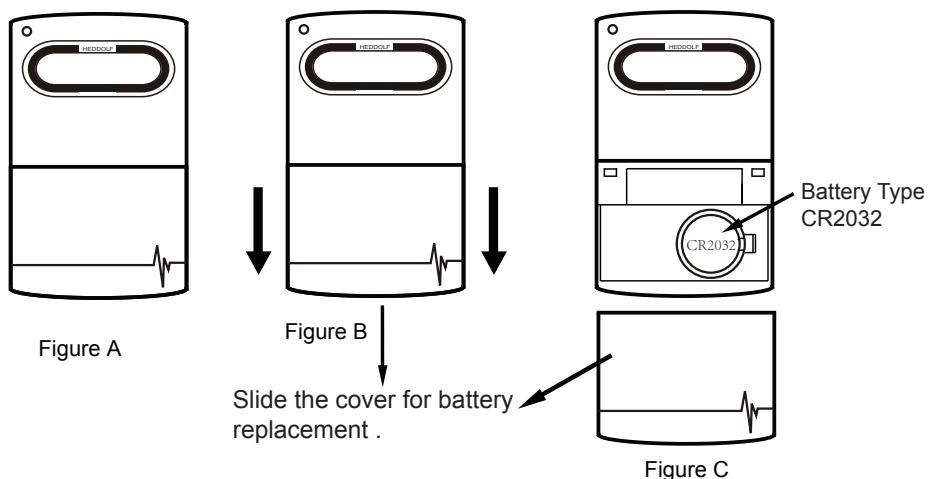

WARNING:The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.Such modifications could void the user's authority to operate the equipment.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

User manual

INSTRUCTIONS FOR RADIO CONTROL OPERATOR TWO BUTTON ENTRY TRANSMITTER

MODEL NO.: U220S5-2

Read the following instructions thoroughly before using transmitter.

Match the transmitter to receiver.


-Press and hold a button on transmitter for transmission.

-Then press the Learn button on your receiver. The adjacent indicator light will flash. Release the button of transmitter. The receiver will now operate when you press the button of transmitter.

Detail for add/remove a transmitter,please check with the instruction of your receiver.

NOTE:If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak. Replace when necessary with a CR2032 3 Volt battery.

Remove the access cover from the front of the transmitter by sliding the cover for battery replacement (Figure C).

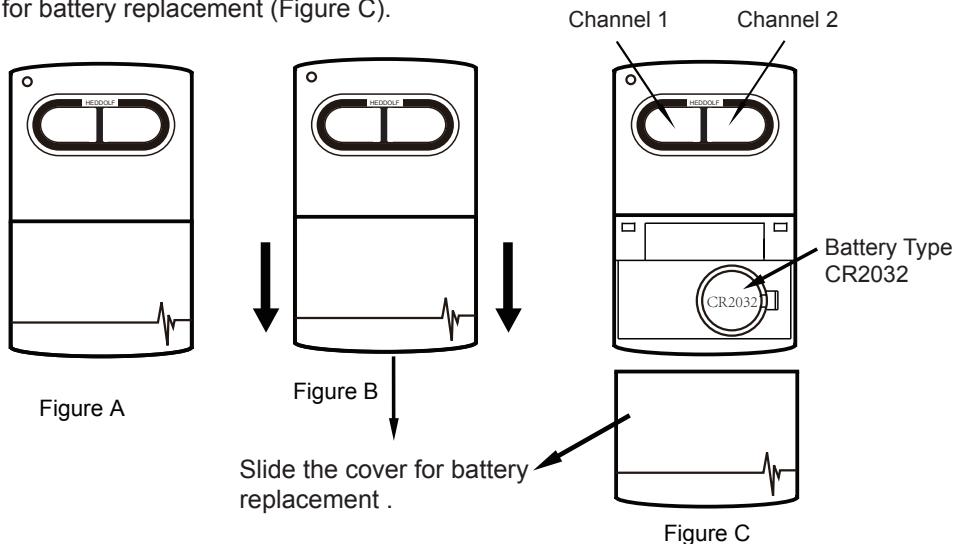

WARNING:The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

User manual

INSTRUCTIONS FOR RADIO CONTROL OPERATOR THREE BUTTON ENTRY TRANSMITTER

MODEL NO.: U220S5-3

Read the following instructions thoroughly before using transmitter.


Match the transmitter to receiver

- Press and hold a button on transmitter for transmission.
- Then press the Learn button on your receiver. The adjacent indicator light will flash. Release the button of transmitter. The receiver will now operate when you press the button of transmitter.

Detail for add/remove a transmitter,please check with the instruction of your receiver.

NOTE: If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak. Replace when necessary with a CR2032 3 Volt battery.

Remove the access cover from the front of the transmitter by sliding the cover for battery replacement (Figure C).

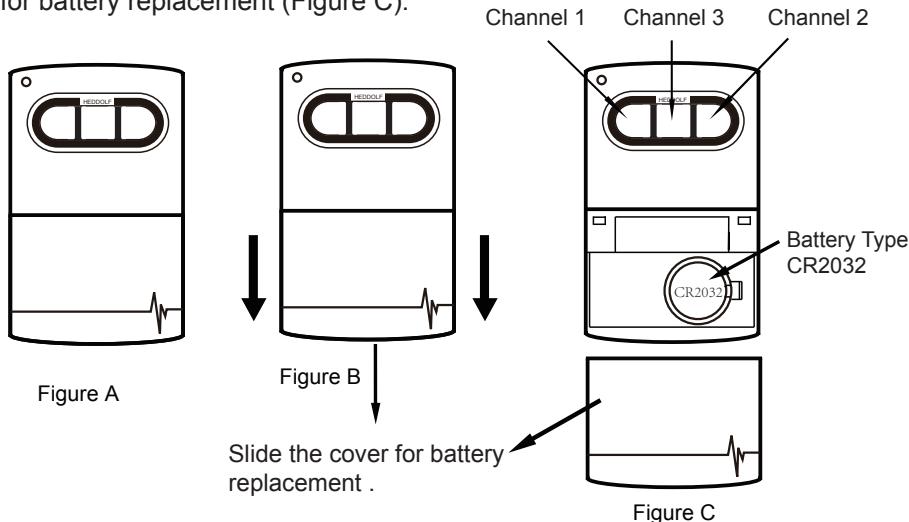

WARNING: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.