

FCC Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

EN: Ensure that the Alkaline battery (A23) is installed prior to operating the remote.

ES: Asegúrese de que la batería alcalina (A23) esté instalada antes de utilizar el mando a distancia.

FR: Assurez-vous que la pile alcaline (A23) est installée avant d'utiliser la télécommande.

DE: Stellen Sie sicher, dass die Alkalibatterie (A23) eingelegt ist, bevor Sie die Fernbedienung in Betrieb nehmen.


IT: Prima di utilizzare il telecomando, assicurarsi che la batteria alcalina (A23) sia inserita correttamente.

NL: Zorg ervoor dat de alkaline batterij (A23) geïnstalleerd is voordat u de afstandsbediening gebruikt.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

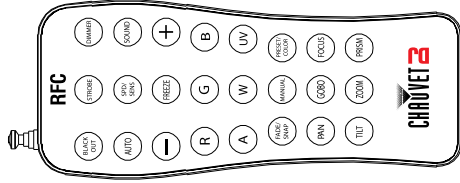

Blackout	Blackout
Strobe	Strobe mode (+ and - keys can be used to select the stroboscopic speed)
Dimmer	brightness adjustment (can be adjusted by +, -)
AUTO	Self walking mode P 1 P14 (Program can be selected by +, -)
Spd/Sens	works in self propelled and voice activated modes (self propelled speed or voice activated sensitivity can be controlled by + and - keys)
Sound	Voice control mode
R, G, B, A, W, UV	corresponding Par lights R, G, B, A, W, UV (brightness can be adjusted by +, - keys)
Fade/snap	Fade /snap
Manual	Manual dimming mode
Freeze	programme (match key)
Preset	Static color mode (Press to switch a color at a time)
TILT	vStatic color mode (Press to switch a color at a time)
Pan	x axis adjustment
Focus	Adjust the focal length
gobo	pattern plate adjustment
prism	prism adjustment