

ATTACHMENT H.

- Hardware Manual -

Table of Contents

■ Safety notes for handling the PND	2
■ Before using	5
1) Scope of delivery	5
2) Device overview	6
3) Switching ON/OFF	7
4) Initial startup of the PND	8
■ Menus	9
1) Main Menu	9
2) BLUETOOTH	16
3) Entertainment	25
Audio Player	26
Picture Viewer	29
Video Player	31
4) Settings	32
■ Troubleshooting Table	34
■ Technical Data	35
■ Warranty	36

■ Safety notes for handling the PND

For your personal benefit, carefully read the following safety notes and warnings before operating your PND for the first time

Caution:

Do not operate the PND while driving to protect yourself and others against accidents!

View the display only if you are in a safe travel situation!

The street routing and traffic signs have priority over the instructions of the navigation system.

Follow the instruction of the PND only if circumstances and traffic regulations allow! PND will bring you to your destination even if you have to deviate from the planned route.

Notes:

- Routes are best planned before starting your trip. If you want to enter a new route while on the road, head for the next parking or rest area.
- If you did not understand the voice information or if you are not sure what to do at the next intersection, use the map or arrow display for quick orientation.

Caution:

Protect the device against moisture since it is not waterproof and not splash proof.

Do not open or modify the device. Do not expose the device to extreme temperatures (e.g. in a parked car with direct sun exposure) to avoid condensation or overheating inside the device

Otherwise, the device or the battery could be deformed, ignite or explode.

Notes:

- Remove the power supply connector of the PND if you switch off the engine for more than 3 days since the GPS receiver constantly uses electricity and could discharge the vehicle battery.
- Do not unplug the connector by pulling on the wire. The wire could be damaged.
- Do not use harsh solvents to clean the device; use only a damp, lint-free cloth.

Use as directed

The device is designed for mobile use in vehicles.

The device can also be used by pedestrians.

Special information about the navigation of trucks, buses and campers, such as altitude and width limitations or maximum permissible road load, is **not** included in the navigation data!

Navigation off the roads (off-road) is only possible to a limited extent with the PND.

■ Safety notes for handling the PND

GPS Reception

GPS (Global Positioning System) is a satellite-based system that supports geographical and time-related information all around the world. The system is operated and controlled by the United States of America. The USA is also responsible for the availability and accuracy of this system. All changes to the GPS availability and accuracy, as well as other factors from the surrounding environment can influence the operation of the navigation system. The supplier of this system does not accept any liability whatsoever for the availability and accuracy of GPS data.

When you switch on the PND for the first time, it can take several minutes for the GPS reception to reach a sufficient level and to determine your current position.

Always hold the navigation system vertically.

If you are using the navigation system in an inner city-area, it may take longer to refresh the map details.

■ Safety notes for handling the PND

WEEE Compliance



All electronical and electronic equipment must be disposed of separately from general household waste using the sites designed by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a requirement for the re-use and recycling of used electrical and electronic equipment for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your re-use collection service or the dealer you purchased the product from. In many countries it is forbidden to dispose of flat batteries and rechargeable batteries with normal household waste. Please find out the regulations that apply in your area regarding the disposal of used batteries/rechargeable batteries. Please also dispose of damaged batteries or batteries that are past their expiry date in a safe and suitable way.

Use the return and collection systems available to dispose of the old device.

Do not discard any batteries in the household trash; instead, return them to the corresponding collection sites.

■ Before using

Scope of delivery

The scope of delivery contains the following components:

① Suction Cup Holder



② Cigar Power charger



③ Dummy Cradle



④ Dashboard Plate



⑤ AC/DC Adapter



⑥ Pouch



⑦ Earphone



⑧ Manual



Note:

We recommend using original accessories.

■ Before using

Device overview



■ Before using

Switching on/off

Initial switch-on

During the initial switch-on of the PND, the software is loaded into the system. For this reason, the switch-on process may last up to one minute. The initial destination guidance also requires a longer time than usual.

Switch-on

* To switch on the PND, slide and hold the switch to 'power' position more than 3 seconds.

The PND is switched on. (If the device is in the sleep mode, the previously active display is shown again).

Switch-off

* Slide and hold the switch for longer than 3 seconds to switch off the device.

The PND will be switched off.

Back to main menu

* To go back to the main menu, while you are in other sub-menus or using other applications, touch the menu key on the window touch screen.

The main menu will be shown.

Reset Button

* When the system is not responding to touch the screen or any keys, please push the reset switch on bottom side of the device.

■ Before using

Initial startup of the PND

Protective film and covers

Prior to the initial use, remove the protective film from the display.

The battery

The built-in battery allows for operating the PND battery-operated for up to 3.5 hours. The exact usage time is dependent upon the type of operation.

The charge state indicator of the battery is located at the top in the centre of the display in the map view. The number of bright block segments on the battery symbol indicates the charge state of the battery (0 to 3 segments). The symbols have the following meaning:



- The device is supplied by an external power source.



- The device is supplied by its internal battery. The charge state of the battery is sufficient.



- The device is supplied by its internal battery. The charge state of the battery is low.
If the charge state of the battery is very low, a warning message is displayed.

- To charge the battery, attach the supplied battery charger or the charger cable for the cigarette lighter to the charging socket.

Notes:

* Use only original chargers for operating and charging the battery.

* The battery is equipped with a protection to prevent overheating. For this reason, the battery stops charging at an ambient temperature above 45 °C.

■ Menu

After switching on the Navigation System, you will see the main menu as below.

Main Menu



Navigation program

To start navigation software, click this icon, then designed navigation software will be started.



BLUETOOTH

With this BLUETOOTH feature, You can talk, listen music through this Navigation system.



Entertainment

You can play audio and video files and enjoy various games.



Setting

To set display, sound, volume and change menu language.



SafNAVI

Cutting edge technology LDWS (Line Detect Warning System) can help you to stay in the lane.



Also, additional feature BLACKBOX record video images in certain situation like accident.

* Camera module sold separately.

BLUETOOTH

Bluetooth function

Bluetooth is a wireless radio connection over a short distance. Hence, a Bluetooth-capable cell phone allows using the navigation device as a hands-free system. In addition, music tracks stored on the cell phone can be played and navigated.

Prerequisite:

Compatible Bluetooth cell phone.

Bluetooth function and cell phone visibility are activated.

Note:

The Bluetooth connection can be established only to one cell phone. If more registered cell phones are available, the Bluetooth connection is established to the one that was registered last.

BLUETOOTH

Starting the Bluetooth application

Touch the Bluetooth symbol in the main menu.

The Bluetooth Menu will be displayed Also the Bluetooth function is being activated.



For the Bluetooth connection, the device must be registered with the cell phone.

Registering the devices

Registering is the first contact between an unknown cell phone and the navigation device. The devices "become acquainted". When you start the Bluetooth application for the first time, you have to search and paired with your cell phone.

BLUETOOTH

Registering the devices

Registering is the first contact between an unknown cell phone and the navigation device. The devices "become acquainted". When you start the Bluetooth application for the first time, the query "Bluetooth is not connected. Do you want to connect?" appears.

- Touch the **Yes** button to register the cell phone.
- Touch the **Stop** button to end the search for Bluetooth-capable devices.
- Touch the cell phone in the list to register it.
- Touch the **Connect** button.
A PIN query is displayed.
- Enter the PIN "0000" in your cell phone.
The devices are registered and a Bluetooth connection is established.
You have the following options:

Using the hands-free system ("Calling")

Using audio transmission if your cell phone supports this function with the device ("Audio transmission")

Notes:

Every cell phone uses different ways to register and establish a Bluetooth connection.

For this purpose, please read the instructions of your cell phone.

After you switched off the device or physically separated the cell phone and the device, the Bluetooth connection must be re-established.
(Ch. "Performing Bluetooth settings", "Paired devices")



BLUETOOTH

Calling

If a Bluetooth connection exists, you can use the navigation device with the cell phone as hands-free system.

Prerequisite:

Bluetooth connection to cell phone.

Touch the **Call** symbol in the Bluetooth Menu.

The Call menu is displayed.

Making a call

- Enter a phone number of your choice via the keyboard.
- Touch the **Send** button.
- The call is made.
- Touch the **Cancel** button to end the call.



During the phone call, you have the option of redirecting the phone call to the cell phone:

- Touch the **Transfer** button.

Note:


The phone numbers dialed are stored and displayed in the Call menu next to the keyboard.

Selecting stored phone numbers

- Touch the phone number in the list.
- Touch the **Send** button.

Deleting stored phone numbers

- Touch the phone number in the list.
- Touch the Options button.
- Touch the **Delete** symbol to delete the entry.
- or -
- Touch the **Delete all** symbol to delete all entries.

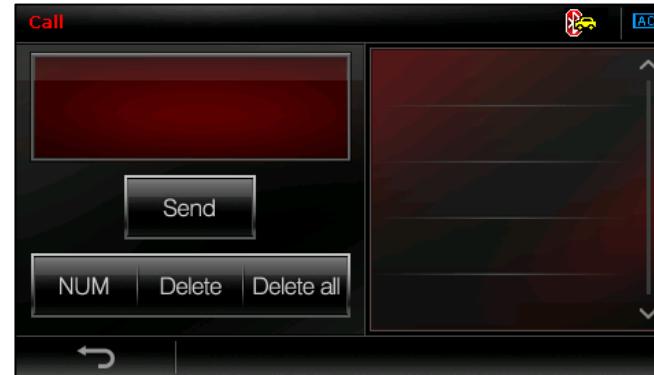

BLUETOOTH

Answering or rejecting a call

If a call comes in, the "Incoming Call" message and the phone number of the caller are displayed:

- Touch the **Yes** button to answer the call.
- Touch the **No** button to end a call or to reject a call.



Using the phone book

If you loaded the phone book from your cell phone, you can use the phone numbers with the navigation device.

- Touch the **Phonebook** symbol in the Bluetooth Menu.
- The Phonebook menu is displayed.
- Touch the phone number in the list.
- Touch the **Options** button.
- Touch the symbol to place the call.
- Touch the symbol to delete the entry.

- or -

- Touch the symbol to delete all entries.

Audio transmission

If a Bluetooth connection exists, you can use the navigation device to listen to music that is stored on your cell phone.

Prerequisite:

Your cell phone supports this function.

Note:

Every cell phone supports the audio transmission in a different way. For this purpose, please read the instructions of your cell phone.

- Touch the **Music Player** symbol in the Bluetooth Menu.
- The Music Player menu is displayed.
- Touch the **►** button to start the playback.
- Press the **VOL -** or **VOL +** button to adjust the volume.



Note:

The maximum volume depends on the adjusted volume in the cell phone.

- Touch the **►** button to play the next track.
- Touch the **◀** button repeatedly to play the current or the previous track.
- Touch the **■** button to end the playback.

BLUETOOTH

Performing Bluetooth settings

Settings in the *Bluetooth Settings* menu:

- Activating/deactivating the Bluetooth function.
- Switching visibility on/off
- Paired devices
- Search for devices
- Ringtone

The second page of the menu also contains the following settings:

- Establishing the connection automatically
- Resetting Bluetooth
- Automatic call answering
- Loading the phone book

Touch the **Setting** symbol in the Bluetooth Menu. The Bluetooth Settings menu is displayed.

Touch the  button to scroll in this menu.

If you performed changes to the settings:

Touch the  button to exit the menu.

Activating/deactivating the Bluetooth function

Touch the **Bluetooth on/off** symbol to activate (check mark) or deactivate (no check mark) Bluetooth.

Switching visibility on/off

The navigation device can be visible or invisible to other Bluetooth-ready devices.

Touch the **Discoverable** symbol to switch the visibility on (check mark) or off (no check mark).

BLUETOOTH

Paired devices

You can call up the list of already registered cell phones and edit it.

Touch **Paired Devices** the symbol.

The *Paired Devices* menu is displayed.

- Touch a cell phone in the list.
- Touch the **Options** button to display additional functions.

Note:

If you want to pair a cell phone with the device, first unpair an existing Bluetooth connection.

- Touch the **Connect** symbol to establish the Bluetooth connection.
- Touch the **Disconnect** symbol to disconnect the Bluetooth connection.
- Touch the **Rename** symbol to rename the cell phone in the list.

Note:

If you delete a cell phone from the list, it is unpaired. That is, a Bluetooth connection can no longer be established to this cell phone.

- Touch the **Delete** symbol to delete the cell phone from the list.
- Touch the **Delete all** symbol to delete all cell phones.

Search for devices

If you want to pair additional Bluetooth-ready devices, you can start the search.

Note:

You can register up to 10 cell phones. If you register an eleventh one, the oldest cell phone is deleted.

- Touch **Inquiry** the symbol.

The *Inquiring menu* is displayed.

The search for Bluetooth-ready devices starts.

Devices found are listed. If the desired device is listed:

- Touch the **Stop** button to end the search.
- Touch the **Refresh** button to continue the search.
- Touch the cell phone in the list to register it.
- Touch the **Connect** button.

A PIN query is displayed.

- Enter the PIN "0000" in your cell phone.

BLUETOOTH

Ringtone

- Touch the **User Ringtone** symbol.
The *Ring Tone menu is displayed.*
- Touch the desired ringtone.
- Press the **VOL - or VOL + button** to adjust the volume.

Establishing the connection automatically

After switching off the device, the Bluetooth connection can be re-established automatically.

Prerequisite:

- Cell phone is registered ("Search for Bluetooth-ready devices")
- On the second page of the *Bluetooth Settings* menu, touch the symbol to switch on the automatic connection (check mark) or to switch it off (no check mark).

Resetting Bluetooth

If the Bluetooth connection does not work properly, a simple reset may help.

Note:

An existing Bluetooth connection is disconnected with a reset. All registered cell phones are unregistered. The cell phones must then be reregistered with the device.

- Touch the **Reset Bluetooth** symbol on the second page of the *Bluetooth Settings* menu.
A confirmation is displayed.
- Touch the **Yes** button to perform the reset.
- or -
- Touch the **No** button to cancel the procedure.

Automatic call answering

An incoming call can be answered automatically:

- On the second page of the *Bluetooth Settings* menu, *touch the symbol* to switch on automatic answering (check mark) or to switch it off (no check mark).

BLUETOOTH

Loading the phone book

The phone book in your cell phone can be loaded into the navigation device and used with it.

Prerequisite:

Your cell phone supports this function.

Note:

For entries with several phone numbers in the cell phone, the first phone number is transferred to the phone book.

- ▶ Touch the **Get Phonebook** symbol on the second page of the *Bluetooth Settings* menu.
A confirmation is displayed.
- ▶ Touch **Yes** to load the phone book.
- or -
- ▶ Touch **No** to cancel the procedure

Entertainment



- ① Audio Player
- ② Picture Viewer
- ③ Video Player
- ④ Game
 - Sudoku, Freecell, Solitaire, PictureFind, PictureChange

Entertainment

Audio Player



- ① Previous Track
- ② Next Track
- ③ Song Title
- ④ Current played time
- ⑤ Track Duration
- ⑥ Equalizer
- ⑦ Album Art
- ⑧ Option
- ⑨ Stop
- ⑩ Play / Pause
- ⑪ Volume
- ⑫ Fast forward
- ⑬ Rewind

Normal – Classical – Jazz - Rock

⑦ Album Art

Entertainment

Audio Player - Option



- ① MIX – Activate/deactivate random playback order.
- ② Repeat – Turn on/off repeat all track.
- ③ ID3 Tag – Turn on/off display track information
- ④ Browse – Browse audio files in internal and external memory.

Entertainment

Audio Player - Browse



- ① Album – Switch to the list and the album selection.
- ② Artist – Switch to the list and the artist selection.
- ③ Genre – Switch to the list and the genre selection.
- ④ Play list
- ⑤ Browse – Browse audio files in internal and external memory.

Entertainment

Picture viewer



- ① Previous Picture
- ② Next Picture
- ③ File name
- ④ Picture Screen
 - Touch this area for expanding to full screen.
- ⑤ Option
- ⑥ Slide show
- ⑦ Next Folder
- ⑧ Previous Folder

Entertainment


Picture viewer - Option



- ① Slide Time – Set time to display a picture. (5-10-15-20-25 seconds)
- ② Rotation – Rotate a picture. (Left-Right-Auto-No)
- ③ File name – Show picture file name.
- ④ Browse – Browse files in internal and external memory.

Entertainment

Video Player

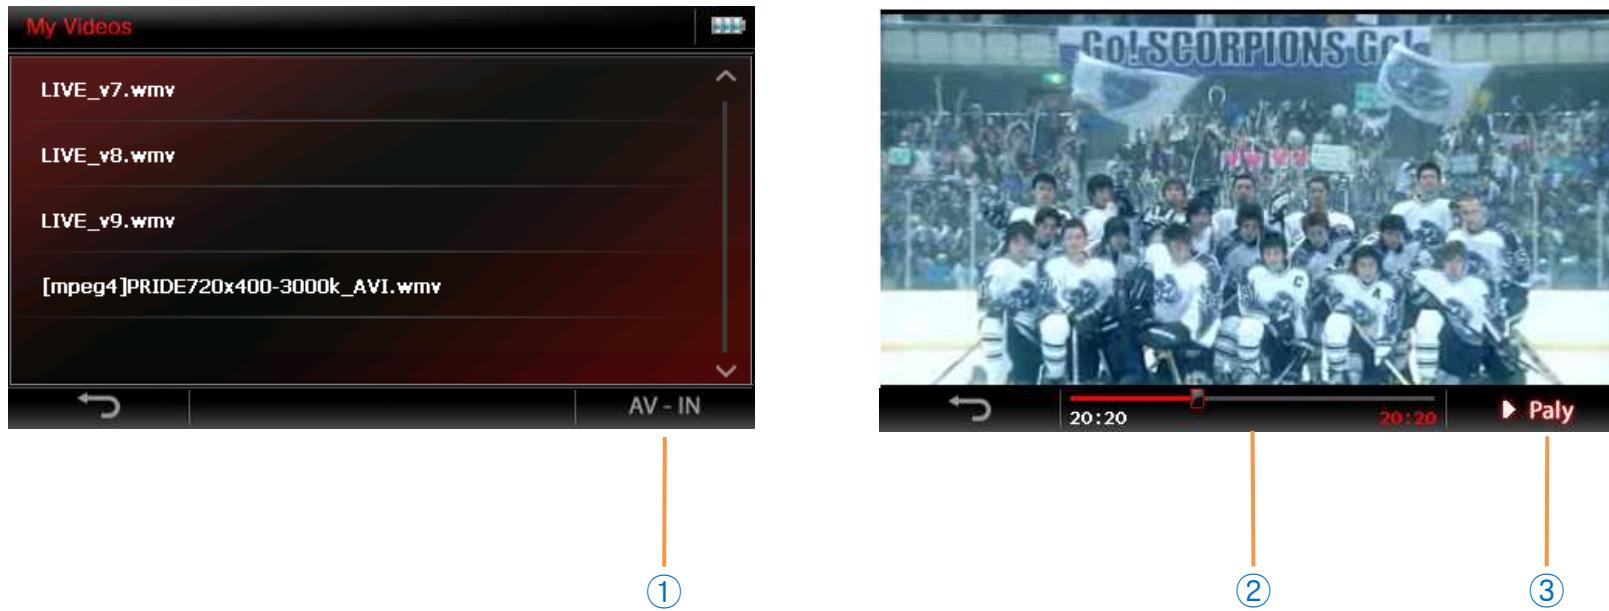


- ① Audio/Video Input – Switch to external A/V input
- ② Navigation Bar
- ③ Play/Pause

Note:

This video player supports encoded files by WMV, Xvid and Mpeg4 format. Otherwise, you should convert your video file to suitable format.

Setting

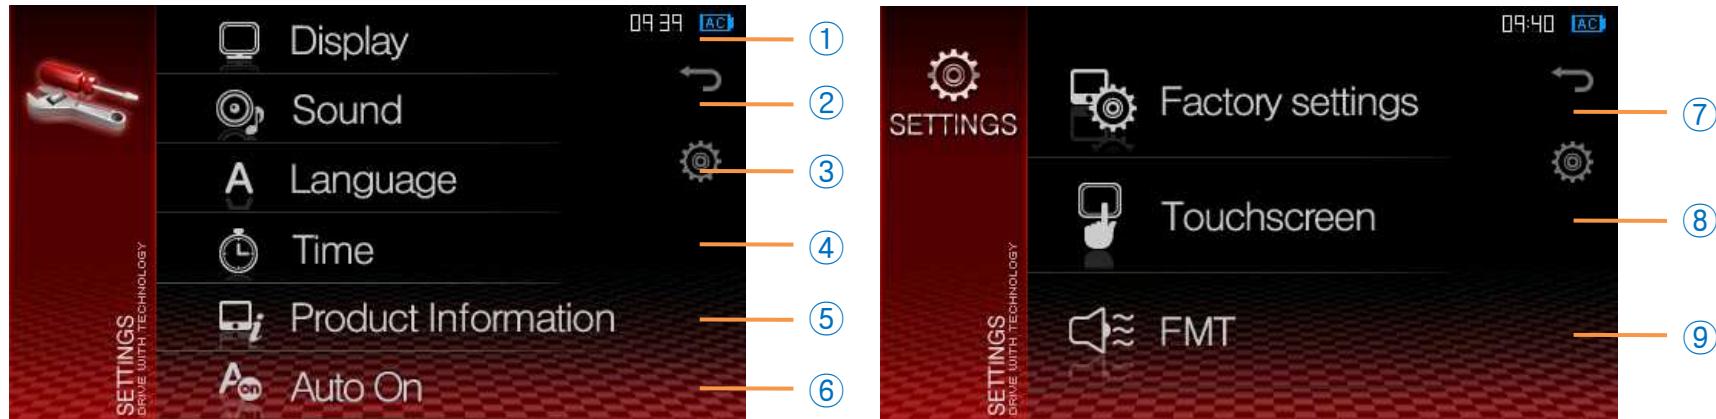

- ① **Display setting**
 - Change Screen Brightness
- ② **Sound setting**
 - Change Volume and turn on/off click sound
- ③ **Language Selection**
 - Change menu languages (Japanese-English)
- ④ **Time setting**
 - Set Time Zone and Display time format (12-24H)
- ⑤ **Product Information**
 - Check Software Version
- ⑥ **Auto On**
 - To set Auto Power ON/OFF, Start Mode and Setup.

- ⑦ **Factory setting**
 - Back to factory Setting
- ⑧ **Touchscreen Calibration**
 - Calibrate Touchscreen
- ⑨ **FM Transmitter**
 - Send out sound through FM frequency

Setting




Auto on

- * Power on/off: To set Auto Power ON/OFF function.
- * Start Mode: Choose the program which you want to start automatically when you turn on the device.
- * Setup: Turn on or off this function.



FMT Setting

You can turn the FMT function on or off and also set the preset the frequencies.

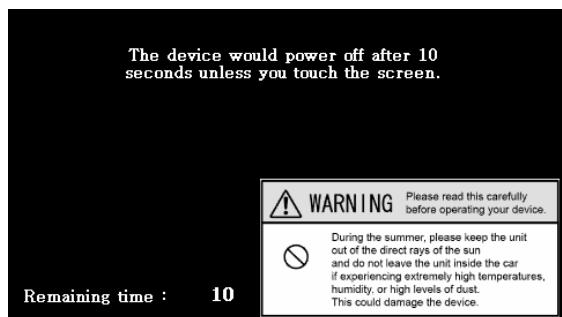

Auto on

- * When out-source power is disconnected, the above pop-up message will be displayed.

If you want to switch to battery mode, please touch the screen.

Factory Setting

When you reset the PND, following saved setting values will be reset.

My music

Mix(Off), Repeat(Off), ID3(On)

My Pictures

Slide Time(5), Rotation(No), File name(Off)

FMT

Reset the preset frequencies

Others

Brightness(10), Volume(8), Key Click(On), Time Zone(GMT +01:00), Time Format(24), Auto Power(On), Auto Mode(Navigation), Auto Setup(Off) , FMT On/Off(Off)

■ Troubleshooting

Problems	Solutions
No GPS signal in vehicle	The GPS signal can be blocked by heated windscreens or tinted windscreens with vacuum-metalized coating. In this case, you will need an external GPS antenna.
No GPS signal	Ensure that the navigation system is placed properly and is not obstructed by other objects.
GPS signal poor	Attempt to adjust the navigation system.
The navigation system no longer responds to finger taps or does not switch off.	If the navigation system stops responding to your entries you can press the reset button on the bottom side of the device. The data you have saved will NOT be lost. Restart the navigation system by pressing the power button.
System fails to start, screen remains blank.	Ensure that the battery is fully charged and/or that the device is connected to a power source. If you are using the DC cable, check that the plug is securely and correctly connected to the cigarette lighter.
The voice alerts for navigation cannot be heard.	Check whether the volume is set to an audible level in the basic setting.
Navigation is not accurate	An inaccuracy level of 50m is within acceptable limits. If an inaccuracy level occurs repeatedly, please contact an authorized specialized dealer.
No sound	The device may be set to mute, or the volume is set too low.

■ Technical Data

TFT display

Active color matrix, 4.3 inch, 480 x 272 pixels

Audio

Built-in loudspeaker: Mono, 8 Ohm, Max 1.4 Wrms

Battery (lithium ion)

Voltage: 3.7 V Capacity: 2200 mAh

Dimensions (W x H x D)

approx. 128 x 79 x 21mm

Weight

approx. 235 g

Charger cable for cigarette lighter

Input voltage: 12 V

Battery charger

Input voltage: 90 V to 240 V, 50/60 Hz Output voltage: 12 V Output current: max. 1 A

GPS receiver

QuickFind Technology on Centrality Processor 20 channel

Multimedia

Video

<i>File Format</i>	<i>File Information</i>	<i>Performance(FPS)</i>
Xvid	720x480_2Mbps	30 FPS
MPEG4+MP3	720x480_2Mbps	30 FPS
WMV7,8	720x480_1Mbps	22 FPS
WMV9SP+WMA	720x480_600Kbps	21 FPS
WMV9MP+WMA	720x480_600Kbps	20 FPS
MPEG2	720x480_5Mbps	25 FPS

Audio

<i>File Format</i>	<i>File Information</i>
MP3	8-48Khz, 32~320Kbps
WMA	8-192Khz, 32~320Kbps
OGG	8-48Khz, 48~320Kbps; Up to Q10

Image

<i>File Format</i>	<i>Support size</i>
JPEG	3648 x 2736
BMP	3200 x 2400
TIF	1280 x 960
GIF (No-animation support)	1600 x 1200

Notes:

* Above specifications are subjected to change without prior notice.

■ FCC INFORMATION

Part 15.105 statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◎ Reorient or relocate the receiving antenna.
- ◎ Increase the separation between the equipment and receiver.
- ◎ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◎ Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operated the equipment under FCC rules.

Part 15.21 statement

"Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment."

FCC RF Radiation Exposure Statement

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

■ Warranty



NAVIGATION &

MOBILE TV