


# MANUAL

We appreciate your purchase of the wireless Door Chime. This manual will give you all the necessary information to rid your home of unwanted pests, safely and effectively. Please read this manual carefully and keep it for future reference.

## Product overview

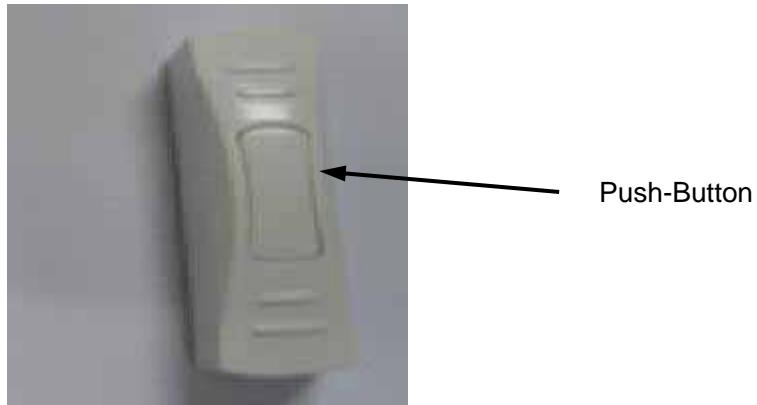

## Operation:

1. Gently press transmitter button to sound chime.
2. When the press transmitter button LED shines Express 1 seconds automatically extinguished, said the success of the Code
3. The Chime LED will always light till end of ringing when press transmitter button call.

**FCC NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference received, including interference that may cause undesired operation.