

Wireless Remote Control User Manual (WXD-189TX)

Thank you for your purchase of Phottix product and viewing this instruction manual, be sure to read and understand this manual and the instruction manual of the camera entirely before use, so that you can use it correctly and expertly. we will spare no effort to add oges to your photograph. you can realize the use method and precautions easily through this manual.

1. Product description:

Cleon is a remote control with radio frequency, it contains SAWF filter, has stable frequency, it need one 23A 12V battery, the standby current is less than 4uA when it doesn't work, it has strong anti-interference ability, the transmitter and receiver adopt smart code setting, frequency pre-set in production. so you can use the remote instantly, it is very easy to operate. it can work within the working distance of 100 meters (without obstacles) with no interference. In order to adapt to the specific shooting environment.

2. Parts of product:



3. Specification:

- 1).battery:one 23A 12V battery
- 2).standby current:4uA
- 3).max. distance:100m(without obstacles)
- 4).frequency:433.92Mhz

4. Operating Instructions:

1).the usage of wireless remote:

- ① When the camera is off, switch the receiver to the ON position, take the 2.5mm cable to connect the 2.5mm socket of receiver and the shutter port of camera, after that, turn on the camera and the receiver;
- ② after the successful code setting(frequency pre-set in production. so you can use the remote instantly), the transmitter can control the receiver, press the release button, then it can control the camera's sets, such as single shot mode, 2 seconds delay, continuous, as well as bulb mode for long exposures.

2)This is the description of the 3-way switch as follows:

- ① S/B: set to On position on receiver and 2S position on transmitter. Half-pressing shutter button on transmitter for focusing (both lights turn green) and fully pressing shutter button to take photo (light turns red). Fully press the button on transmitter for 3 seconds, the camera will have long exposure (The camera operates on B

mode),to end B mode,press fully the shutter button.

②2S:Set to On position on receiver and 2S position on transmitter.Half-pressing shutter button on transmitter for focusing(both lights turn green)and fully pressing shutter button(light turns red).it will take photo in 2 seconds.

③Continuous shooting :Set to On position on receiver and  position on transmitter .Fully press the shutter button one time,the camera will take five photos.If keep pressing shutter button,the camera will continuously take photos until release of hand(Dury the continuous shooting,each process has five photos taken)

Precautions:

- 1)This product belongs to the accessory of electronic product,maybe Because of the external environment factors,there is something wrong with the cameras,but it is a small probability event,do not panic.
- 2)please turn off the receiver,and take out the battery for long time unused.
- 3)Don't drag the cable when it is connected to the camera.
- 4)Don't put it in the high temperature places,such as the Enclosed vehicles and the control panels.
- 5)keep dry:Don't touch the product with wet hands,and it may be malfunction if immersed in or exposed to water.
- 6)Don't use it in the places where the materials can easily get fire and explosion.

FCC ID: XBYWXD189TX

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Contact Tel : (86) 0755-61116103

Contact Fax : (86) 0755-61116101

E-Mail: cybzc@163.com