

GlobalTech China Ltd

Keyfob Instruction manual

Prepare by : Kendy

Date : 8, May, 2009

Technical Index :

Operation Power : 12Vdc/23A battery
Maximum transmitting power : less than 20mW
Working temperature : -10 to 70 degree
RF frequency : 433.92MHz
RF Modulation : ASK Modulation

Instruction :

1 : Function

- 1.1 : The buttons on the Keyfob emitter are On / Off
- 1.2 : Press On, the Keyfob emitter will send the On instruction and the Led will flash one
- 1.2 : Press Off, the Keyfob emitter will send the Off instruction and the Led will flash one

2 : ID code select

Set matching 8 pole House Data Code on Keyfob emitter via Dip switches, ID code setting must be same as the receiver unit

Battery installation :

The power of the Keyfob emitter is use 12V/23A battery, method of replacing battery: open the housing cover then you can see the position of battery. When replace the new battery please ensuring correct polarity is respected . After replace the new battery and then recover the housing, the Keyfob emitter will back to operation status.

FCC Warning Statement

FCC NOTE :

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions :

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.