

AUTOLINE GUIDE

RF REMOTE CONTROLLER

SPECIFICATION

01

Operationg Voltage	3V	Radio Wave type	F10
Operationg Distance	Within 1km	Wireless Standard	Wireless device for wireless minimal output
Operationg Frequency	447.775 MHz or 433.92 MHz	Communication System	1 Way RF



HOW TO SET-UP

02

1. Set installed curtain motor or receiver to Set-Up mode

- Curtain motor : Put 1st terminal of DIP switch to "ON".  The LED of the curtain motor blinks when you do this.
- Receiver : If you release PROG button after pressing it for 2 seconds, the Red LED blinks.

2. Select desired any channel by  button. The number of the desired channel is indicated by LED Light comes 'ON'

3. Press PROG Button on the back of Controller for 2 seconds.

4. If Remote Controller complete Set-Up correctly, the buzzer sound once.

- Curtain Motor : Buzzer sounds once
- RF Receiver : Red LED Light comes 'ON'

5. Turn the 1st terminal of the DIP switch to "OFF". Then, if the LED of the curtain motor lights 'ON'.

The Remote controller Set-Up is finished.



6. Set the rest of the channels in the same way.

- RF Remote Controller retains the last selected channel.
- Each Set-Up channel is memorized for collective control without additional Set-Up Procedure.

HOW TO ERASE SET-UP CHANNEL

03

— Curtain Motor

1. Turn NO.1 dip S/W to 'on', right side, LED in motor blinks.
2. After selecting the applied channel, press PROG button for 2 seconds. If erasing completes correctly, the buzzer sounds two times from motor and controller.

— RF Receiver

1. Red LED Light comes off when you press PROG button for 2 seconds and take off.
2. Press PROG button for 2 seconds after selecting the applied channel.
If erasing completes correctly, the buzzer sounds two times from Romote controller & Red LED L light comes off.
(Caution : If there are remained Set-Up channel in Remote Controller, Red LED Light keeps 'ON')

Model . JSR - 4300

HOW TO COPY REMOTE CONTROLLER

04

1. Select desired Set-Up channel in master Remote Controller and Press  button and PROG button on the back of Master simultaneously until buzzer sounds two times.
2. Select desired channel and press PROG button for 2 seconds until the buzzer sounds once.

HOW TO SET-UP LIMIT

05

1. Press  &  at a time for 2 seconds until the buzzer sounds two times.
2. Press  or  , then automatically curtain motor Set-Up the limit.

OTHER FUNCTIONS

06

MUTE / SOUND

- If press  button for 2 seconds, repeatedly Remote Controller has Mute/Sound functions.

TLTING

- If press  or  button for over 2 seconds.


Percentage Unit Control

- You can control curtain or blind by Percentage Unit
Choose the desired channel with  button and subsequently Press 2~5 times  button as per curtain desired open condition the curtain
(Frequency Pressing  Button : 2times-25%, 3times-50%, 4times-75%, 5times-100%
After selecting channel, if no button controlling in 2 seconds, Controller will be recovered to the beginning)

HOW TO REPLACE BATTERIES

07

1. Release plastic cover removing screws with '+' screw driver.
2. Take off lithium battery (CR 2032) by fingers.
3. Insert new battery in '+' mark upside.
4. Assemble plastic cover in appropriate placing frame edge.

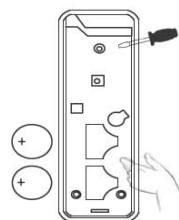

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

If you have further questions, contact A/S center : 82 - 2 - 324 - 1275

www.junshade.com