



USING MEDIA FRAME

VIEWING PHOTOS

SLIDESHOW MODE

- 1 Press **SLIDESHOW** to start a photo slideshow directly.



- 2 Press **STYLE** to change the slideshow effects.

NOTE

♦ Press **STYLE** repeatedly to switch to other slideshow styles. Slideshow styles include Blend, Horizontal Shutter, Vertical Shutter, Splinter, Erase, Random, No Effect, Music + Photos, Polaroid and Stack.

♦ You can also start a photo slideshow using the Mode menu. For details, please refer to the section: [Media Frame Overview > Mode Menu](#).




SINGLE PHOTO MODE

- 1 Press **MODE** to bring up the Mode menu.
- 2 Press or press **MODE** repeatedly to select 'Single Photo', then press **ENTER**.

The last viewed photo will be displayed.

- 3 Press **THUMBNAIL/LIST** to bring up the file browse screen.

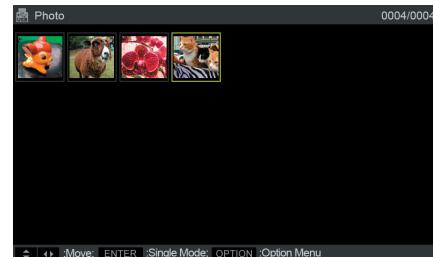

- 4 Press to select a photo you would like to display, then press **ENTER**.
- 5 The photo selected will be displayed.

- Press to switch to the previous or next photo stored in the same folder.

- Press  **ROTATE** to rotate the photo.
- Press  **ZOOM IN** or  **ZOOM OUT** to enlarge the photo or reduce the photo size.
- Press **OPTION** to display available applications.

NOTE

- ♦ If you previously set the 'File Access Level' to 'Specified Folder', only files in the chosen folder will be shown for the Slideshow and the Single Photo modes. For details on how to modify the setting, please refer to the section: [Settings > System Settings > File Access Level](#).
- ♦ If the desired photo you would like to view is not saved in the medium currently in use, you need to change the device setting first. For details, please refer to the section: [Settings > Select Device](#).

WATCHING VIDEOS

- 1 Press **MODE** to bring up the Mode menu.
- 2 Press     or press **MODE** repeatedly to select 'Video', then press **ENTER**.
- 3 Playback of the last watched video file will begin.
- 4 Press     to select a video file you would like to watch, then press **ENTER**.
- 5 Playback will then start.



- Press **OPTION** to display available applications.
- Press  or  to control the volume. display more available applications.

PLAYING MUSIC

- 1 Press **MODE** to bring up the Mode menu.
- 2 Press **▲▼◀▶** or press **MODE** repeatedly to select 'Music', then press **ENTER**.
- 3 Playback of the last played music file will begin.
- 3 Press **Thumbnail/List** to bring up the file browse screen.




- 4 Press **▲▼** to select a music file you would like to play, then press **ENTER**.
- 5 Playback will then start.
- Press **OPTION** to display available applications.
- Press **▲** or **▼** to control the volume.

DISPLAYING CLOCK

- 1 Press **MODE** to bring up the Mode menu.
- 2 Press **▲▼◀▶** or press **MODE** repeatedly to select 'Clock', then press **ENTER**.


A clock of preset style will be displayed.

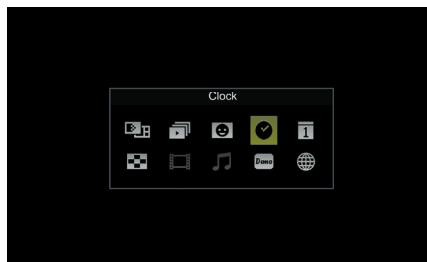

NOTE

- ◆ Press **Style** repeatedly to switch to other clock styles.
- ◆ If there are no photos in the medium currently used, clock styles which feature photo display will not be applicable.
- ◆ You can also switch the Digital Media Frame to clock view by pressing the **Clock/Calendar** button on the remote control.
- ◆ For details on how to modify the time setting, please refer to the section: **Settings > Modify System Settings > Date/Time Settings**.


■ Clock Style 1

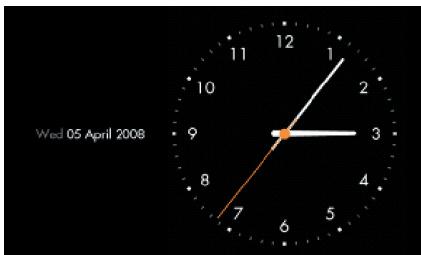

■ Clock Style 2



■ Clock Style 3

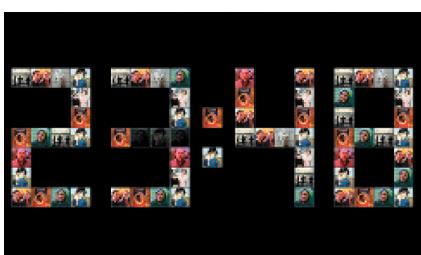


DISPLAYING CALENDAR

1 Press **MODE** to bring up the Mode menu.

2 Press **▲▼◀▶** or press **MODE** repeatedly to select 'Calendar', then press **ENTER**.

A calendar of preset style will be displayed.

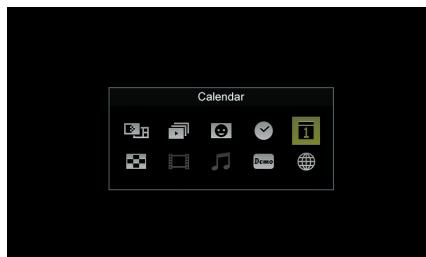

NOTE

♦ Press **STYLE** repeatedly to switch to other calendar styles.

♦ If there are no photos in the medium currently used, calendar styles which feature photo display will not be applicable.

♦ You can also switch the Digital Media Frame to calendar view by pressing the **CLOCK/CALENDAR** button on the remote control.

♦ For details on how to modify the time setting, please refer to the section: **Settings > Modify System Settings > Date/Time Settings**.


■ Calendar Style 1



■ Calendar Style 2



■ Calendar Style 3

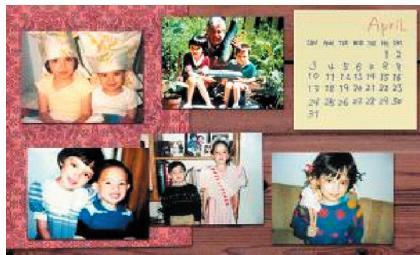

■ Calendar Style 4



CHANGING DISPLAY STYLE

1 Press **STYLE**.

2 A new presentation style applicable to the previous feature you were viewing will appear on screen.

- If you were viewing a photo slideshow, a new slideshow effect will be applied.

- If you were using the clock mode, a clock of a different style will appear.

- If you were using the calendar mode, a calendar of a different style will appear.

NOTE

♦ You can also change the display style using the Mode menu. For details, please refer to the section: [Media Frame Overview > Mode Menu](#).




3:45^{pm}

DISPLAYING THUMBNAIL/LIST

- 1 Press **Thumbnail/List**.
- 2 A file browse screen will appear on screen.

■ File Browse Screen (Photos or Video Files)


If you were viewing photos or watching videos, the file browse screen will be presented in the following format.

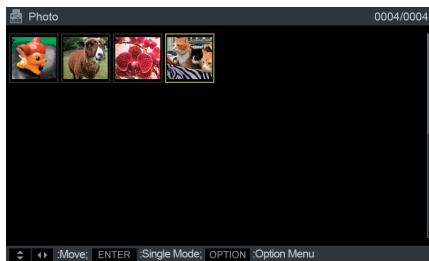

NOTE

♦ The number of files listed may vary depending on your 'File Access Level' settings. If you have selected 'Specified Folder', only files in the chosen folder will be displayed. For more details, please refer to the section: [System Setup > System Settings > File Access Level](#).

♦ You can also bring up the file browse screen using the Mode menu. For details, please refer to the section: [Media Frame Overview > Mode Menu](#).

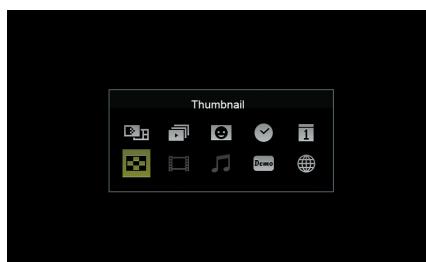

■ File Browse Screen (Music Files)


If you were playing back music files, the file browse screen will be presented in the following format.



VIEWING DEMO

- 1 Press **MODE** to bring up the Mode menu.
- 2 Press **▲▼◀▶** or press **MODE** repeatedly to select 'Demo', then press **ENTER**.

A slideshow of pre-loaded photos will begin.

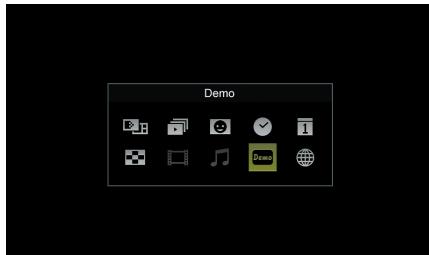


COPYING FILES

You can copy photo/video/music file(s) from a PC to the Digital Media Frame (at the internal memory or connected memory cards/USB devices) and vice versa.

COPYING FROM COMPUTER

- 1 Connect the PC and Digital Media Frame using a mini-USB or USB cable.
- 2 Turn on both PC and Digital Media Frame.

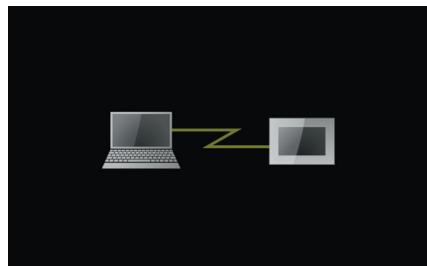


- 3 Click on the 'My Computer' icon at the Desktop screen (for Windows users).
- 4 All the connected media, including the internal memory, memory card(s) and USB device(s) connected to the Digital Media Frame, will appear on screen.
- 5 Select the file or file folder you would like to copy, then copy the file or file folder to the target medium on the Digital Media Frame.

COPYING FROM DIGITAL MEDIA FRAME


■ Copying One File

- 1 Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu.
- 2 Press **Thumbnail/List** to bring up the file browse screen.

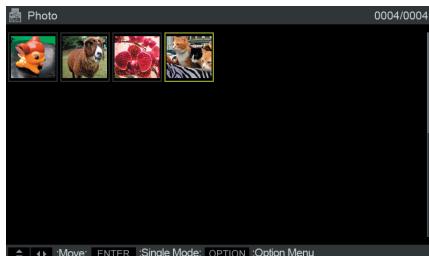


- 3 Press **▲▼◀▶** to select a file you would like to copy, then press **OPTION**.


- 4 Press **▲▼** to select 'Copy This File', then press **ENTER**.

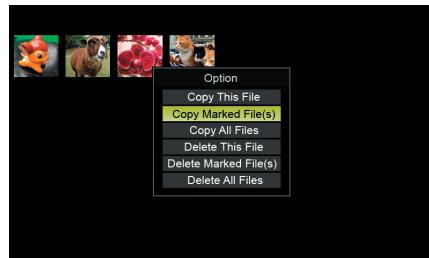

- 5 Press **OPTION** to display a list of storage media. Press **▲▼** to select a storage device, then press **ENTER**. If you are to copy

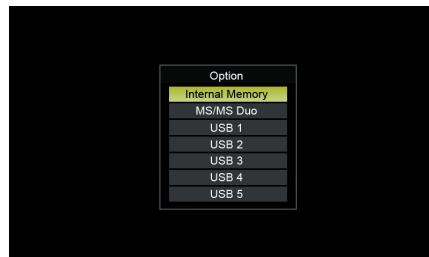

- 6 The copying process will begin.

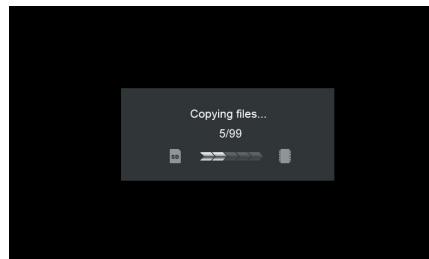

■ Copying Multiple Files


- 1 Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu.
- 2 Press **Thumbnail/List** to bring up the file browse screen.
- 3 Press **OPTION** to display available functions. Press **▲▼◀▶** to select 'Copy Marked File(s)', then press **ENTER**.
- 4 Press **▲▼◀▶** to select desired file(s) you would like to copy, then press **ENTER** to mark selection.



- 5 Press **OPTION** to display a list of storage media. Press **▲▼** to select a storage medium, then press **ENTER**.
- 6 The copying process will begin.

DELETING ONE FILE

- 1 Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu.
- 2 Press **Thumbnail/List** to bring up the file browse screen.
- 3 Press **▲▼◀▶** to select a file you would like to delete, then press **OPTION**.
- 4 Press **▲▼** to select 'Delete This File', then press **ENTER**.

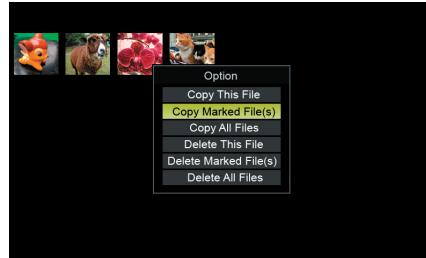

- 5 The deletion process will begin.

TOSHIBA

DELETING MULTIPLE FILES

- 1 Switch the Digital Media Frame to Photo/Video/Music mode using the Mode menu.
- 2 Press **Thumbnail/List** to bring up the file browse screen.
- 3 Press **OPTION** to display available functions. Press **▲▼** to select 'Delete Marked File(s)', then press **ENTER**.
- 4 Press **▲▼** to select desired file(s) you would like to copy, then press **ENTER** to mark selection.



- 5 Press **OPTION** to confirm.
- 6 The deletion process will begin.

USING ONLINE SERVICE


To enjoy the feature, you would need an Internet subscription and a wireless AP (access point)/router. Contact your Internet service provider for further setup details.

Before using the online service, you need to modify the Digital Media Frame's network settings. For details, please refer to the section: **Settings > Network Settings > Wi-Fi Settings**.

Before using the Google Picasa service, you need to complete related settings. For details, please refer to the section: **Settings > Network Settings > Online Service Settings**.


Terms and availability of the online service may subject to change without prior notice. Please visit the service providers' websites for the latest updates.

- 1 Press **MODE** to bring up the Mode menu.
- 2 Press **▲▼◀▶** or press **MODE** repeatedly to select 'Online Service', then press **ENTER**.

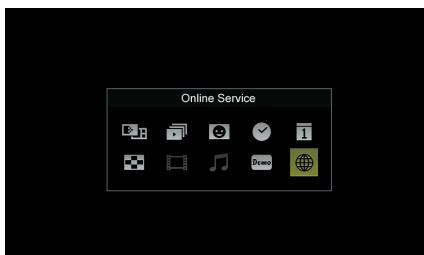

■ Using FrameChannel


1 After you selected 'Online Service', a list of available online services will appear. Press **▲▼** to select 'FrameChannel', then press **ENTER**.

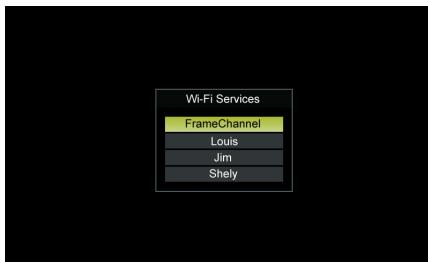


2 A screen offering the activation details will appear. Follow the on-screen instructions. Please retain the activation code for subsequent settings.



3 Go to the FrameChannel website (www.framechannel.com) and log into your account. If you have not yet set up an account, follow the website instructions to complete the registration.

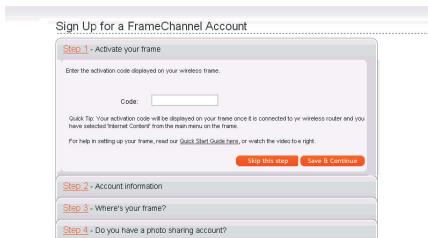


4 After you log in, the account man

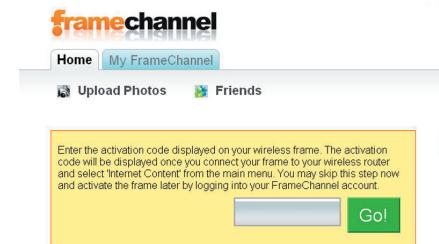


5 You can start customizing your selection of channels on the account management page. If you choose not to modify your selection now, you will see a preset collection of channels when returning to the Digital Media Frame.

6 On the FrameChannel screen, press **▲▼◀▶** to select a desired channel, then press **ENTER**. A slideshow of channel contents will then start.

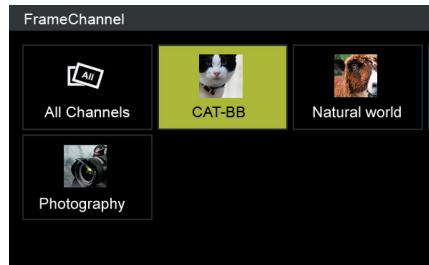


■ Using Google Picasa

1 After you selected 'Online Service', a list of available online services will appear. Press **▲▼** to select a desired Picasa account, then press **ENTER**.

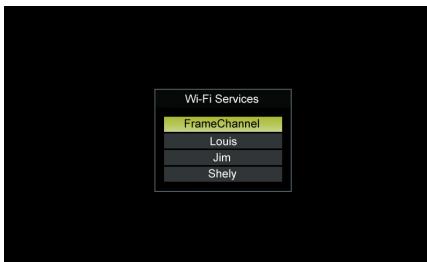

2 Available albums associated with the selected account will be displayed.

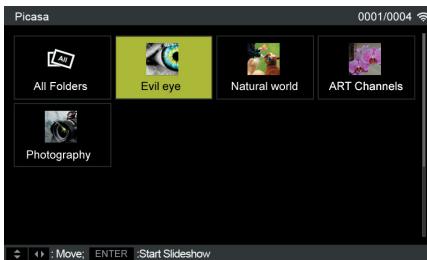

3 Press **▲▼◀▶** to select a desired album, then press **ENTER**. A slideshow of album photos will then start.