

## INSTRUCTIONS

### Battery Installation

Each car requires 3 AAA 1.5V batteries (not included).  
Each remote control requires 2 AAA 1.5V batteries (not included).  
Adult supervision required when installing batteries.  
Alkaline batteries recommended.

#### Vehicle


1. Use a Phillips-head screwdriver to loosen the screw in the battery cover on the bottom of each car.
2. Open each battery cover.
3. Insert 3 AAA 1.5V batteries into each car following the polarity diagram in each battery compartment.
4. Replace each battery cover and secure each screw.

#### Remote control

1. Use a tool to press and hold the battery release button on the back of the remote control.
2. Slide down the battery cover and remove it.
3. Insert 2 AAA 1.5V batteries into each (not included).
4. Slide the battery cover back into place securely.


### Power

Switch the power on each car and each remote control to the on position.

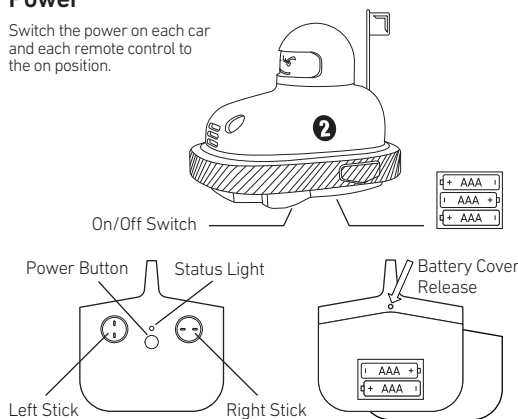

### Seating Drivers

1. Place each driver into each car with the driver facing the front of the car and the driver's feet on either side of the white disc.
2. Carefully press down on each driver until they click into place.

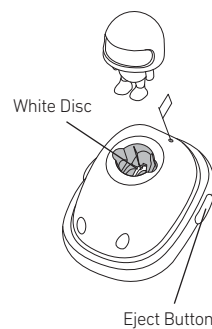



### Ejecting Drivers

1. Locate the eject buttons on the sides of each car.
2. Drive into the eject buttons on the other car to send the rival driver flying.
3. Last driver still in their car wins!



## DRIVING

Tip: For the best performance, drive on smooth surfaces, such as tile or wood floors.



### Forward

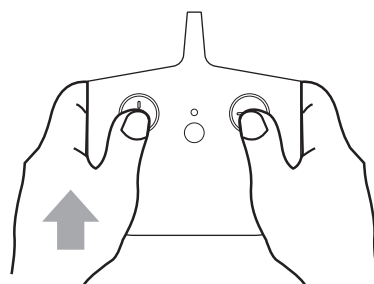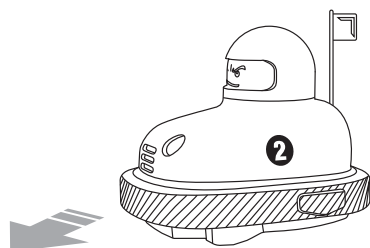



### Reverse

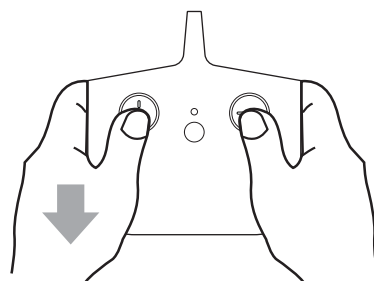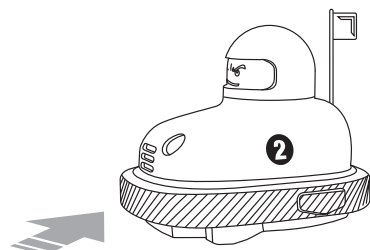

### Right Turn

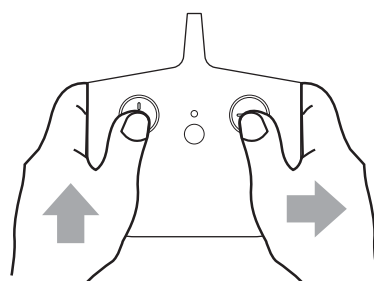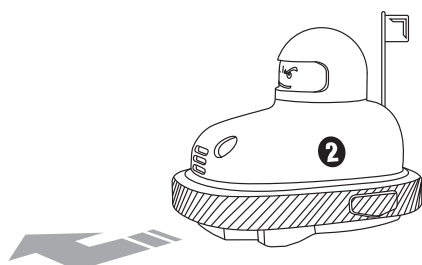

### Left Turn

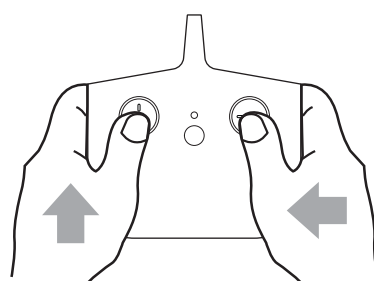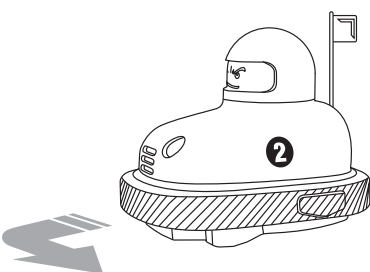

## SAFETY PRECAUTIONS

- Adult supervision recommended.
- Never drive the cars on streets or highways.
- Never drive the cars towards or close to people or animals.
- Do not drive the cars in confined spaces or crowded areas.
- Do not drive the cars into walls, furniture, or other objects, as this may damage the cars and other objects.
- Do not drive the cars in rain or adverse weather conditions.
- Do not submerge the cars or remote controls in water.
- Do not leave the cars or remote controls in direct sunlight for extended times. Overnight exposure to outdoors may result in moisture damage and inoperable vehicles.
- Keep the cars and remote controls away from water, snow, sand, and dust.
- Keep the cars and remote controls away from hot surfaces and heat sources.
- Do not leave the cars or remote controls in direct sunlight for extended times.
- Keep fingers, hair, and loose clothing away from the tires, gears, and motors while the cars are powered on.
- Remove all batteries before prolonged storage.
- Thoroughly inspect the cars and remote controls before each use. If the cars or remote controls appear damaged in any way, discontinue use and discard immediately.

### BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

Sharper Image® name and logos (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2021 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Model NO.: 1012348

**KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.**

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

Printed in China

**FOR CUSTOMER SUPPORT,  
PLEASE CALL**

**1-800-374-2744**