



FCC ID: XID-BDT-1002

ATTACHMENT E.

- User Manual -

HCT CO., LTD.

SAN 136-1, AMI-RI, BUBAL-EUP, ICHEON-SI, KYOUNGKI-DO, 467-701, KOREA
TEL:+82 31 639 8517 FAX:+82 31 639 8525 www.hct.co.kr

USER MANUAL



BlueDreamTech., Inc.

INDEX

1. Introduction
2. System introduction
 - 1) System synopsis
 - 2) System feature
 - 3) System composition
3. Cautions before installation
 - 1) Components check
 - 2) Safety guideline
 - 3) Consumer attention
4. System installation
 - 1) Verification before installation
 - 2) Designating the place to install
 - 3) Installation order
 - 4) WallPad installation
 - 5) Door phone installation
5. WallPad USER guide
 - 1) Features
 - 2) Setting up Security configuration
 - 3) Indoor usage (Usage of Remote controller)
 - 4) Outdoor usage (Mobile and Telephone)
6. Operation procedure classified by security function
 - 1) Operation procedure of security function for getting out
 - 2) Operation procedure of security function for sleeping
7. Trouble shooting Check point
 - 1) Internal Trouble
 - 2) External Trouble
8. System specification
9. Quality Assurance

1. Introduction

Dear customers,

First of all, Thanks for all customers of Wallpad system.

We are convinced that this product will assure your safe and convenient and also affluent life with home network system using high-frequency remote control.

Please carefully read this instruction manual for appropriate usage and installation maintenance and keep with assurance certificate.

Expressly, pay attention to cautions as we are not responsible for the defect caused by user mistakes.

If you have any question or inquire about our product, please never hesitate to contact with us. It will be our great honor to support our customers.

Thank you.

2. System Instruction

- 1) System synopsis
- 2) System feature
- 3) System composition

1)System synopsis

This system is designed for users's simple and convenient control for light, gas and other necessary devices in the house by using mobile or ordinary phone from outside. And It enables users to observe above indoor situation with bidirectional remote communication techknowledge. This system also maximizes user convenience with the way that enables to control various indoor electric appliances and necessary devices by combinated remote controller

2)System feature

- Control available without hindrance by hign frequency bidirectional remote communication techknowledge base control type for all products.
- Complete voice recognition control(ARS type) available with mobile and ordinary phone
- Integrated control available for home networking devices, TV, VTR,CATV and etc by integrated remote controller (IR type)
- Piping and wiring construction are not necessary by remote system construction and able to keep the beauty inside house.
- Simple construction for targeting new and old apartments and houses.
- Convenient installation and maintenance by brief system structure.
- Offering high techknowledge living space with elegant exterior.
- Easy movement and expansion.

3) System composition


- Indoor control:

Constructed to enable controlling home networking devices and electric appliancesOutdoor control(TV, VTR) by integrated remote controller.


- Outdoor control:

Control available for devices in a house from outside as inserting order to WallPad located in a house through mobile and ordinary phone(ARS type).

- Structure map :

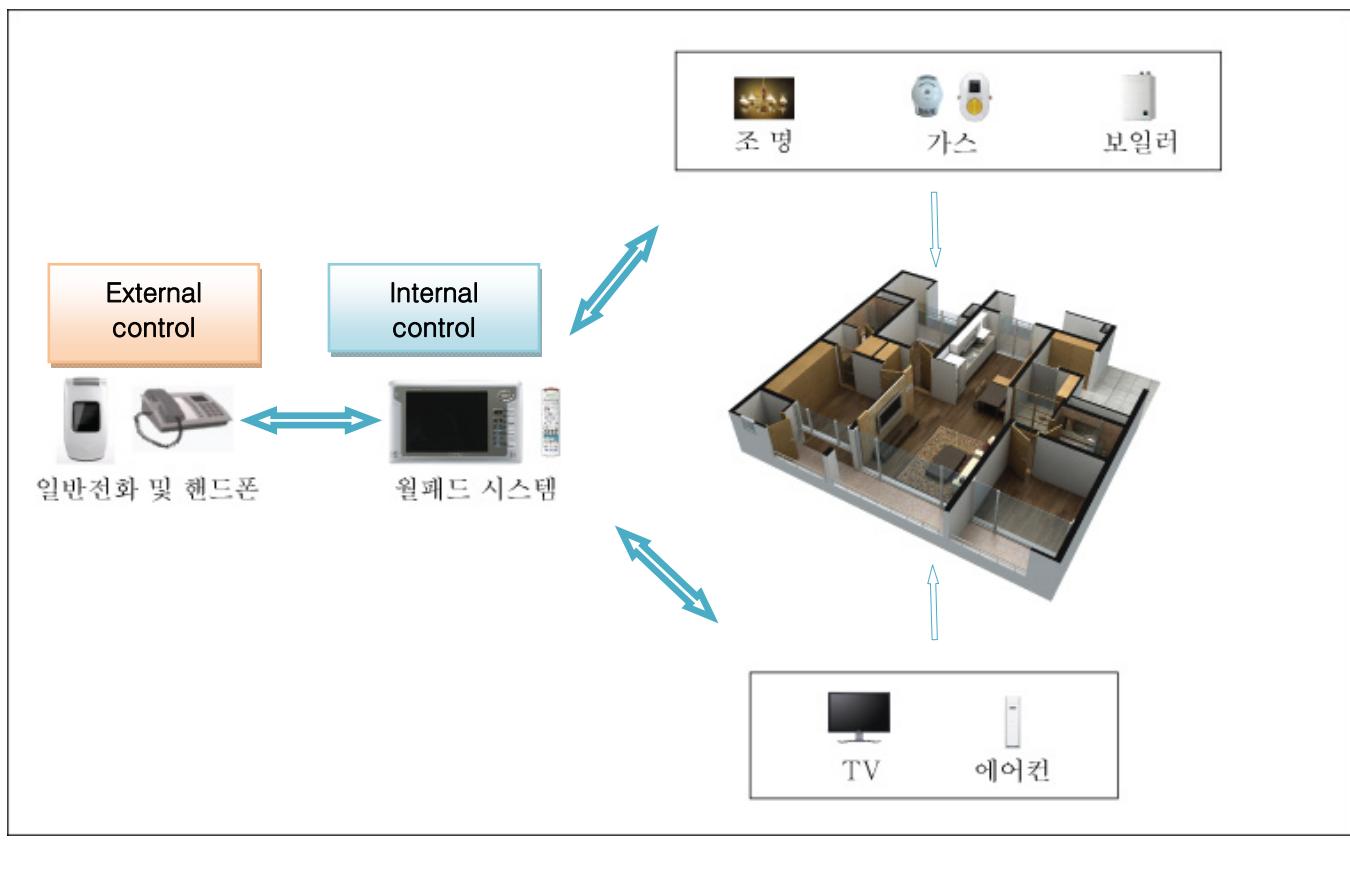

■ Control system map :

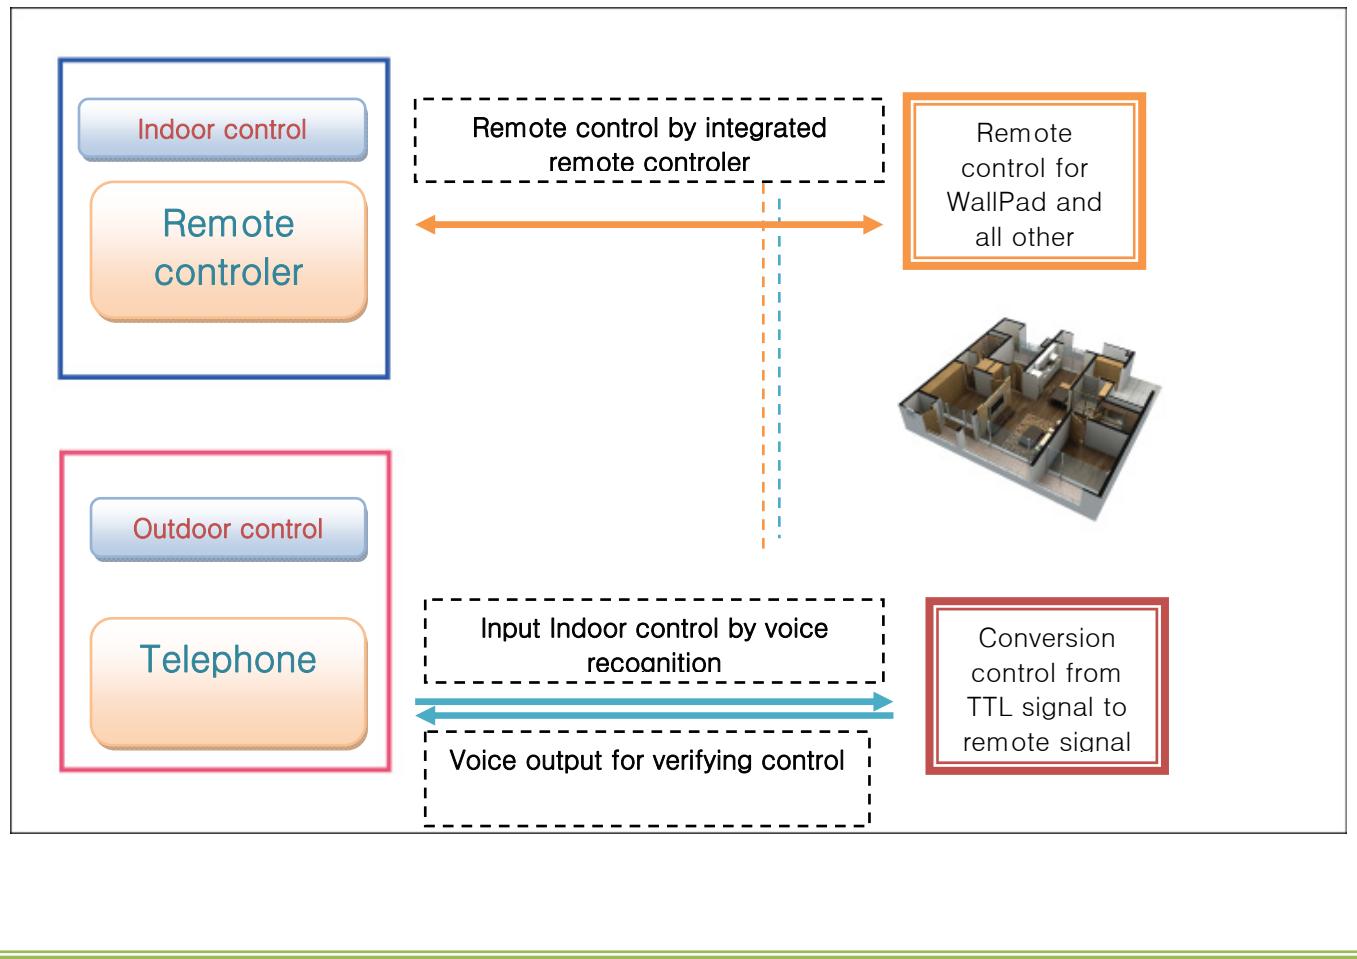

3. Cautions before installation

- 1) Components check
- 2) Safety Guideline
- 3) Consumer attention

1) Components

Standard compositon is included in this product and some components are not included.

■ Basic components



Wallpad X 1 EA
Fixing Screw X2 EA



DoorphoneX 1 EA
Fixing Screw X 1 EA




Wallpad bracket X 1EA
Doorphone bracket X 1EA
Fixing screw X 7EA



Remote controller X 1 EA



Adapter X 1 EA

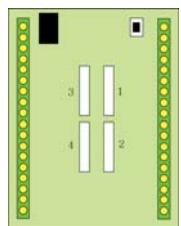

Power board X 1 EA



Connection cable X 4 EA



Phone cable X 1 EA

2) Safety Guideline

- This product is basically designed for DC 12V (Except power controller of electric appliances and controller of heater) so it offers user's safety.
- If you have any inquire or need A/S, then stop using and call us at customer support center.
- Keep out of direct rays of sun and avoid high humid area.
- Please call our customer support center or head quarter if you need to repair this product in order to keep this product out of critical damage caused by user while user is disassembling, fixing or renovating in their own accord,
- Each DC adapter is supposed to use for appropriate product.
Do not use damaged power plug or loose plug socket (It could cause a fire)
- Install the power connection adapter of each product to the place that kids can not approach. (Prevent kids from electric shock.)
- Do not place close to magnetic stuffs like TV.
- Do not install this product with wet hands.
- Do not excessively twist power plug or press this product with heavy stuffs.
All products are very sensitive to impulses as these are remote electronic goods.
Therefore do not drop this product from high places and do not give serious stress.
(You are noticed that there will be no assurance or exchange for the damages caused by user's intentional purpose)

3) Consumer attentions

- Do not equip, unequip or move installed remote home network system.
(There will be no assurance or exchange for the control hindrance and break down at all caused by excessive equipping and unequipping or moving)
- Please call us at customer support center or the agent you purchased from for A/S.

4. System installation

- 1) Check point before installation
- 2) Plece selection for installation
- 3) Installation order
- 4) WallPad installation
- 5) Door phone installation

1) Check point before installation

- Instruction for installation of remote home network system.
- You must check before and after installation for normal operation of home network system

– Electricity –

- Check out electric voltage of house to install (100V ~ 240V)-the use of designated adapter is recommended.
- Check if the type of power supply is single-phase 2W(1P2W).
- Check Rated capacity of installation device.

– Telephone –

- Check if uses ordinary wire telephone.
General cables of KT and hanaro communication are used and other telephone type shall follow the same standard type.
- Unusual telephone type shall be processed through different way of installation

– Gas –

- Check if fuse cock of gas pipes meets standard requirements.
- Gas circuit breaker is installed and used as the type of fuse cock cover and depending on the case, it might be unable to install. Please check when purchase it.
If you would like to install to middle valve which is not inside house, then you need extra gas circuit breaker.
- Gas circuit breaker is only able to be installed to pipe-type gas pipe for safety.
 - ※ You need attention to installation as soft hose is usually used for LPG.
 - ※ Only permitted gas user is able to replace Gas valve.

– Lightings–

- Check service voltage and rated capacity of illumination.
- Check connection switch wiring.
- ※ Remote control switch assure safe usage only within rated capacity.

– Cooling Control–

- Normally remote control in cooling controller is available air conditioner produced in domestic is available with cooling
Usually remote control from cooling controller of the air conditioner produced domestically is possible but for some special air conditioner, it might be impossible to setup configuration so you need to check when installing.
- Install air conditioner to the opposite direction of using air conditioner so it's placed within incident angle of IR transmitter.

2) Select place to install

– WallPad –

- Place that is easy to connect to phone cable and close to power socket
- Install on the height that the center of monitor screen is 145 cm away from bottom.
- Recommended place to install : living room
- ※ Keep out of such place below as it causes system malfunction
 - Where direct or reflect ray is beamed.
 - Where high temperature, high humidity, chemical stuff, magnetic waves are generated
 - Where close to heater
 - Where generates heat or rapid temperature increase.

– DOOR PHONE –

- Install on the height that the center of monitor screen is 145 cm away from bottom.
- Do not install to where direct ray directly reaches to camera lens.
- Adjust to appropriate place using angle lever(back side of product).
- ※ Cautions for installation
 - Do not install to where dust and odors are generated or highly humid.
 - Correctly connect when connecting pipes.
 - Make sure to fix as it might be fallen by vibration.
 - Avoid where exposed to sun or rain a lot..
 - Carefully manage that there should be no dust on the window of door camera lens.

– **Wireless wall switch –**

- Place that has electric light to control
- Recommending place : living room, bed room, kitchen, veranda

– **Gas controller & circuit breaker –**

- Place that has gas valve to control
- Designated place : kitchen
- ※ Check the location to install gas controller

– **Air conditioner controller –**


- Opposite side of the place that has air conditioner to control(IR incidence angle of mirror)
- Recommended place : living room
- ※ Install the location that IR sensor of air conditioner can recognize

– **Window sensor –**

- Place with each window
- Recommended place : living room, bed room, kitchen, veranda.
- ※ Install a pair of sensor to the place between the window to open and fixed window frame as close as each side could reach each other.


3) Installation order

This is installation order basically suggested for user convenience of work.
Please apply for appropriate situation in order for safe and corrective installation.

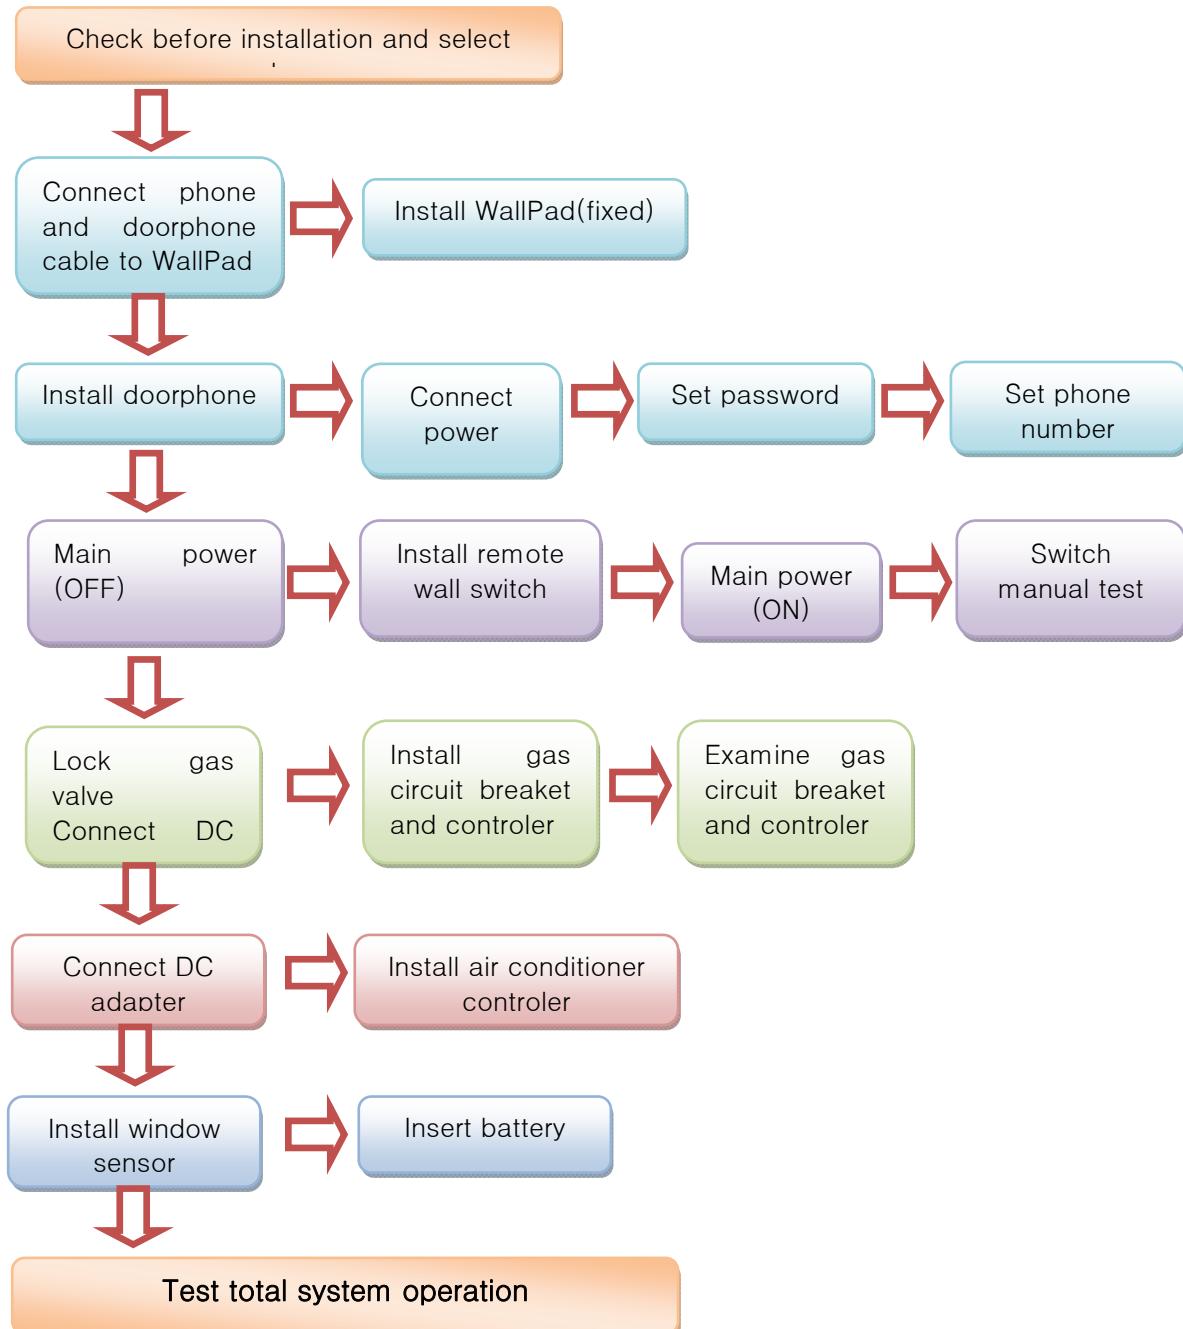


4) WALLPAD INSTALLATION

■ Wiring diagram

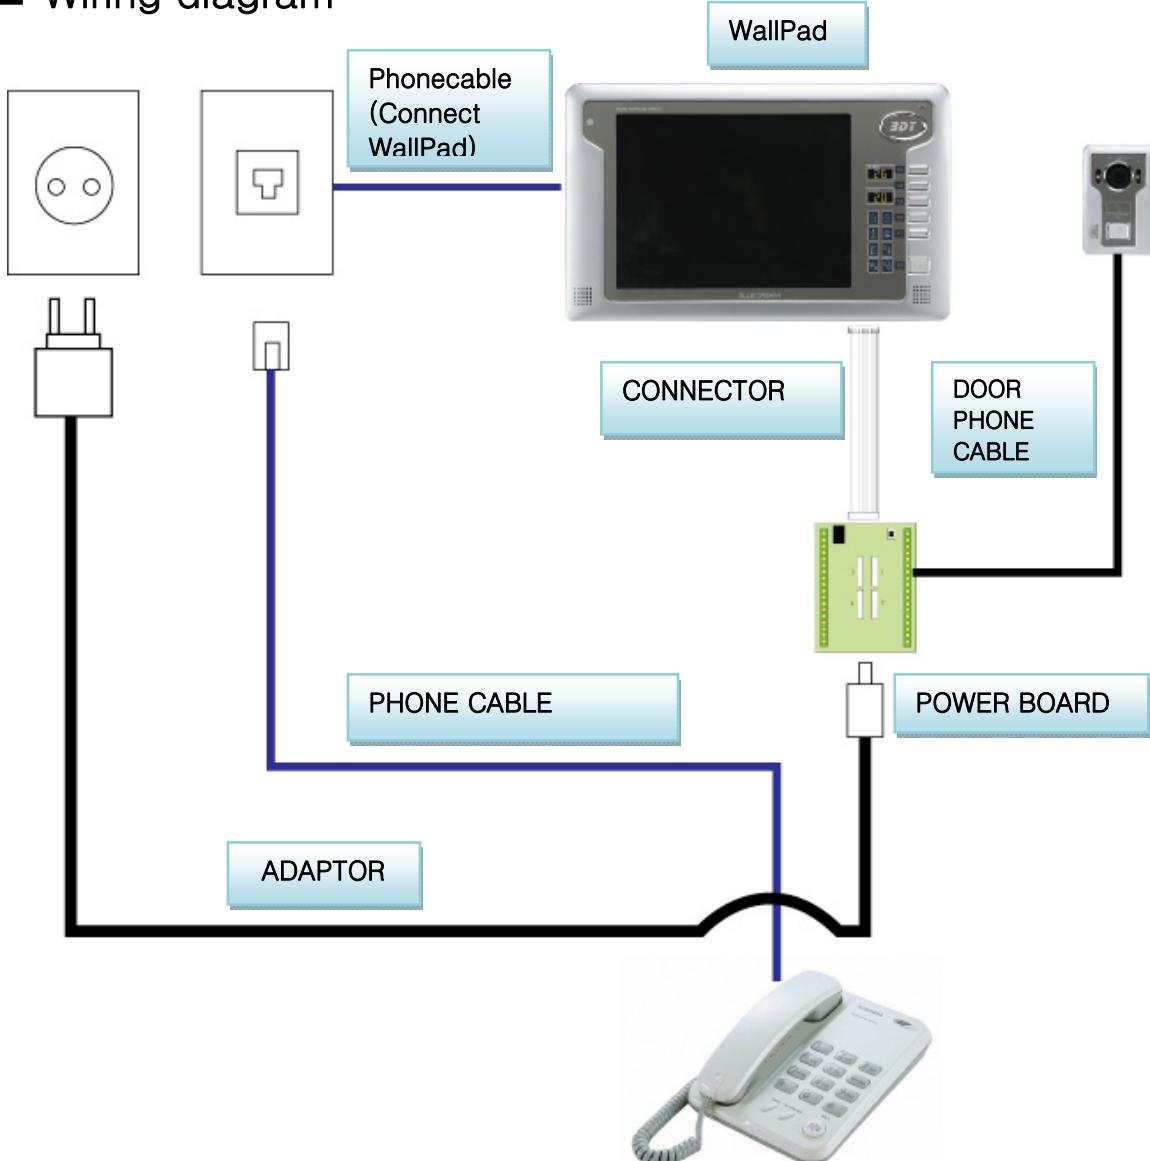

■ WALLPAD INSTALLATION

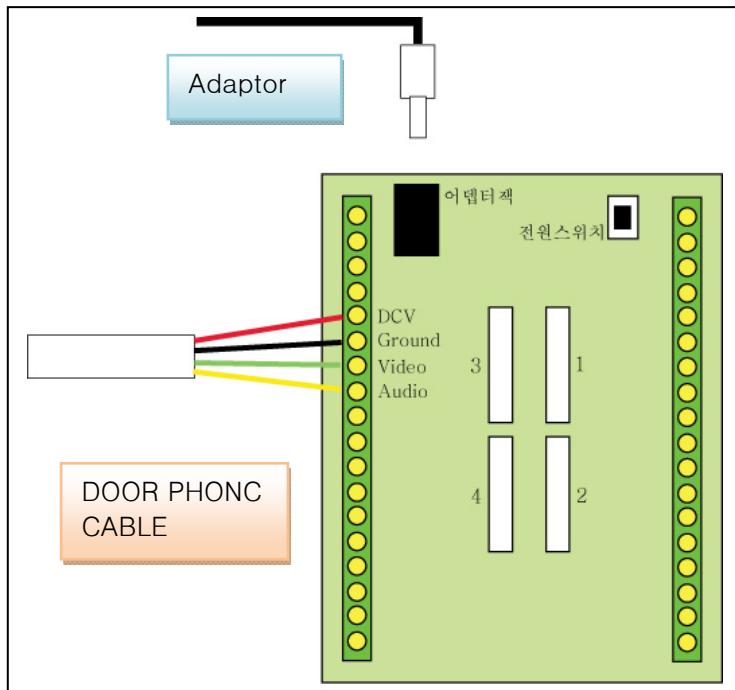


1 Connect Adaptor & Door phone to POWER BOAD. Make sure to match door phone cable to terminal number on Power Board



2.SELECT POSITION TO
INSTALL
3.INSTALL THE BRACKETS

※ FIX IT FIRMLY WITH THE
INCLUDED SCREWS.

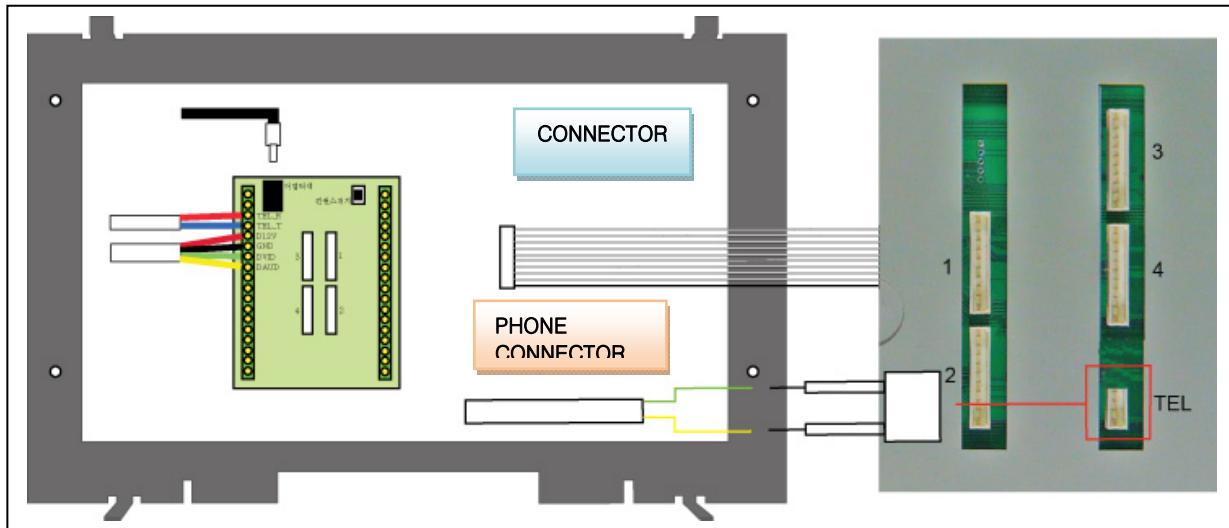


- ④ Put Power board inside the bracket.
- ⑤ Connect Wallpad with included cable.
※ Make sure to match terminal number on the back of Power board and Wallpad.
- ⑥ Connect the phone line to Phone connector as shown above.




- ⑦ Switch on the Power Board.
- ⑧ Install Wallpad to the bracket.

5) DOOR PHONE INSTALLATION

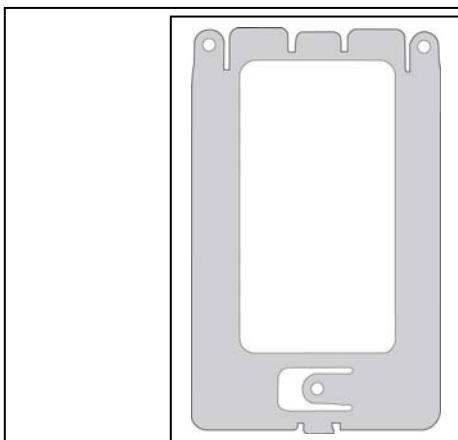

- ① SELECT THE POSITION
- ② INSTALL THE BRACKET

*FIX IT FIRMLY WITH THE SCREW INCLUDED.

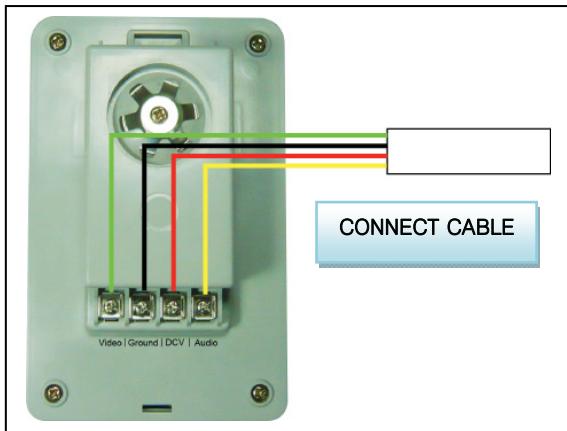

- ③ Connect the cable to the correct terminal on Power board.




- ④ Install the phone to the bracket.
- ⑤ Plug in Wallpad Adaptor.

5. WallPad User Guide


- 1) Features
- 2) Setting up Security configuration
- 3) Internal Use
(Remote control)
- 4) External Use
(Mobile and House phone)

1) Features

■ Wallpad

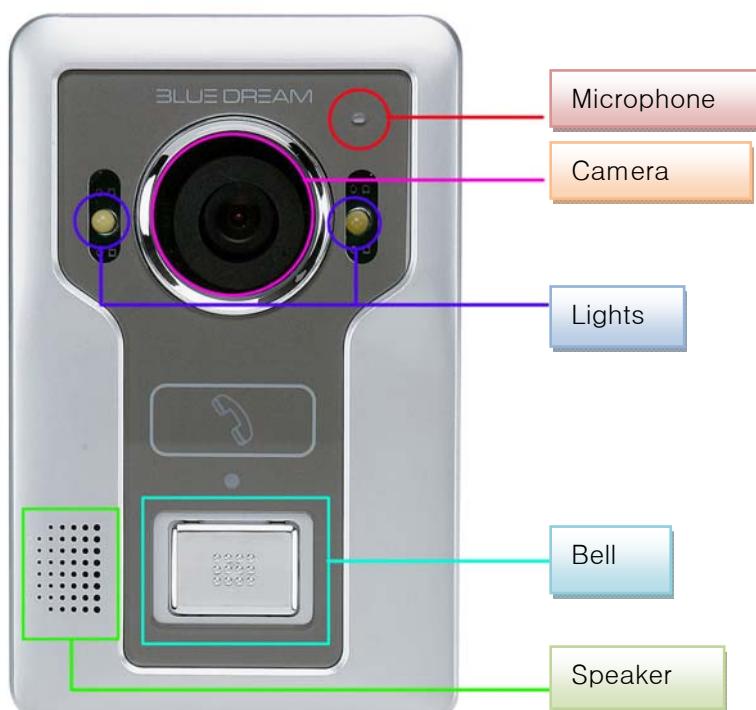


■ REMOTE CONTROL

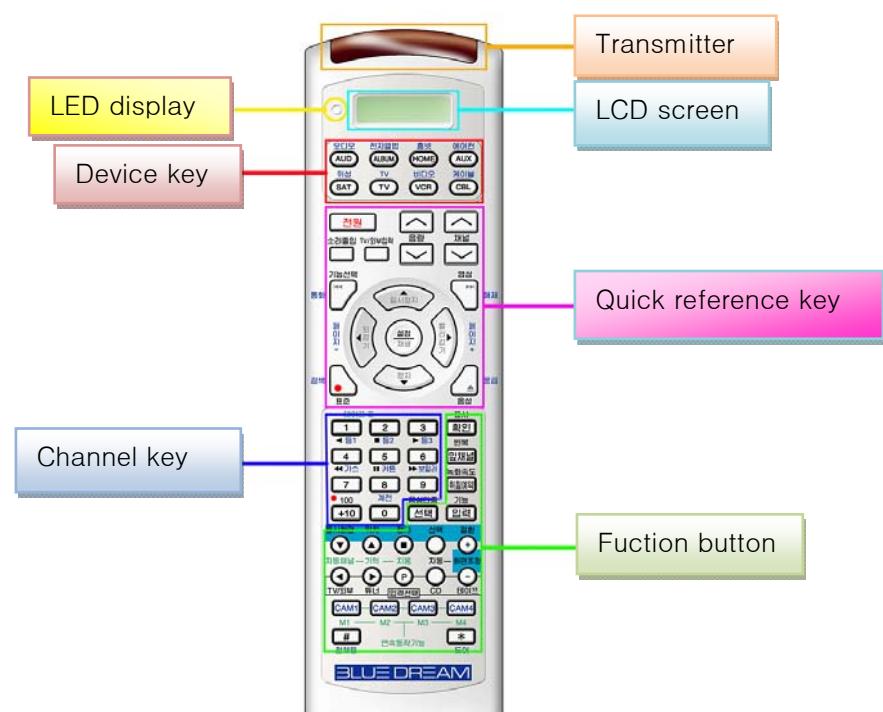


2) Setting up Security mode

■ Setting up Password

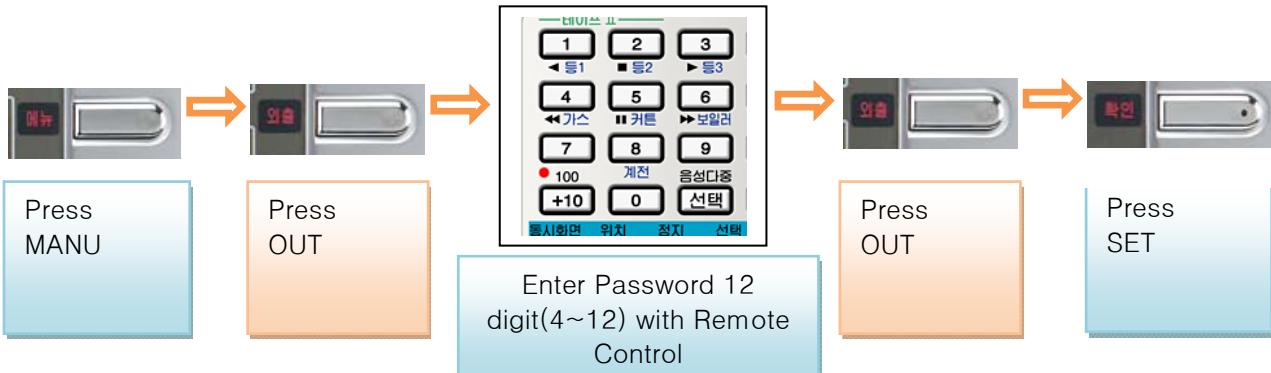

■ SETTING UP PHONE NUMBER RESTORING

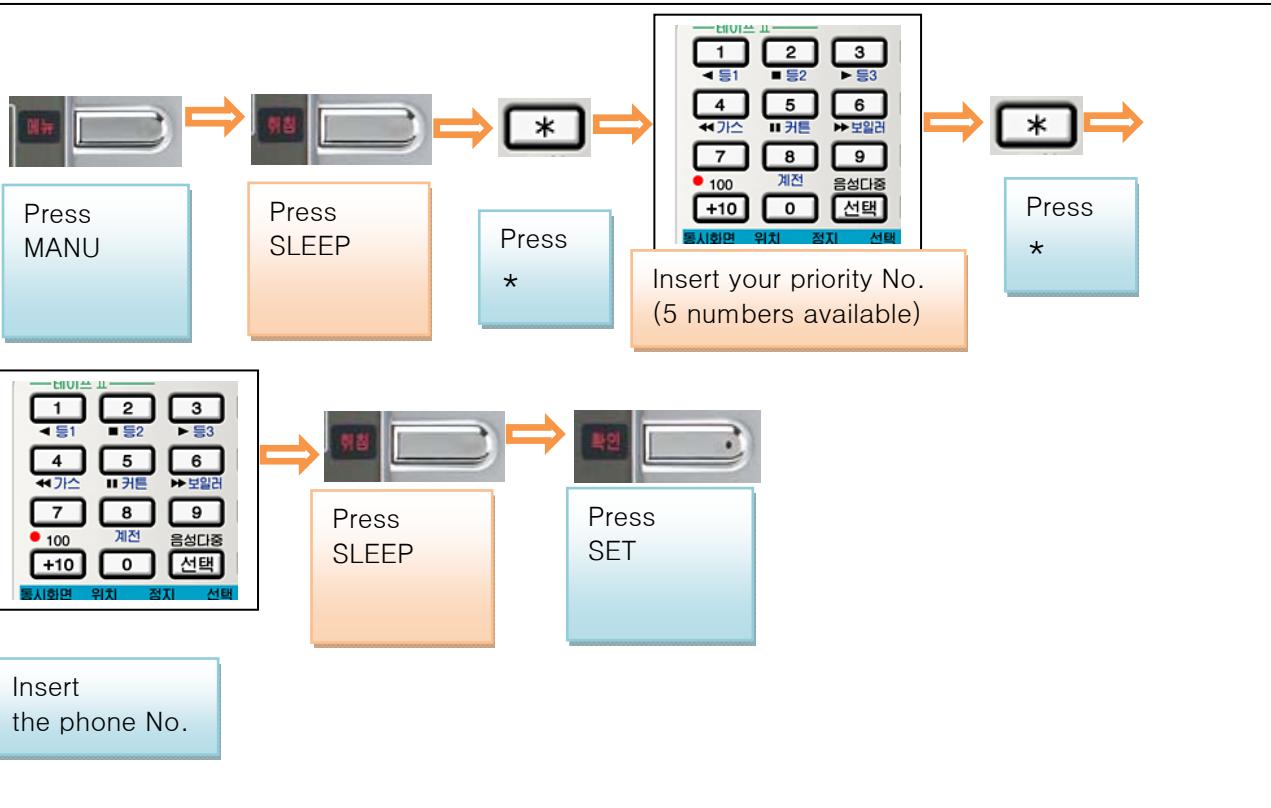

■ SET UP TEMPERATURE1(AIR CONDITIONER)



Press
MANU

PRESS
CANCEL

PRESS
*

PRESS
7

INSERT
TEMPERATURE

PRESS
* ON

PRESS
SET


#

PRESS

OFF



■ SET UP TEMPERATURE(HEATER)

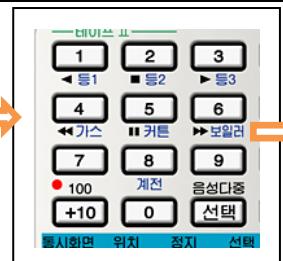

Press
MANU

PRESS
CANCEL

PRESS
*

PRESS
8

INSERT
TEMPERATURE

PRESS
* ON

PRESS
SET


#

PRESS

OFF




■ EXTERNAL SECURITY MODE

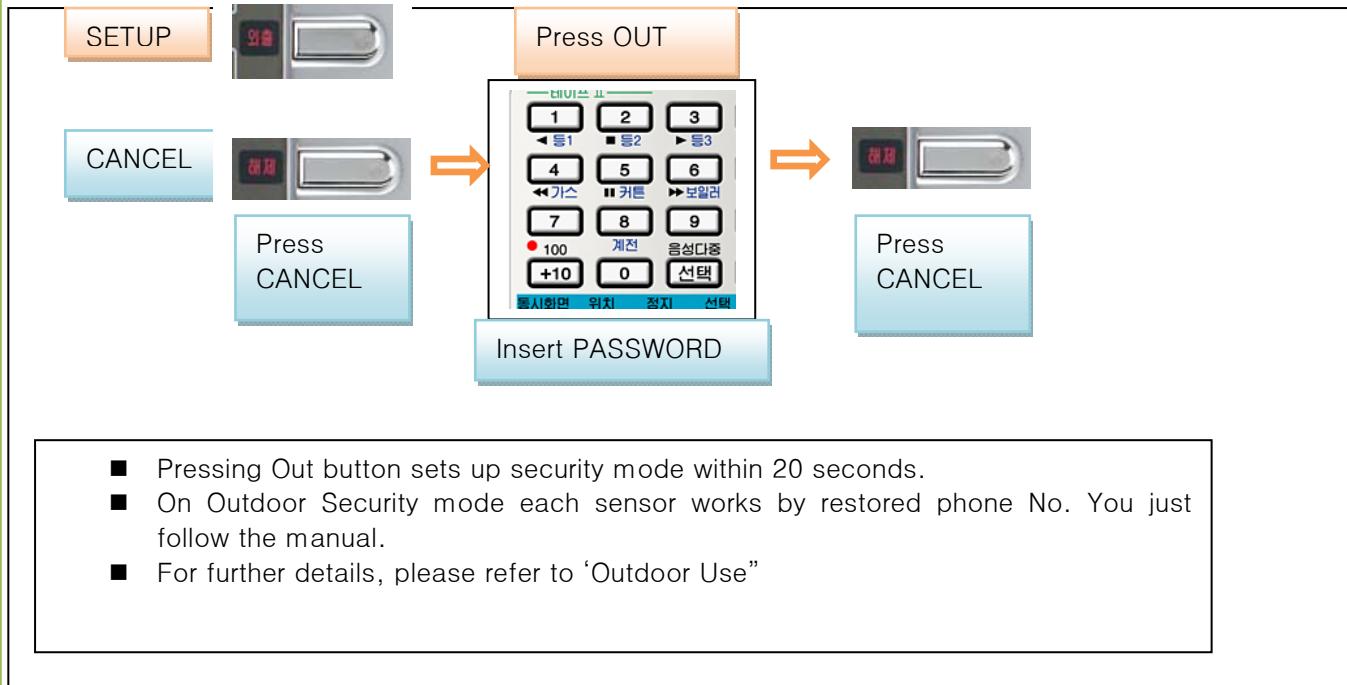

- Pressing Out button sets up security mode within 20 seconds.
- On Outdoor Security mode each sensor works by restored phone No. You just follow the manual.
- For further details, please refer to 'Outdoor Use'

■ SLEEP SECURITY MODE

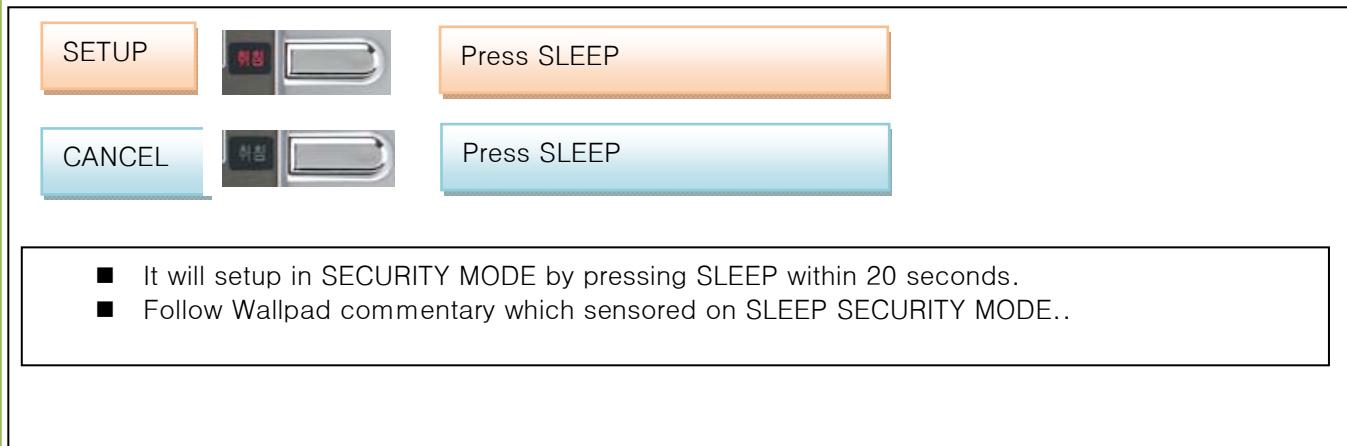


- It will setup in SECURITY MODE by pressing SLEEP within 20 seconds.
- Follow Wallpad commentary which sensed on SLEEP SECURITY MODE..

3) Internal Use (Remote Control)

■ Talk to DOOR PHONE

DOOR PHONE Bell Ringing ----- You can talk to the Guest by pressing TALK Button

■ Lighting control

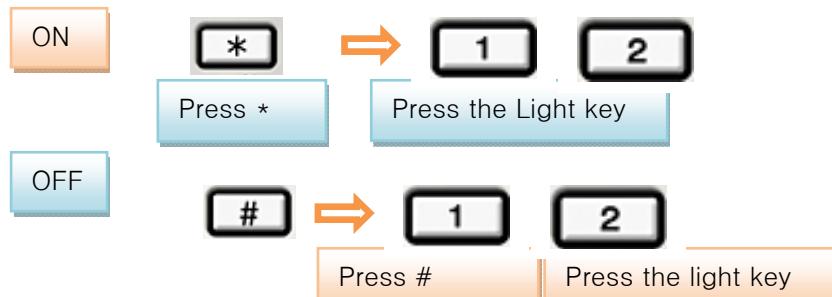

All on --- * -----9


All Off--- # -----9

■ Gas Control




* Gas Control only works for Lock function in Safety reason.

■ DOOR LOCK

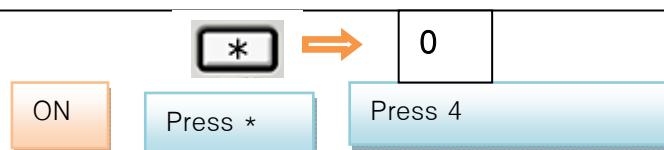


Setup DOOR LOCK MODE, the door will close within 10 seconds


■ CURTAIN

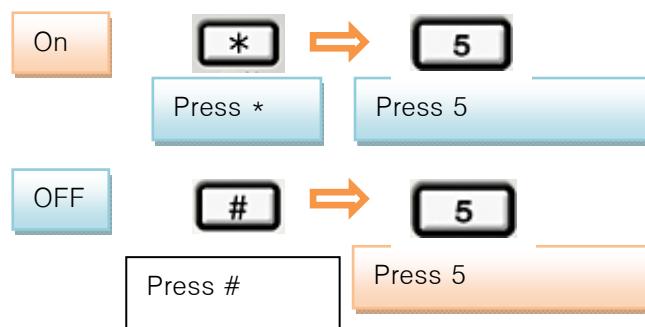

■ BOILER

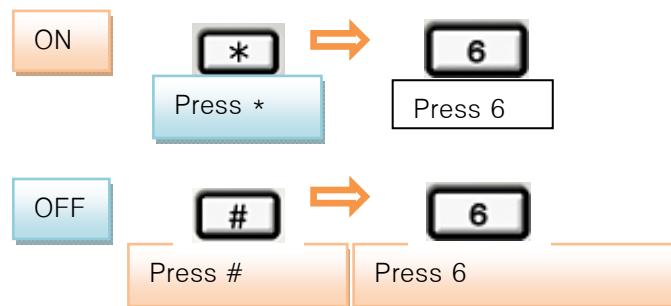


■ AIRCONDITIONER

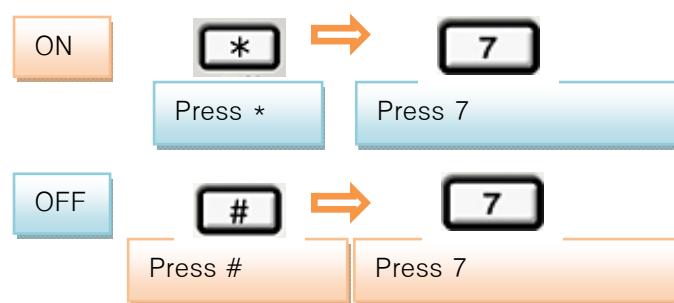


4) EXTERNAL USE (MOBILE AND TELEPHONE)

■ OUTSIDE CONNECT

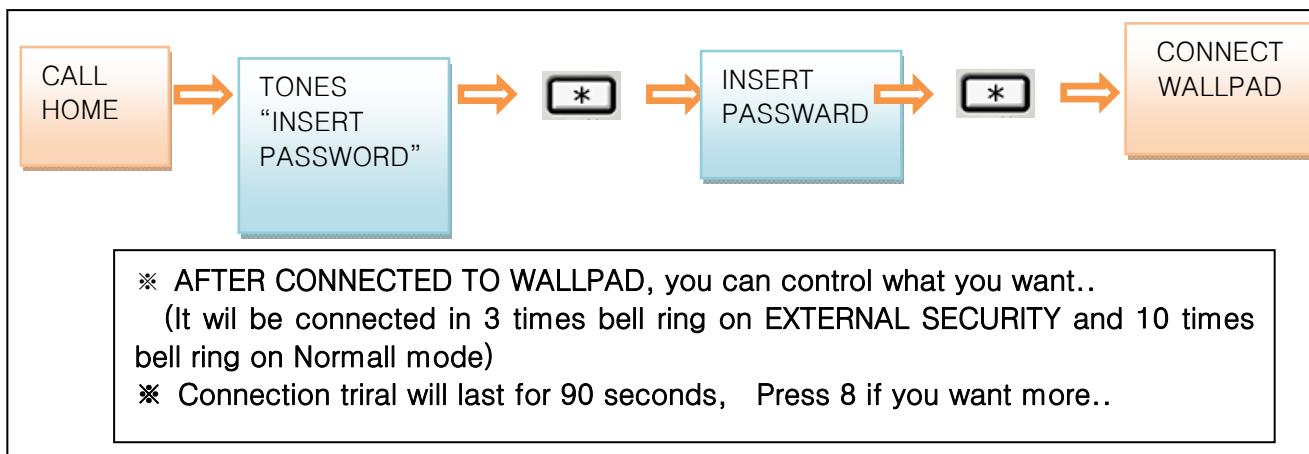


■ Alarming by each Sensor

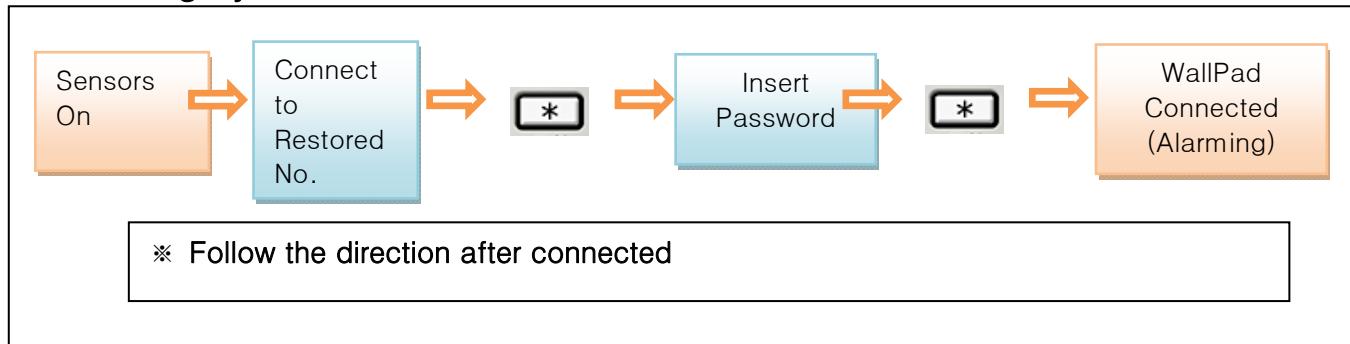


■ Phone Control

Key No.	Fucntions and Device
1	Lighting, Gas, Door, Curtain, Airconditioner, Boiler control
3	Setting up OUTDOOR Security mode
4	Talking to GSETS
5	RESETUP OUTDOOR MODE(window, Gas Sensor)
8	Phone connection cancel
9	Phone connection extend


■ Lighting Control

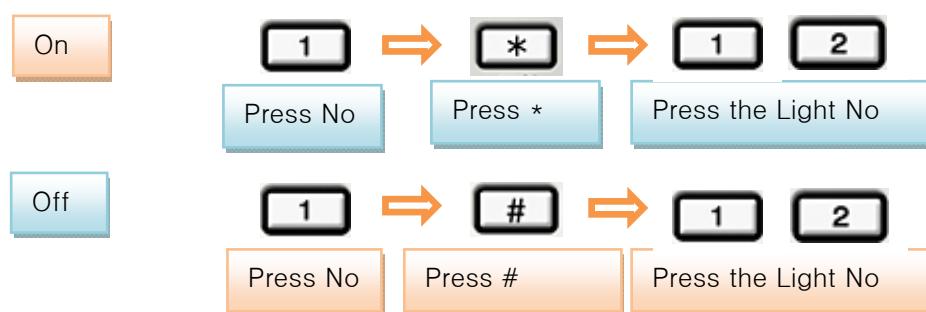

■ GAS CONTROL

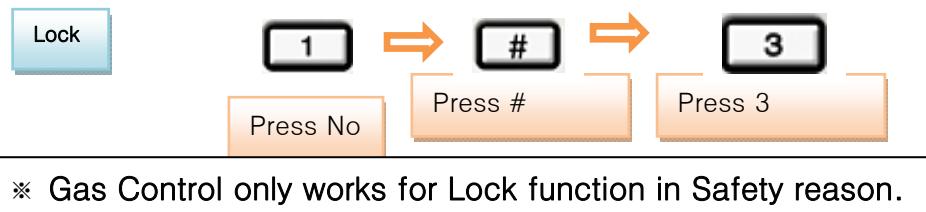


■ DOOR LOCK

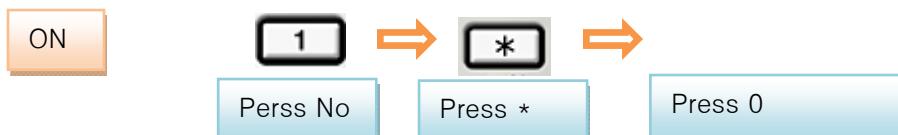


The Door will be locked automatically within 5 – 10seconds when it closed

- Curtain Control
-


■ BOILER CONTROL

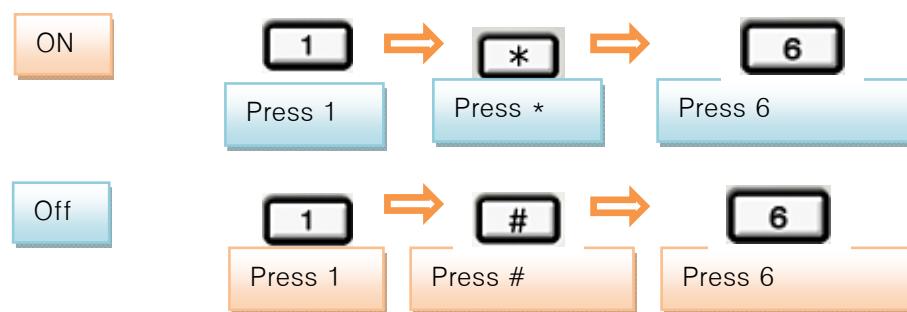

■ AIR CONDITIONER CONTROL

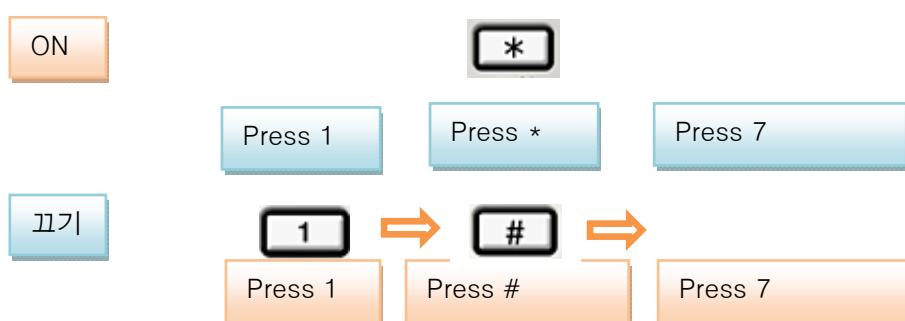


■ SETTING UP SECURITY MODE

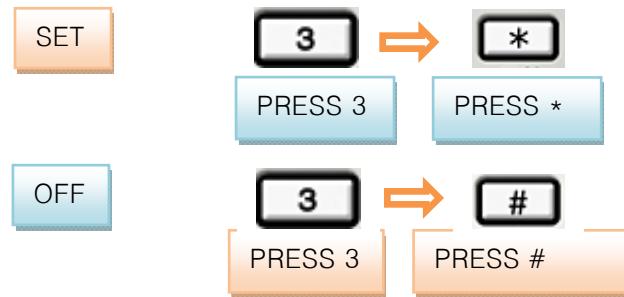

※ WHEN YOU ARE OUT WITHOUT SETTING UP EXETERIOR SECURITY MODE , YOU CAN SET UP EXETERNAL SECURITY MODE with MOBILE OR TELEPHONE OUTSIDE.

■ TALK(DOOR PHONE)

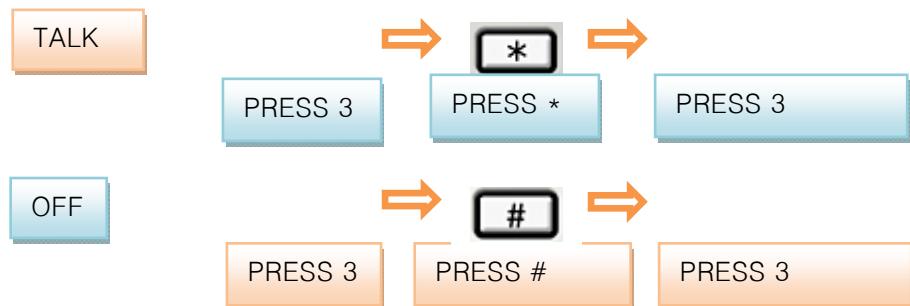

※ IT IS A FUCTION TO TALK TO OUTSIDE GUEST.

■ RESETTING UP SECURITY MODE WHEN YOU GO OUT



※ IT FUNCTIONS TO RESET THE SECURITY MODE WHEN YOU GO OUT WITH ALARMING.

■ CANCEL PHONE CONTROL MODE

RESET

8

PRESS 8

※ YOU CAN CANCEL PHONE CONTROL MODE.

RESET

9

PRESS 9


※ IF IT NEEDS TO EXTEND VALIDITY, USE THIS FUNCTION, IT WILL EXTEND THE VALIDITY UPTO ABOUT 90 SECONDS.

6. Operation procedure classified by security function


- 1) Operation procedure of security function for getting out
- 2) Operation procedure of security function for sleep

1) Operation procedure classified by security function


■ Operation procedure of security function for getting out

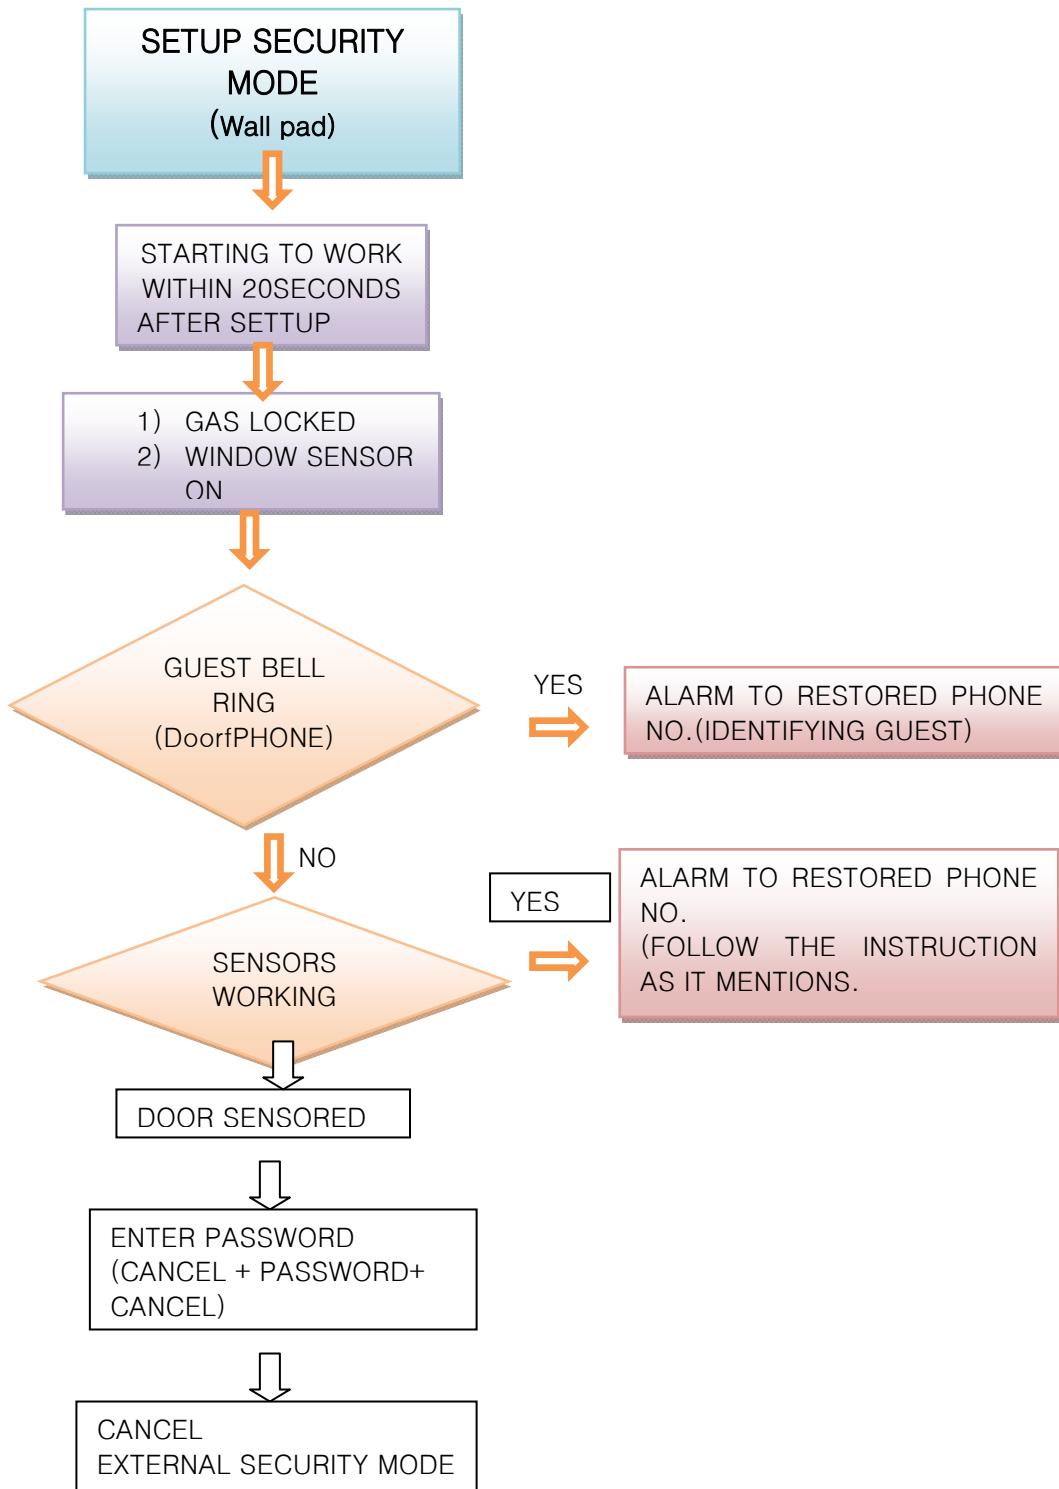

■ Operation procedure of security function for Getting out BY PHONE

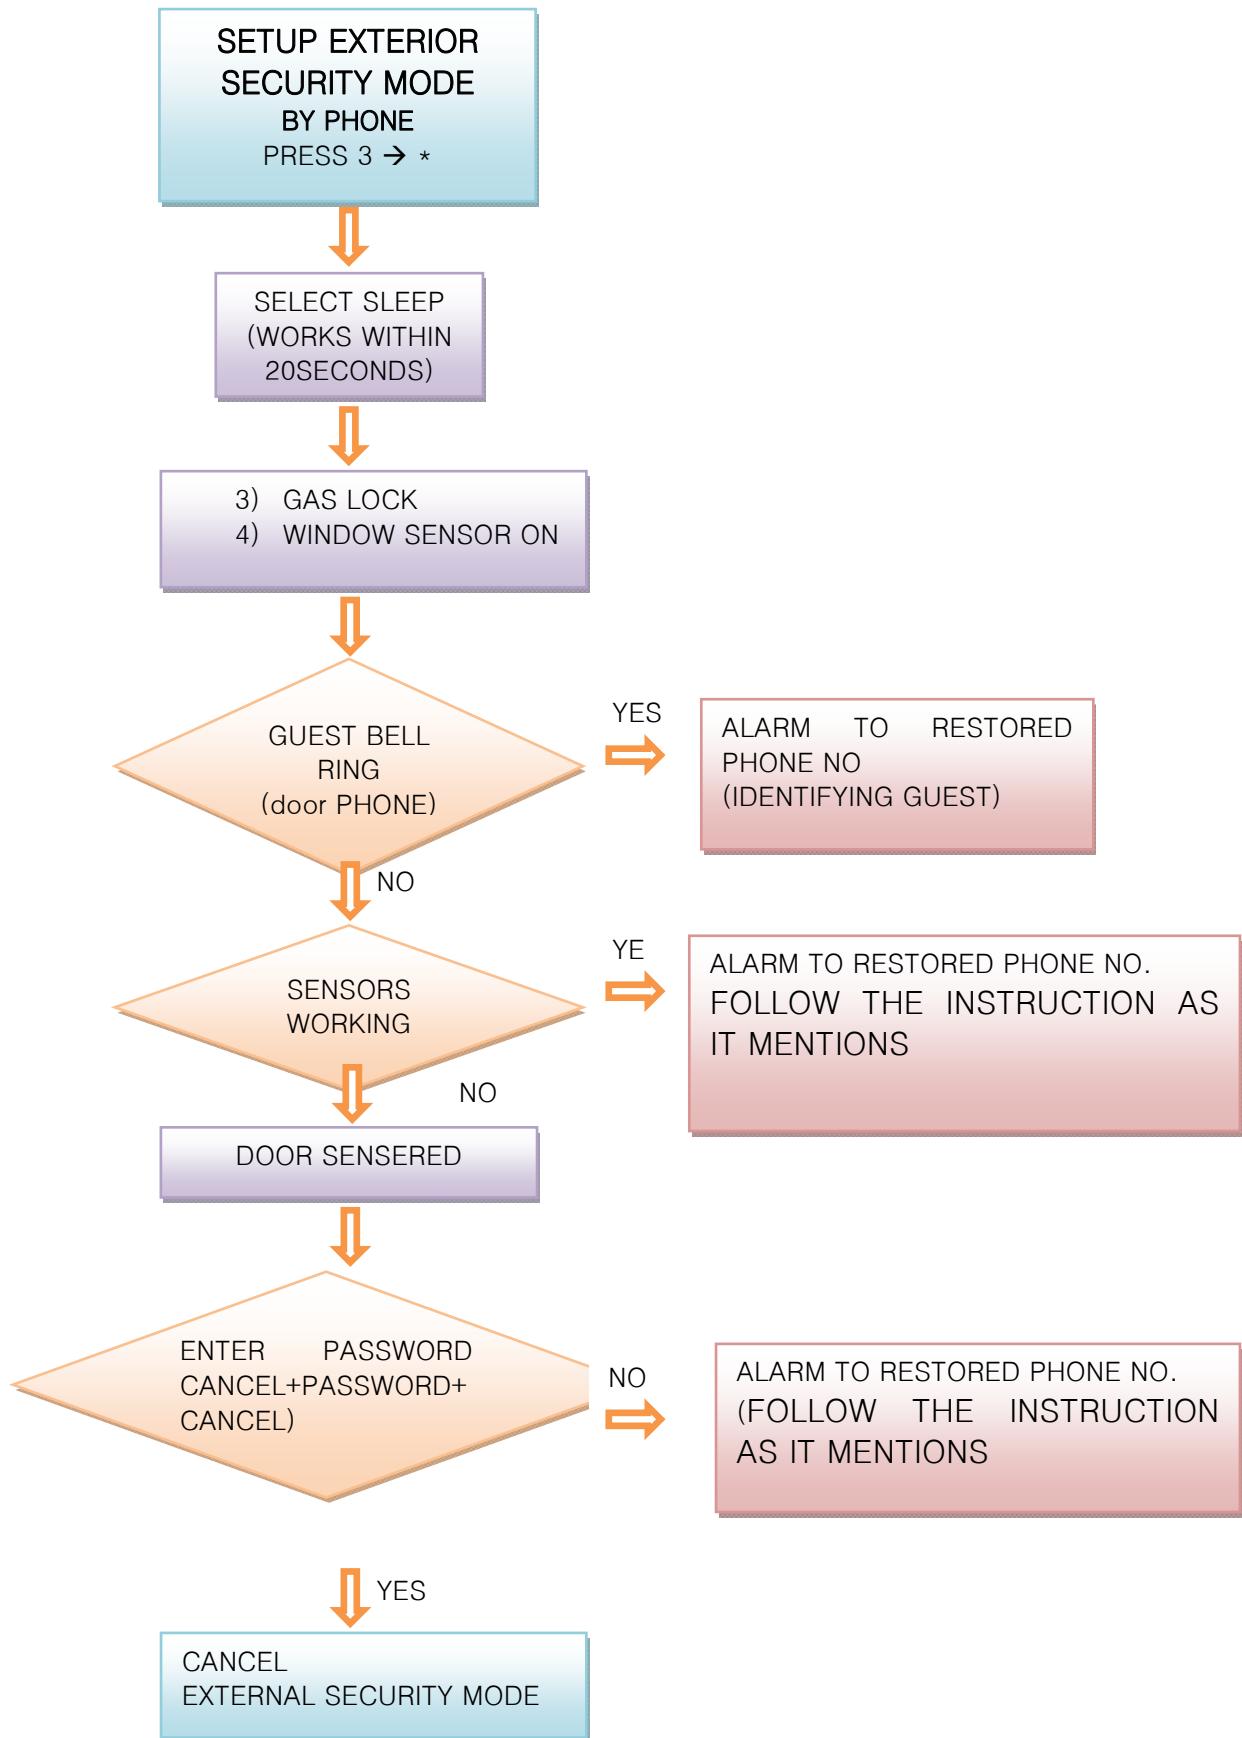

2) Operation procedure of security function for sleeping

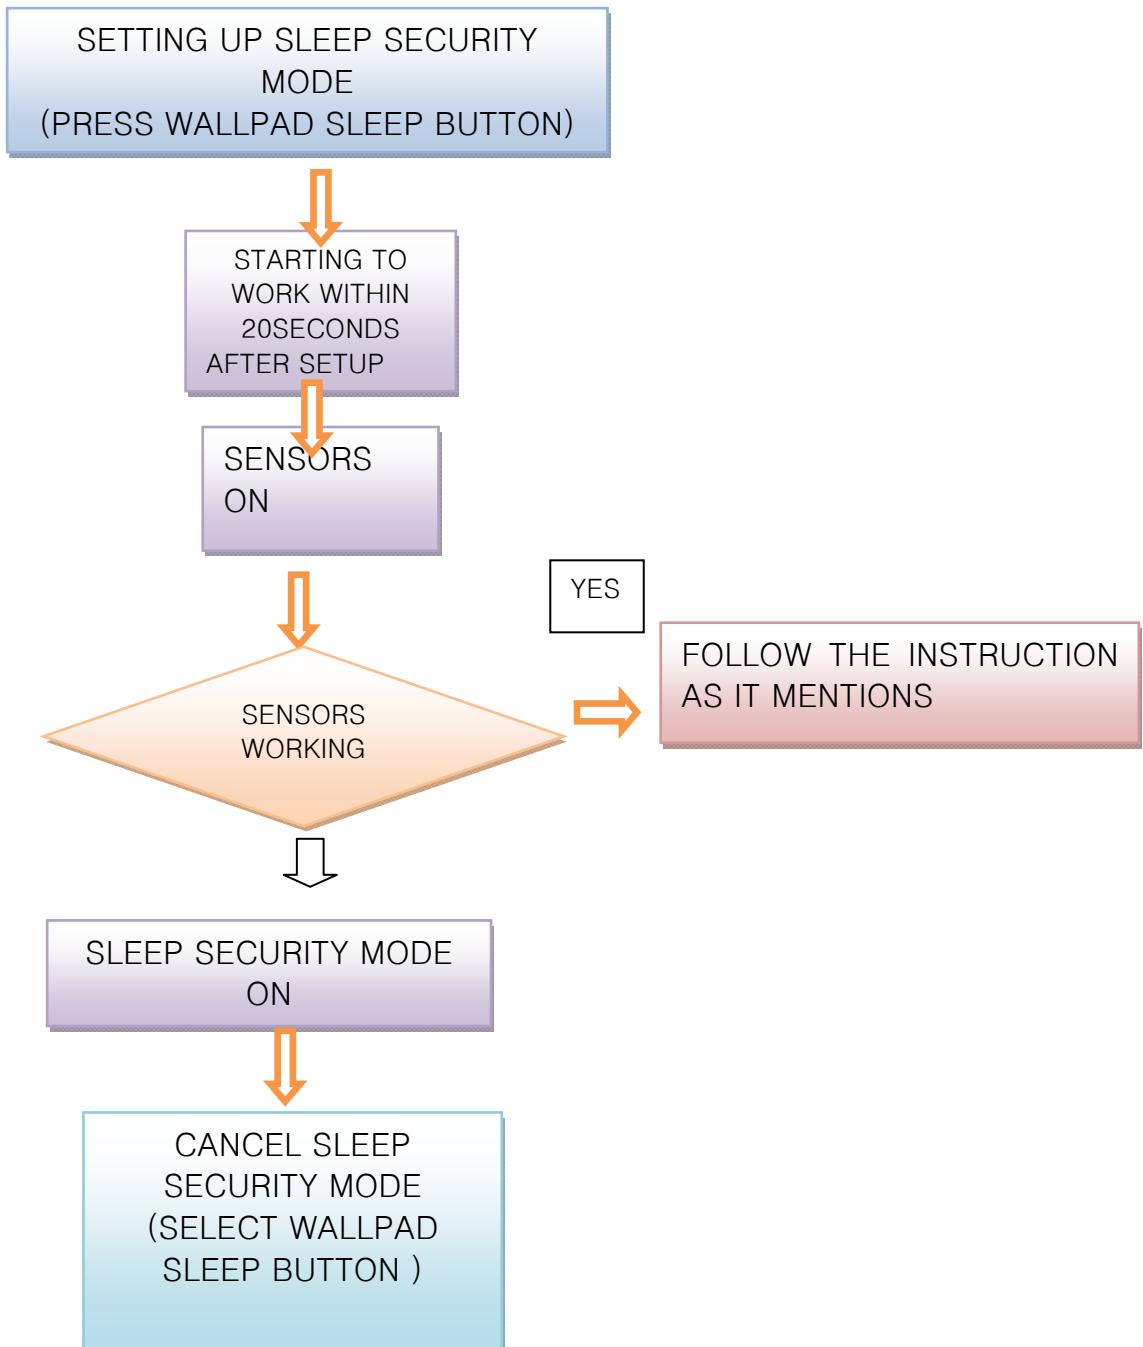

7. TROUBLE SHOOTING CHECK POINT

- 1) Internal TROUBLE
- 2) External TROUBLE

1) INTERNAL TROUBLE

CAUSE	Check-up	PLAYBACK
Wallpad doesn't work?	Adaptor plused in?	Check upAdaptor's power supply.
	Isn't it Black-out?	Try after the electricity recovered..
Can't receive the incoming call?	Is it off After 10 times bell ring?	It transfers to Wallpad autonmatically after 10 times bell ring.
	Is it on Wallpad OUTDOOR SECURITY MODE?	Cancel Wallpad OUTDOOR SECURITY MODE.
CAN'T CONTROL WITH THE REMOTE CONROL.	USING OUR REMOET CONTROL?	All control is possiable using our Wallpad reomot control only.
	Is there Batteries in?	Insert Batteries.
	Are Batteries run out of?	Change Batteries.
	Is it correct electrode?	Check up the compartment.
	Nothing happen when you contro Wallpad with Reomot Control?.	All Wallpad Control device receive Remote Control's signal with IR. Point the remote control to the right receive point of each device.
	Is it enough cover area to control?	Use the remote control in available cover area.

2) EXTERNAL TROUBLE

CAUSE	CHECK UP	PLAYBACK
CAN'T CONNECT WALLPAD?	DID PHONE CONNECT TO WALLPAD ?	CONNECT THE PHONE CABLE TO WALLPAD IN ORDER.
WALLPAD ANSWERING MACHINE DOESN'T WORK.	DID THE PHONE CABLE CONNECT TO WALLPAD CORRECTLY?	CHECK-UP THE PHONE CABLE CONNECTION TO WALLPAD.
	DID THE RECEIVER PLACE RIGHTLY?	It cannot control remote on the line. Make sure the receiver is correct.
	FAX or other auto answer machine works?	In 3 time rings on Outdoor Security mod and 10 times ring on normal mode, it connects to Wallpad. The response depends on FAX or other Auto answering machine setup, it could not work through Wallpad remote System. Try other way or Cancel FAX or other device.
	Do you use other phone line which is not National?	Use National line.
	Is it our Product?	The control is only available for our product..
Remote Control doesn't work.	Password is denied?	Insert the correct 4-12 digit password.
	You have "Wrong No/ no response" in response?	Check up each function No again.

8. System specification

■ Wallpad

Transfer mode	4 wire (direcronic)
Voltage	DC 12 – 15V
Electricity	On : 12W Off : 3W
Transmission	duplex
Screen	10.4" color vertical flat LCD
Alarm	Door : Electronic alarm (3 sounds 2 hits)
Screen Receive	90sec +- 10sec (running in response)
Transmission distance	0.65m/m , 50m with Cable
SafeTemperature	0°C~40°C
Dimension	350(W) X 220(H) X 30(D)mm

■ DOOR PHONE

INSTALLATION	BUILT IN TYPE/ OUTLET TYPE
Transfer mode	4 wire (direcronic)
Voltage	DC 12 (WALLPAD SUPPLY)
Transmission	DUPLEX SYSTEM
CMOS	COLOR CCD (1/3")
FREQUENCY	HORIZONTAL : 15.75KHz VERTICAL : 60Hz
CAPTURE ANGLE	HORIZONTAL : 68° VERTICAL : 55°
ANGLE MODE	UP : 15° , DOWN : 15°
Illumiation	0LUX
SafeTemperature	-10°C~40°C
Dimension	90(W)X140(H)X42(D)

9. QUALITY ASSURANCE

WARRANTY CARD

COMMODITY	WIRELESS HOME NETWORK CONTROL SYSTEM
MODEL	BDH-1002
PRODUCTION DATE	
SERIAL NO.	
WARRANTY PERIOD	12 MONTH FROM PURCHASE DATE
DATE OF PURCHASE	

This equipment has been tested by Certificaged Authority.

Warranty coverages is subject to the country where the unit purchased. Please read all warranty information carefully.

Limited Warranty

1. Repairs, Refund, Change policy follows Recgulation of Consumer Damage Compensation by the Ministry of Finace and Economy. Use of parts or supplies are available for 3 years after finish the model production.
2. Under costs are as follow.
 - 1) Out of date from Limited Warranty
 - 2) Damage to the product by User's mishandling.
 - 3) Damage to the product by a natural disaster

Customer Service

In order to obtain warranty service, contact the authorized retail dealer from whom you purchased this product.

Retail dealer:

Customer Service : TEL – 031-911-xxxx / E-mail :

Blue Dream Tech Inc.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.