

# Orbeez® RC Ladybug Scooper™

Instructions  
Adult Assembly Required

WORKS ON SMOOTH FLOORING OR LOW PILE CARPET.

## 1 WING ASSEMBLY

Press both wings into slots until it clicks.



## 2 INSTALLING OR REPLACING BATTERIES

CAUTION: BATTERIES MUST BE INSTALLED BY AN ADULT ONLY. 4 AA BATTERIES REQUIRED FOR LADYBUG SCOOPER. ONE 9V BATTERY REQUIRED FOR LADYBUG CONTROLLER. NOT INCLUDED.


Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries.

Remove and discard exhausted batteries properly as soon as possible.

Remove all batteries from compartment if toy is not used for a long period (several months).


The supply terminals are not to be short-circuited.

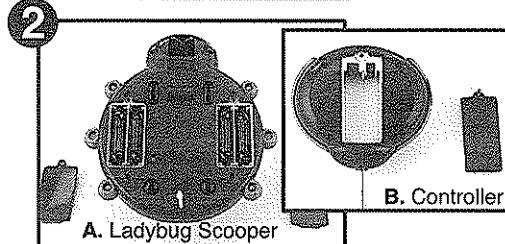

### How to Install and Replace Batteries.

A. Locate two battery compartments on underside of Ladybug. Unscrew battery cover using small Phillip's head screwdriver. Insert two AA batteries into each compartment, observing correct polarity (+/-). Replace the battery cover and tighten the screw.

B. Unscrew battery cover from underside of Ladybug controller. Insert one 9V battery observing correct polarity (+/-). Replace the battery cover and tighten the screw.

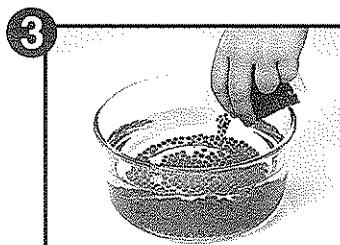

## 3 GROW YOUR ORBEEZ®

You will need:

A bowl

Strainer


1 cup of clear, filtered water for each packet of Orbeez®

1 packet Orbeez®

1 pinch salt (Tip: a pinch of salt will make your Orbeez® grow smaller but will keep them fresh for longer)


Sprinkle Orbeez® into a bowl and add a cup of water and small pinch of salt. You can grow as many packets as you want. Add one cup of water per packet. Each packet will produce between half to one cup of grown Orbeez®. The purer the water the larger they grow.

Leave Orbeez® to soak in water for at least 4 hours, or overnight, until they reach full size. Remove grown Orbeez® from water—a strainer works best. Orbeez® will keep their shape for weeks or even months if kept in a closed container away from the sun. If they shrink, simply add more water to rehydrate.

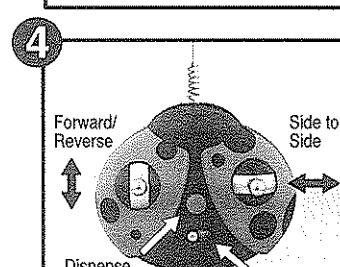


## 4 PLAY

Turn switch on remote to "on" position. Turn switch on underside of Ladybug to "on" position. Move left toggle forward and backward to move ladybug forward or reverse. Move right toggle on remote right or left and move left toggle forward and backward at the same time to move ladybug side to side (see picture #4). Scatter Orbeez® over a clean floor surface. As you drive the ladybug over the Orbeez®, the Ladybug will collect the Orbeez® through its mouth. You can press the small pink button in center of remote to dispense the Orbeez®.

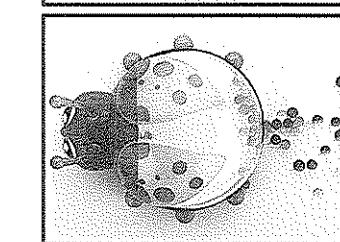

## 5 TO CLEAN

To remove clear shell for cleaning, simply lift and remove. To attach shell, align tab at back with notch and insert under the wings. Remove Orbeez® from Ladybug when not in use and store them in clean, closed container.

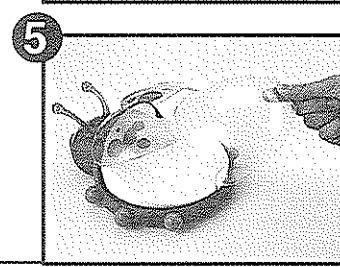

### Safety and Disposal Instructions


Contains copolymer of sodium acrylic acid (Acrylic acid, sodium hydroxide and water) and color pigmentation.

Dispose of Orbeez® in trash or work into garden soil. Because Orbeez® give off water when it is dry, they can be used to hydrate soil and conserve water usage. Do not throw Orbeez® in sink, garbage disposal or drain. Orbeez® are slippery—remove spilled Orbeez® from floor.

© 2012 The Maya Group, Inc. "Orbeez," "Soak 'em Squish 'em...Show 'em," "Lights. Movement. Magic," "Magically Grows in Water," "Orbeez RC Ladybug Scooper," are trademarks of The Maya Group, Inc. All rights reserved. Conforms to Safety Standards ASTM F963. Non-toxic. Do not eat Orbeez® or place in mouth. Do not insert Orbeez® into nose and ears. If a substantial number of Orbeez® are swallowed, or any Orbeez are inserted into nose or ears, seek immediate medical attention. Bring this booklet and some Orbeez® with you. Not suitable for children under the age of five. Please remove all packaging material before giving to children. Product and colors may vary. Please retain this information for future reference. The Maya Group, Inc., 19823 Hamilton Ave., Torrance, CA 90502. Customer Service: 1-800-843-6292 or 424-266-6263. [www.orbeezzone.com](http://www.orbeezzone.com) Item #47180 Made in Zhongshan, Guangdong, China.

**CAUTION:**  
DO NOT EAT ORBEEZ.

**WARNING:**  
CHOKING HAZARD - Small Parts & Small Balls. Not for children under 3 years.

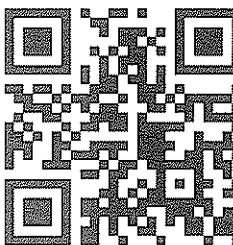

MAYA  
GROUP™

## FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesires operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please keep this packaging for future reference