

## User Manual

### User Manual for FPV24V1

*Congratulations on purchasing the FPV24V1.*

*To use the device.*

1. *Connect the FPV24V1 to your camera using the white plug. (The small moulded white square faces downward).*
2. *Connect a 2 cell or 3 cell LiPo battery to the red JST plug. Be careful to observe correct polarity – never force the plug! (The device will function perfectly with any d.c. source providing between 6 and 14 volts).*

*Changing channels.*

*The device is supplied with the channel randomly pre-set to one of the four available channels: 2414 MHz, 2432 MHz, 2450 MHz, 2468 MHz.*

*If you wish to change the channel of your transmitter, for instance if you are on the same channel as another user at your flying field, you can reveal the channel dip switch by carefully cutting the heat shrink where it is marked with a blue square under the letters CHN.*

*The channels are numbered from the left. Move the switch labelled with the desired channel to the up position. (Please note: If more than one switch is in the up position you will get the channel of the furthest left 'up' position switch).*

**This device complies with Part 15 of the FCC Rules**

**Operation is subject to the following two conditions:**

- (1) **This device may not cause harmful interference and**
- (2) **This device must accept any interference received, including interference that may cause undesired operation.**

**Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.**