

此页只是文件说明, 不做印刷用!

文件名 File Name	22PHZ014-IM-V1.1	版次 Revision	V1.1
机型 Project#	MDT1008-MR	比例 Scale	1:1
客户/品牌 Customer	CTIS	公差 Tolerance	±3mm
尺寸+P数 Size	100*135mm, 20P	设计 Designer	陈慧虹
材质 Material	80g双胶纸	审核 Checked	黄春花
工艺 technique	单黑印刷, 骑马钉	设计日期 Design Date	2022.5.17
注释: Remarks:	描述 Description 封面背后不留空白页, 封底为空白页		

PROSCAN

ELITE

PELTDV1029



USER'S MANUAL




PROSCAN™ IS A REGISTERED TRADEMARK OF TECHNICOLOR USA INC, AND USED UNDER LICENSE.

## Table Of Contents

Safety Precaution	01
Package	04
Main Features	04
Overview	05
Charge the Battery	06
Start the device	06
DVD Playback	08
Camera Function	10
Wi-Fi Connection	11
Mirror Cast Connection	12
Text Input	13
Transfer files between tablet and PC	13
Battery Use	14
Specifications	15
Trouble shooting	15
LIMITED PRODUCT WARRANTY	17

## Safety Precaution

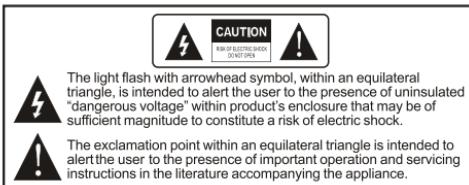

Caution---use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.**

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use or leave the device in direct sunlight or a hot environment such as a vehicle etc. Overheating can damage the device.
- 3) There's a rechargeable battery built inside the device. If the device is not used for long, it may occur no charging indication when power up. Under this circumstance, please keep power connected and wait for about 5~10 minutes. You're advised to charge the battery every 3 months to keep the device in good condition.
- 4) Do not overcharge the device, do not leave the device on the charger for very long after the battery has been fully charged.
- 5) Device should be protected from any physical impact or damage and care should be taken not to drop the device.
- 6) Only use the factory supplied charger. The use of unapproved charger or cable may cause the battery to fail, explode and/or damage the device.
- 7) Do not disassemble, puncture, crush or expose your device to temperatures above 40 °C / 104 °F.
- 8) Keep your device away from fire or water.
- 9) Keep your device from moisture and extreme temperatures.
- 10) Should your battery swell or expand, please immediately discontinue use of your device. A probable cause is it having been overheated at some point or overcharged. Please contact us for support.

- 11) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 12) Unplug this unit during lightning storms or when unused for long time.
- 13) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 14) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the device by yourself because of the danger of high voltage and electric shock.
- 15) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.
- 16) This device is not compatible with Blue-ray disc while playing DVD.
- 17) BD type disc not supported.
- 18) While playing DVD, in wireless connection, there's a slight audio lag less than 5 seconds. This is normal and design related.
- 19) It is recommended that volume level of your earphones should be adjusted to an appropriate level to avoid damages to your hearings due to high volume. (earphone not included)
- 20) Do not cut off the power abruptly during software update, software download, or during this device is in operation, to avoid data loss and system error.
- 21) Wi-Fi connection could be affected by related wireless equipments and networks in each specific location and situation, please try with patience.
- 22) Any wireless equipment will influence the flight of an airplane, please consult the airline company if you want to use this device on the airplane.
- 23) For data safety, please back up important data on a timely manner.

\* As constant improvement, UI display may vary slightly.



This product is not a toy.  
To use only under adult supervision.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure cond.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- .. Reorient or relocate the receiving antenna.
- .. Increase the separation between the equipment and receiver.
- .. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- .. Consult the dealer or an experienced radio/TV technician for help.


## Package

DVD Player with tablet combo	1
Car adapter	1
AC/DC adapter	1
USB cable	1
User manual	1

## Main Features

- \* 10.1" panel of 800X1280 resolution
- \* Built-in rechargeable Lithium-ion battery
- \* Built-in two HIFI speakers
- \* Support playback DVD/VCD/CD/MP3
- Note:This unit is NOT compatible with Blu-ray.
- \* Android™ 11 (Go edition), Quad core MT8168, Arm Cortex-A53 @2.0GHZ,Wi-Fi: 802.11b/g/n
- \* Built-in internal memory of 32GB
- \* Support Wireless connection (Tablet mode)
- \* Touch control functions
- \* Stand on back plate
- \* 2MP front camera

## Overview

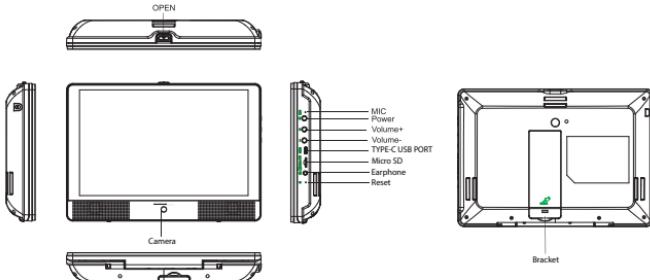

**OPEN(▼):** Press it to open the unit and put the disc on the loading tray.

**MIC:** To record if recording function turned on.

**Power button** ⌂

Long press ⌂ 2-3 seconds, screen will light up and pictures will show up until the interface page.

Long press ⌂ 2-3 seconds, it will show Power off, Restart, Screenshot, choose Power off to turn off the unit; choose Restart to restart the unit; choose Screenshot to make a screenshot.

**Volume +/-**

Press +/- to adjust volume.

**TYPE-C USB port:** For both power supply input and connecting with PC(For the latter, after connecting the USB cable with PC, select Settings-> Connected Devices->USB ->Use USB for File Transfer.)

**Micro SD(Micro SD slot):** to insert a micro SD per instruction.

**Earphone jack:** To connect external earphone.

**Reset:** To restart the system if abnormal situation happens and the device can't be turned off. Use a thin object (like the end of a paper clip) to press Reset, the device will be reset and the device turns off. Then press ⌂ 2-3 seconds to restart.

**Camera:** 2 Million pixel, for camera use.

**Bracket:** Pull it out to put the device on the table.

## Basic Operation


### 1. Charge the battery

Note: Charge the device before using it the first time

- Connect the USB cable to the device.
- Connect the other end of the USB cable to the USB power adapter (wall charger), then plug the adapter into a power outlet. It takes about 5 hours to fully charge the device.

Caution: Use only the included power adapter to charge the battery.

An incompatible adapter may cause damage.

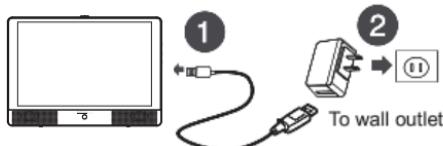

### 2. Start the device

- After connecting the power adapter, screen will light up and show battery charging icon for about 5 seconds, then screen will turn off, press power button once, the unit will light up again. If screen does not light up, please charge and wait for about 5 minutes. If still no response, please call after sales service for help.



- Keep pressing power button for 2-3 seconds, screen will light up, the first boot will take about 5-10 minutes, please be patient.
- After boot, Android user wizard will appear, you are required to do some setup, or you can skip it.

d) Turn on the device, you will see the main page which has a lot of app icons. or swipe up to go to app page where all the pre-installed apps can be found.



No matter what you're looking for, Google Play has it all. Get your music, movies, TV, books, magazines, apps and games all in one place.

e) Function buttons at the bottom of the interface.



✿ : Touch it to enter Walmart App.

◀ : Touch it to back to last step or quit the current app.

● : Touch it to go to the main page at once.

■ : Touch it to show recent app list.

If you want to close recent apps, touch  to show recent items, wipe it up to close the corresponding item. If you want to close all recent used items, please slide right, "CLEAR ALL" will show up at the left, then touch it, the system will close all recent items.



#### **Important Notes:**

A lot of apps will take up memory space and slow down the speed, worsen your experience. To clear app trash and junk files frequently will help to keep your device agile and running smoothly.

### **3. DVD Playback**

You can playback movies with this device, but please note, Blu-ray disc is not compatible.

- a) Touch DVD icon  on the main page or choose it from the app list.



- b) Press Open button () on the top of the unit, open the device and load a disc.  
After close the unit, the disc will start loading and you can choose to play.
- c) During the playback, you can touch any part of the screen, then function buttons will show at the bottom. Swipe left, more buttons will show.



Exit	Exit DVD mode
◀◀	Select to go to previous chapter or track during playing.
◀◀◀◀	Select to playback fast backward at 2,4,8,16 or 32 times
▶▶	Select to Play/Pause
▶▶▶▶	Select to playback fast forward at 2,4,8,16 or 32 times
▶▶	Select to go to next chapter or track during playing.
■	Select once to stop playback, then press ▶▶ to resume playback from the point where you stopped; press ■ twice to stop playback completely.
□	Select to repeat the current title,chapter,or all.
↑↓←→	Select ARROWS to move cursors to different item; select "OK" to confirm.
A-B	Select to repeat a specific portion from point A to B, press it again to cancel repeat playing.
MENU	Select once to open the DVD menu. This option works only if the DVD has a menu.
Title	Select to display the DVD title information. Press TITLE, CHAPTER or Time on the top bar, a figure table will show, press the corresponding number you want to choose.
...	Select to turn subtitles on and off, or select to choose the subtitle language. This option works only if the DVD has subtitles.
♪	Select to choose the DVD audio languages. This option works only if the DVD has multiple audio languages.
◀▶	Select to choose the DVD multi angles. This option works only if the DVD has multiple angles.

#### 4. Camera function

 
This device has a front camera, located at the bottom of the screen. The camera is 0.3Million pixels, for basic use only.



- a) Touch  on the app page to activate camera function.
- b) Select "Picture" to take pictures and select "Video" to take videos.



- c) Select  at the lower left corner to enter the parameter settings.
- d) Press  to take pictures, and press  to record a video, press  to pause, press  to stop and save.
- e) Also, you can easily find & manage your photos on your device with the **Gallery Go** app.




## 5. Wi-Fi connection



a) Touch Settings icon  on the app list page, select Network&internet, slide the switch to the right to activate Wi-Fi connection.




b) Press Wi-Fi to enter the Wi-Fi page, the tablet will scan for available Wi-Fi networks within range.

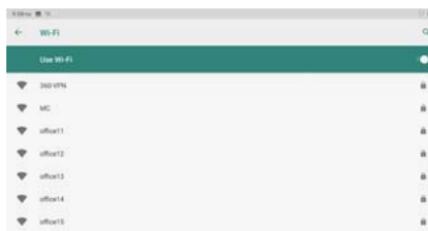

c)Select the Wi-Fi you want to connect, enter the password, once you have successfully entered your information, the tablet will remember your settings.


## 6. Mirror cast connection

- a) Only to output signal to external device under this feature.
- b) Make sure both the unit and the external device to be connected by same Wi-Fi or same hotspot.
- c) Then turn on Mirror Cast connection from the external device.
- d) Mirror Cast connection setting unit is as below:  
Settings -->Connected devices--> Connection preferences-->Cast -->Tap the icon( ) on top right corner to Enable wireless display--> You can find the external device name-->Click the external device name--> The external device will show connection info "DECLINE" or "ACCEPT"-->Click "ACCEPT" to connect.

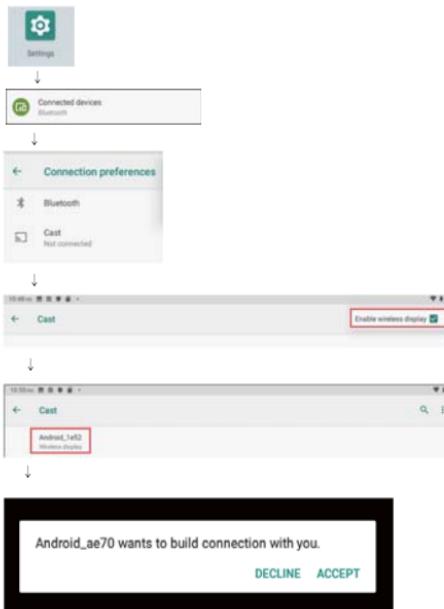

## 7. Text Input

When use the tablet, you can use the virtual keyboard to enter text, number, symbols directly by touching screen. After selecting the Android input method, the default keyboard show as below:

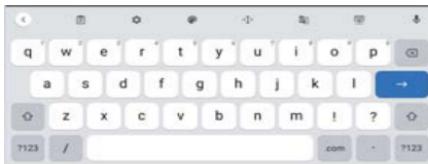

Press **123** to input numbers and letters and change letters in capital or small type by pressing **↑**

## 8. Transfer files between a tablet and PC

- Connect the tablet with a PC by the USB cable supplied.
- Select Settings → Connected devices → USB → Use USB for File Transfer



- You can locate the tablet on your PC as a removable disk.

## 9. Battery Use

This device utilizes long-life Lithium-ion battery for portable power supply.

The battery has no memory effect and thus can be recharged safely regardless whether it's fully or partially discharged. It's enough to recharge no longer than 5 hours each time. Fully recharged battery can last up to 3 hours for dvd play and up to 6hour for wifi surfing (when system brightness and volume set at medium). When press (power button), there will be charging status shown on the screen while the device is charging in shutdown state.

### Note:

\*As soon as low power indicated on screen while operating, please recharge the battery immediately to avoid inconvenience of sudden shutdown.

\*Please regularly charge battery should the device not use for long to keep battery in good condition.

\*Using and Maintaining rechargeable battery



The normal working temperature is: 0°C~ 40°C

Always unplug AC/DC adapter from the device when not in use.

It'll get warm and hot when continue to play, it's normal, while avoid long time playing unattended.

\*Avoid colliding with other objects, and place away from possible heat source and humidity environment.

## Removal Of Waste Battery

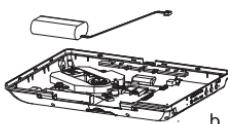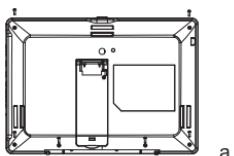

Before to discard EOL unit, please remove the waste battery by below steps:  
a. Pull out the screws on the bottom cover by the screwdriver to unpack the unit.

b. Remove the battery socket from the board.

## 10. Specifications

Dimensions	9.9**7**1.46" (25.12*17.76*3.72cm)
Net Weight	Approx 1.88lb (0.85kg)
LCD	10.1" 800X1280
OS	Android 11(Go edition)
Processor	2.0GHz Quad Core
Memory	2GB DDR RAM, 32GB internal memory
Wi-Fi	802.11b/g/n
Disc support	DVD/VCD/CD/MP3(no blue-ray disc)
Connections	USB Type-C, Micro-SD(up to 32GB), Earphone jack
Battery	3.7V 5000mAh 18650 Li-ion battery
Battery playback	Up to 3h with DVD(default setting and test with earbud on) Up to 6h with wifi(default setting and test with earbud on)
Operating temperature	Between 0°C and 40°C

## 11. Trouble shooting

PROBLEM	SOLUTION
No sound or distorted sound	Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range.
Picture is distorted	The disc might be damaged. Try another disc; It is normal for some distortion to appear during forward or reverse scan.

No forward or reverse scan	Some discs have sections that prohibit rapid scanning or chapter skip; If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.
Display shows- "No disc" after inserting DVD	<ol style="list-style-type: none"> <li>1. Check to see if you may have inserted a blank disc.</li> <li>2. Remove disc and check to ensure that disc is clean and not scratched.</li> <li>3. Check to see if you may have inserted a disc that has not yet been finalized.</li> <li>4. Check to see if you may have inserted the disc correctly; please remove and try to insert disc correctly.</li> <li>5. Try to play the original DVD disc, please note that improperly burned discs cannot be recognized.</li> <li>6. Use a lens cleaning disc or gently wipe the laser pickup lens with dry microfiber cloth.</li> </ol>
Not reading disc	<ol style="list-style-type: none"> <li>1. Do not play Blue-ray disc.</li> <li>2. Play only with proper discs in good condition, clean and no scratch.</li> <li>3. Do not touch the loader pick-up.</li> </ol>
Wi-Fi cannot be connected	Make sure Wi-Fi is set on; Make sure the Wi-Fi signal is strong enough.
"Safe Mode" appears at left bottom side	Keep pressing  , press "Restart" to restart the unit, it will get back to normal.
Cannot turn on	Charge the device until battery is full for first time use; For device not used for long, please charge about 5~10 minutes first, charging icon will appear.
Chinese characters displayed when turning on	It's caused by mis-operation. Please keep pressing  , until system auto re-start.



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic equipment Directive)

• Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

Google, Android, Google Play and other marks are trademarks of Google LLC.

# LIMITED PRODUCT WARRANTY

To make a warranty claim, please email [support@curtiscs.com](mailto:support@curtiscs.com) or call 1-800-968-9853.

## **90 day Warranty**

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

For service assistance and product information  
please call: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3  
[www.curtsint.com](http://www.curtsint.com)

Walmart Inc. Bentonville, AR 72716 [Walmart.com](http://Walmart.com)

**ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED  
TO OBTAIN WARRANTY SERVICE.**

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.